




Some services and apps may not be available in all countries. Please ask instore for details.

Facebook is a trademark of Facebook, Inc.
Google, Android, YouTube and other marks are trademarks of Google, Inc.

© Vodafone Group 2013. Vodafone and the Vodafone logos are trade marks of Vodafone Group.
Any product or company names mentioned herein may be the trade marks of their respective owners.

English - CJB26POVDAAB

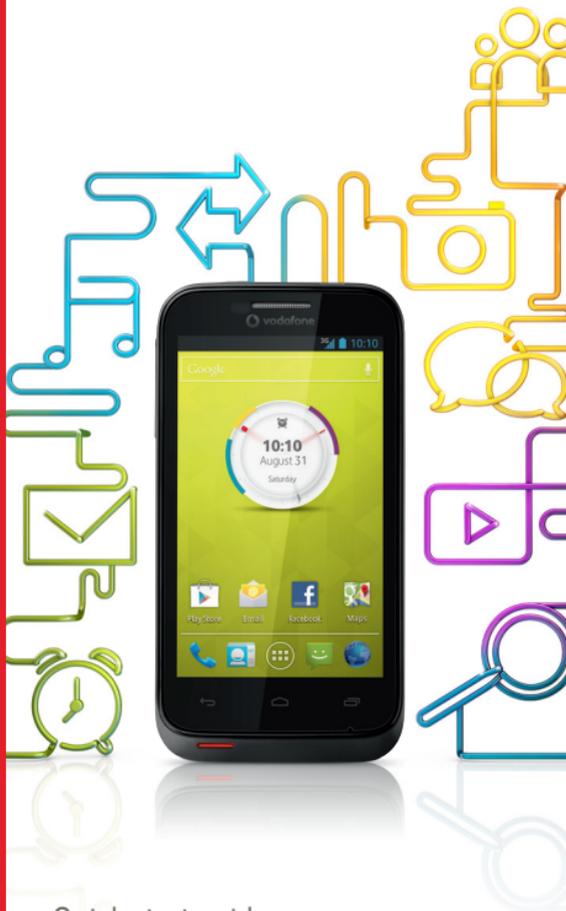




Quick start guide
Vodafone Smart III

vodafone

For more information about how to use the phone, please go to www.vodafone.com/smart3 to download full user manual. At this website you can also view the FAQs, check for software updates, and more.

1 Your mobile

1.1 Keys and connectors

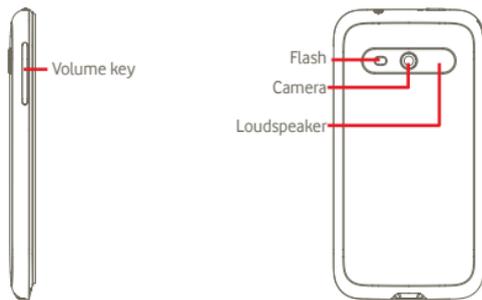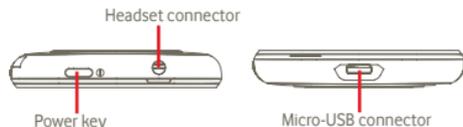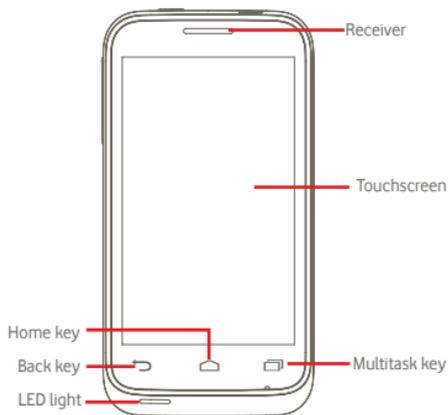

Back key

- Go back to the previous menu or screen.



Multitask key

- On the Home screen, press quickly to show all running tasks.
- Quick menu: pressing and holding the Multitask key can bring up a quick menu for settings and managing apps. To enable this, go to **Settings > Display > Menu appearance** and select .



Home key

- Return to the Home screen or back to the central Home screen if it is extended.
- Long press the Home key to access "Google Now" and "Voice Search".



Power key

- Short press: Lock the screen
Light up the screen
- Long press: When phone is off, power on the phone.
When phone is on, enter Phone options: Power off, Restart, Airplane mode.



Volume key

- Press to adjust the Volume (in call/media playing mode)
- Press to adjust the ring tone volume in general mode.


1.2 Getting started

1.2.1 Set-up

Removing or installing the back cover



If you have Vodafone 975, you can insert one of the supplied graphic sheet under the translucent cover before closing it. You can also use the template provided to make your own graphics.

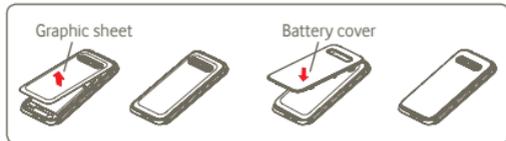

Inserting or removing the SIM card

You must insert your SIM card to make phone calls. Please power off your phone and remove the battery before inserting or removing the SIM card.



Place the SIM card with the chip facing downwards and slide it into its housing. Make sure that it is correctly inserted. To remove the card, press and slide it out.

Installing or removing the battery



- Insert and click the battery into place, then close the phone cover.
- Unclip the cover, then remove the battery.

Installing and removing the microSD card



To release the microSD card holder, slide it in the direction of the arrow and lift it. Then insert the microSD card with the golden contact downward. Finally, fold down the microSD holder and slide it in the opposite direction to lock it.

Charging the battery



Connect the battery charger to your phone and mains socket respectively.



To reduce energy wastage, disconnect your charger from the plug when the battery is fully charged.

To reduce your phone's power consumption switch off Wi-Fi, GPS, Bluetooth or applications running in the background when not needed. You can also reduce the backlight brightness, and shorten the time before the phone goes into sleep mode.

1.2.2 Power on your phone

Hold down the Power key until the phone turns on. It will take some seconds before the screen lights up.

Set up your phone for the first time

The first time you power on the phone, you are asked to touch "Location consent" to begin. And then do below settings: Language, Mobile data, Set up Google account and Data & time⁽¹⁾.

If you don't have a SIM card inserted you can still connect to a Wi-Fi network from the Power on screen, which will let you sign on to your Google account and use some features.

1.2.3 Power off your phone

Hold down the Power key until the phone options appear. Tap **Power off**, then tap **OK**.

1.2.4 Sleep mode

After a set time, your phone will go into a sleep mode to save power. You can also press the Power key once to send the phone to sleep mode.

To wake your phone from sleep mode, just press the Power key.

1.2.5 Lock/Unlock the screen

When you wake your phone from sleep mode you'll see a Lock screen, which prevents accidental key presses.

To unlock the screen, touch and slide the  to the right. You can also slide it in other directions to perform other actions, such as search or starting the camera.

You can change the type of lock screen so that it unlocks with a password or by drawing a pattern by pressing and holding the Multitask key  and touching **System settings > Security > Set up screen lock > PIN or Password or Slide**.

1.3 Home screen

You can bring all the items (applications, shortcuts, folders and widgets) you love or use most frequently to your Home screen for quick access. Press the Home key to switch to the Home screen.



The Home screen extends on either side of the screen to allow more space for adding applications, shortcuts etc. Slide the Home screen horizontally left and right to get a complete view of the Home screen.

⁽¹⁾ Application availability depends on country and operator.

1.3.1 Using the touchscreen

Touch

To access an application, touch it with your finger.

Touch and Hold

Touch and hold your finger on the screen for 2 or more seconds. You can touch and hold an application, a widget or a blank area to drag the item or display the corresponding option menus.

Drag

Place your finger on the screen to drag an object to another location.

Slide/Swipe

Slide the screen to scroll up and down applications, images, web pages...

Flick

Similar to swiping, but flicking makes it move quicker.

Pinch/Spread

Place your fingers of one hand on the screen surface and draw them apart or together to scale an element on the screen.

Rotate

Automatically change the screen orientation from portrait to landscape by turning the phone sideways.

1.3.2 Status bar

From the Status bar, you can view both phone status (on the right side) and notification information (on the left side).

Status icons

	GPRS connected		GPS is on
	GPRS in use		Receiving location data from GPS
	EDGE connected		Roaming
	EDGE in use		No signal
	3G connected		No SIM card installed
	3G in use		Vibrate mode
	HSPA (3G+) connected		Ringer is silenced
	HSPA (3G+) in use		Phone microphone is muted
	Connected to a Wi-Fi network		Battery is very low
	Bluetooth is on		Battery is low
	Connected to a Bluetooth device		Battery is partially drained
	Airplane mode		Battery is full
	Alarm is set		Battery is charging
	Signal strength		Headset connected
	NFC is on ⁽¹⁾		


⁽¹⁾ Vodafone 975N only.

Notification icons

	New Gmail™ message		Both USB tethering and portable hotspot are on
	New text or multimedia message		Call in progress
	Problem with text or multimedia message delivery		Call in progress using Bluetooth headset
	New Google Talk™ message		Missed call
	New voicemail		Call on hold
	Upcoming event		Call forwarding is on
	Data is synchronising		Uploading data
	Problem with sign-in or synchronisation		Downloading data
	microSD card is full		Download finished
	No microSD card installed		An open Wi-Fi network is available
	Connected to VPN		Phone is connected via USB cable
	Disconnected from VPN		Radio is on
	Song is playing		System update available
	USB tethering is on		Portable Wi-Fi hotspot is on

Notification panel

Touch and drag down the Status bar to open the Notification panel. Touch and drag up to close it. From the Notification panel, you can open items and other reminders indicated by notification icons or view wireless service information.

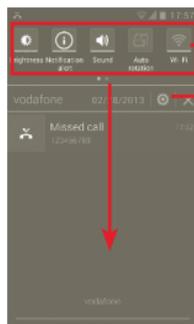


Widget bar: swipe left to see more widgets. Touch an icon to change its function.

Settings

Touch  to clear all event-based notifications (other ongoing notifications will remain).

1.3.3 Search bar

The phone provides a Search bar on the main Home screen which can be used to locate information within applications, the phone or the web.

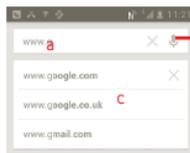

- a Touch or press the keypads to search by text
- b Touch to search by voice
- c Touch to enter the suggested text for quick search
- d Touch to search the web



1.3.4 Personalize your home screen

Add

You can add shortcuts, widgets or folders to the Home screen by pressing the  key. Touch and hold the item you want to add and then release it. You will see it in current home screen.

Reposition

Touch and hold the item to be repositioned to activate the Move mode: drag the item to desired position, then release. Hold the icon on the left or right edge of the screen to drag the item to another Home screen page.

Remove

Touch and hold the item to be removed to activate the Move mode: drag the item to the top of  which will then turn red, and release.

Wallpaper customization

Touch and hold an empty area on the Home screen or press and hold the Multitask key  in the Home screen, then select **System settings/Display/Wallpaper** to customise wallpaper.

1.3.5 Application tab

Touch  from the Home screen to enter the applications list.

To return to the Home screen, press the Home key.

View Default/Most used/Recently installed applications

To view your Default/Most used/Recently installed applications, press the  option icon at the top of the applications list and choose your option.



1.3.6 Volume adjustment

You can set ringer, media and phone ringtone volume to your preference using the **Volume up/down** key, or in the **Settings** menu.

1.4 Applications list

The Applications list contains all pre-embedded and newly installed applications.

To access the Applications list, touch the Application tab from the Home screen. To return to the Home screen, press the Home key.

2 Text input

2.1 Using the onscreen keyboard

An onscreen keyboard will display automatically when a program requires you to enter text or numbers.


Onscreen keyboard settings

Press and hold the Multitask key  in the Home screen, then select **System settings > Language & input > Google voice typing (or Android keyboard)** to see the various keyboard settings. Scroll to select the keyboard style you want to change keyboard style.

Adjust the onscreen keyboard orientation

Turn the phone sideways or upright to adjust the onscreen keyboard orientation. You can also adjust it by settings (press the Application tab key in the Home screen, then **Settings > Display**).

2.1.1 Android keyboard

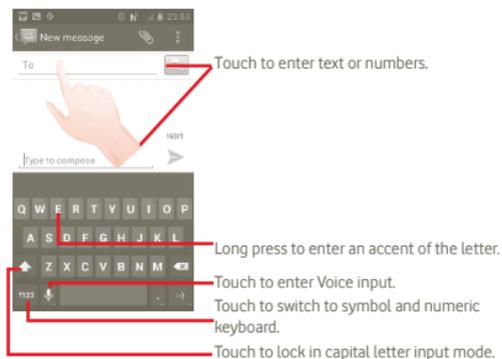

2.2 Text editing

You can edit the text you have entered.

- Touch and hold text you have entered.
For large group words, you may touch and hold the beginning word and move the end points to the place which you want.
- An options list pops up.
- Select the operation you need (**Paste, Replace, Cut**, etc.)


3 Phone call



3.1 Placing a call

You can easily launch a call using **Phone**. Enter this menu using one of the following two ways:

- Touch from the Home screen.
- Touch the Application tab from the Home screen and select **Phone**.

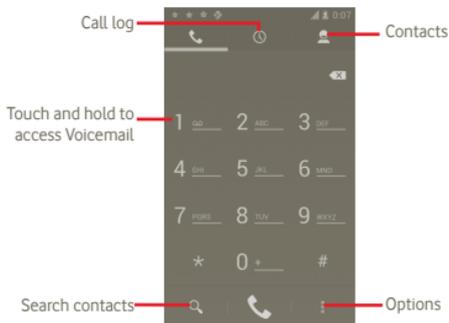

Enter the desired number from the keyboard directly or select a contact from **Contacts**, **Call log** by touching tabs, then touch to place the call. The number you entered can be saved to **Contacts** by pressing the key and touching **Add to Contacts**.

If you make a mistake, you can delete the incorrect digits by touching .

To hang up a call, press .

3.2 Answering or rejecting a call



When you receive an incoming call, slide the green phone icon to answer. Hang up the call by pressing the  icon.

When you receive an incoming call but don't want to answer, you can reject it by dragging  up to select messages. The caller is sent directly to your voicemail box to leave a message.

3.3 Consulting your call memory

You can access your call memory by touching the  from the Home screen and touching  to view call history in categories of **Missed calls**, **Outgoing calls**, and **Incoming calls**.

4 People



You can view and create contacts on your phone and synchronise these with your Gmail contacts or other applications on the web or on your phone.



When using **People** for the first time you are asked to add new contacts, import contacts from the SIM card or synchronise contacts from other application accounts to phone.

4.1 Adding a contact

Touch the Application tab on the Home screen, select **People**. You may select Groups and Favourites to manage your contacts. Press  to add a contact.

4.2 Importing , exporting and sharing contacts

From the Contacts screen, press the  icon to open the contacts list option menu, touch **Import/Export**, then select SIM card, **Phone**, **Internal storage**, **SD card**.

- To import/export a single contact from/to the SIM card, touch the contact you want to import/export, then press  to confirm.
- To import/export all contacts from/to the SIM card, press  and touch  to confirm.

You can share a single contact or contacts with others by sending the contact's vCard to them via Bluetooth, MMS, Email, etc.

Touch a contact you want to share, press the Menu key and touch **Share** from the contact details screen, then select the application to perform this action.

4.3 Synchronizing contacts in multiple accounts

Contacts, data or other information can be synchronised from multiple accounts, depending on the applications installed on your phone.

5 Messaging



You can create, edit and receive SMS and MMS messages with this mobile phone.


To access this feature, touch the Application tab from the Home screen, then select **Messaging**.



All messages you receive or send out can only be saved in phone memory. To view messages stored on the SIM card, press the  icon in the Messaging screen, then touch **Settings** > **Manage SIM messages**.

5.1 Write a message

On the message list screen, touch  to write text/multimedia messages.

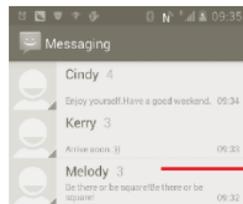

Touch to view the whole message thread



Touch to create a new message

Sending a text message

Enter the mobile number of the recipient on the **To** bar or touch  to add recipients, then touch **Type to compose** bar to enter the text of the message. When finished, touch  to send the text message.



An SMS of more than 160 characters will be charged as several SMS messages. Specific letters (like accents) will also increase the size of the SMS, so this may cause multiple SMS messages to be sent to your recipient.

Sending a multimedia message

MMS enables you to send video clips, images, photos, animations, slides and sounds to other compatible mobiles and e-mail addresses.

An SMS will be converted to MMS automatically when media files (image, video, audio, slides, etc.) are attached or Subject or email addresses added.



6 Email

Besides your Gmail account, you can also set-up external POP3 or IMAP email accounts on your phone.

To access this function, touch the Application tab from the Home screen, then select **Email**.

An email wizard will guide you through the steps to set-up an email account.

- Enter the email address and password of the account you want to set-up.
- Touch **Next**. If the account you entered is not provided by your service provider in the phone, you will be prompted to go to the email account settings screen to enter settings manually. Or you can touch **Manual setup** to directly enter the incoming and outgoing settings for the email account you are setting up.
- Enter the account name and display name in outgoing emails.
- Touch **Done**.
- To add another email account, you can touch  and press "**Settings**", touch **Add account**.

To create and send emails

- Press the  icon in the Inbox screen, and touch **Compose**.
- Enter the recipient(s)'s email address in the **To** field, and if necessary, press the  key and touch **Add Cc/Bcc** to include a copy or a blind copy to the message.
- Enter the subject and content of the message.
- Press the  icon, touch **Attach file** to send an attachment to the receiver.
- Finally, touch  to send.
- If you do not want to send the mail right away, you can touch  and **Save as draft** or press the Back key to save a copy.

7 NFC Task Launcher ⁽¹⁾

Near Field Communication (NFC) is a new, short-range wireless connectivity technology which allows mobile users to read and write NFC tags, pair with other NFC devices, and even make fast and secure mobile payments. With NFC activated, you can use this application to open, act on and organize the tags you've scanned.

To access this function, touch the Application tab from Home screen, then select **NFC Task Launcher**.

8 Getting connected

To connect to the Internet with this phone, you can use GPRS/EDGE/3G networks or Wi-Fi, whichever is most convenient.

8.1 Connecting to the Internet

8.1.1 GPRS/EDGE/3G

The first time you turn on your phone with the SIM card inserted, it will automatically configure network service: GPRS, EDGE or 3G.

To check the network connection you are using, press the Menu key in the Home screen, then touch **Settings > More > Mobile networks > Network operators** or **Access Point Names**.

8.1.2 Wi-Fi

Using Wi-Fi, you can connect to the Internet when your phone is within range of a wireless network. Wi-Fi can be used on phone even without a SIM card inserted.

To turn Wi-Fi on and connect to a wireless network

- Press and hold the Multitask key  in the Home screen.
- Touch **System settings**.
- Touch the On/Off toggle next to the Wi-Fi icon to turn Wi-Fi on or off.
- Touch **Wi-Fi**. The detailed information of detected Wi-Fi networks is displayed in the Wi-Fi networks section.
- Touch a Wi-Fi network to connect. If the network you selected is secured, you are required to enter a password or other credentials (you may contact network operator for details). When finished, touch **Connect**.

8.2 Browser

Using Browser, you can enjoy surfing the Web.

To open the web browser, tap  on the Home screen.

To go to a web page

In the Browser screen, touch the URL box at the top, enter the address of the web page, then touch **Go**.

8.3 Connecting to a computer via USB

With the USB cable, you can transfer media files and other files between your phone's microSD card and the computer.

To connect/disconnect your phone to/from the computer

To connect your phone to the computer:

- Use the USB cable that came with your phone to connect the phone to a USB port on your computer. You will receive a notification that the USB is connected.
- Open the Notifications panel and touch **USB connected**.
- Touch **Mount** in the dialog that opens to confirm that you want to transfer files.



⁽¹⁾ Vodafone 975N

To disconnect:

- Unmount the microSD card on your computer.
- Open the Notifications panel and touch **Turn off USB storage**.
- Touch **Turn off** in the dialog that opens.

To locate data you have transferred or downloaded in your microSD card:

- Touch the Application tab in the Home screen to open the applications list.
- Touch **File Manager**.

All data you have downloaded are stored in **File Manager**, where you can view media files (videos, photos, music and others), rename files, install applications onto your phone, etc.

8.4 Sharing your phone's mobile data connection

You can share your phone's mobile data connection with a single computer via a USB cable (USB tethering) or with up to eight devices at once by turning your phone into a portable Wi-Fi hotspot.

To turn on USB tethering or Portable Wi-Fi hotspot

- Press and hold the Multitask key  in the Home screen.
- Touch **System settings > More > Tethering & portable hotspot**.
- Mark the check box **USB tethering** or **Portable Wi-Fi hotspot** to activate this function.



Sharing data may incur additional network charges from your network operator. Extra fees may also be charged in roaming areas.

9 Find my location

To activate your phone's global positioning system (GPS) satellite Receiver:

- Press the Menu key in the Home screen.
- Touch **Settings > Location services > GPS satellites**.
- Mark the checkbox.

To find your location, go to the application list and touch Maps.



Your phone uses GPS and mobile cell-tower data to provide a quick and accurate location - sometimes as close as several metres. The process of accessing the GPS satellite and setting your phone's precise location for the first time can require up to 5 minutes. You will need to stand in a place with a clear view of the sky and avoid moving. After this, GPS will only need 20-40 seconds to identify your precise location.

10 Data backup

This phone enables you to back up your phone's settings and other application data to Google Servers, with your Google Account.

If you replace your phone, the settings and data you've backed up are restored onto the new phone the first time you sign in with your Google Account.

To activate this function:

- Press the Menu key in the Home screen
- Touch **Settings > Backup and reset > Back up my data**
- Mark the checkbox

When data backup is activated, a wide variety of settings and data are backed up, including your Wi-Fi passwords, bookmarks, a list of the applications you've installed, the words you've added to the dictionary used by the onscreen keyboard, and most of the settings that you configure with the Settings application. If you deactivated this option, you stop backing up your settings, and any existing backups are deleted from Google Servers.

11 Factory data reset

To activate factory data reset:

- Press and hold the Multitask key  in the Home screen.
- Touch **System settings > Backup and reset > Factory data reset**
- Mark the checkbox

A phone reset will erase all of your personal data from internal phone storage, including information about your Google Account, any other accounts, your system and application settings, and any downloaded applications. Resetting the phone does not erase any system software updates you've downloaded or any files on your microSD card, such as music or photos. If you reset the phone in this way, you're prompted to re-enter the same kind of information as when you first started Android.

When you are unable to power on your phone, there is another way to perform a factory data reset by using hardware keys. Hold down the the Volume up key and press the Power key at same time until the screen lights up.

12 Applications

Your phone comes with some built-in Google™ applications, and more third-party applications can be downloaded onto it.

With the built-in applications, you can

- Communicate with friends
 - Exchange messages or emails with friends
 - Track you location, view traffic situations, search for locations and get navigation information to your destination
 - Download more applications from Android Market
- and more.

For more information about these applications, please check the user manual online: www.vodafone.com/smart3.

13 Making the most of your phone

13.1 Android Manager

You can download the Android Manager PC suite software for free from the website: www.vodafone.com/smart3

The PC suite includes:

- **Contacts**

It allows you to back up contact entries so that you don't have to worry about losing, breaking, or changing your phone.

- **Messages**

It allows you to write messages from your computer instead of using the phone's onscreen keyboard. It also manages your messages.

- **Photos**

It allows you to easily import photos from either your PC or your phone, and organize them in different albums.

- **Videos**

It allows you to playback video files from your PC and upload them to a folder on your phone.

- **Music**

It allows you to quickly find your favourites on your PC, manage your library, and set up playlists for your phone's music player.

- **Application**

It allows you to import downloaded mobile applications and have them installed onto your phone upon synchronization.

- **File**

It allows you to organise your phone's files with just a few clicks, so they will appear on your phone where you want them.

- **Sync**

It allows you to synchronise the Contacts and Calendar in Outlook/ Outlook Express and handset.

Supported Operating Systems

Windows XP/Vista/Windows 7.

13.2 FOTA Upgrade

Using FOTA Upgrade tool you can update your phone's software.

To access **Software updates**, please open notification panel and touch  icon, then press **About phone/Software updates**. Or you touch  icon and access **Settings/About phone/Software updates**. Touch **Check for updates**, and the phone will search for the latest software. If you want to update the system, please touch the button **Download**, after it done please touch **Install** to complete the upgrade. Now your phone's software will have the latest version.

You should turn on data connection before searching for updates.

Settings for auto-check intervals and reminders about upgrades are also available once you restart the phone.

If you have chosen auto-check, when the system discovers the new version, the icon  will appear in the status bar. Touch the notification to access the **Software Updates** directly.



During FOTA downloading or updating, to avoid errors in locating the correct update packages, do not change your default storage location.

14 Product Safety Information

Pictograms and Graphic Symbols



Read the Safety Information section of this user guide on page 27



Do not use while re-fuelling



Do not use hand-held while driving



This device may produce a bright or flashing light



When using the phone, make sure it is kept at least 10 mm away from your head or body.



Do not dispose of in a fire



Small parts may cause a choking hazard



Avoid contact with magnetic media



This device may produce a loud sound



Avoid extreme temperatures



Keep away from pacemakers and other personal medical devices



Avoid contact with liquid, keep dry



Switch off when instructed in hospitals and medical facilities



Do not try to disassemble



Switch off when instructed in aircraft and airports



Do not rely on this device for emergency communications



Switch off in explosive environments



Only use approved accessories

Product Safety Information

RF Exposure

General Statement on RF energy

Your phone contains a transmitter and a receiver. When it is ON, it receives and transmits RF energy. When you communicate with your phone, the system handling your call controls the power level at which your phone transmits.

Specific Absorption Rate (SAR)

Your mobile device is a radio transmitter and receiver. It is designed not to exceed the limits for exposure to radio waves recommended by international guidelines. These guidelines were developed by the independent scientific organisation ICNIRP and include safety margins designed to ensure the protection of all persons, regardless of age and health.

The guidelines use a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit for mobile devices is 2 W/kg and the highest SAR value for this device when tested at the ear was 0.543 W/kg ⁽¹⁾. As mobile devices offer a range of functions, they can be used in other positions, such as on the body as described in this user guide.

As SAR is measured utilising the device's highest transmitting power, the actual SAR of this device while operating is typically below that indicated above. This is due to automatic changes to the power level of the device to ensure it only uses the minimum power required to communicate with the network.

Body worn operation

Important safety information regarding radiofrequency radiation (RF) exposure.

To ensure compliance with RF exposure guidelines the phone must be used with a minimum of 10 mm separation from the body.

Failure to observe these instructions could result in your RF exposure exceeding the relevant guideline limits.

"The highest SAR value for this mobile phone when tested with you at the body and compliance against the standard is 0.757 W/kg. While there may be differences between the SAR levels on various phones and at various positions, they all meet the relevant International guidelines and EU requirements for RF (radio-waves) exposure"

Limiting exposure to radio frequency (RF) fields

For individuals concerned about limiting their exposure to RF fields, the World Health Organisation (WHO) provides the following advice:

Precautionary measures: Present scientific information does not indicate the need for any special precautions for the use of mobile phones. If individuals are concerned, they might choose to limit their own or their children's RF exposure by limiting the length of calls, or using 'hands-free' devices to keep mobile phones away from the head and body. Further information on this subject can be obtained from the WHO home page http://www.who.int/peh-erf/WHO_Fact_sheet_193_June_2000.

Regulatory information

The following approvals and notices apply in specific regions as noted.

Vodafone 975:

TCT Mobile

TCT Mobile Europe SAS
85 Avenue des Champs Flénois,
Interciel - Le Capelle 59200 Nanteau, France
03 20 48 30 81 81

IC Declaration of conformity / Déclaration de conformité CE

Product / Produit: HSPDPA130W175 dual band GSM quad band handheld station with bluetooth technology, WIFI and FM radio / Portail HSPDPA130W175 bleue / GSM quadbandes avec technologie bluetooth, Wifi et radio FM

Product identification / Identification du produit: Vodafone 975 type Smart III 4

Where / Lieu: TCT Mobile Europe SAS
85 Avenue des Champs Flénois
59200 Nanteau
France

Declare under our sole responsibility that the product above mentioned is conform to the applicable essential requirements of the directive 1999/5/EC and that it essential radio test values have been carried out. Conformity assessment procedure: Annex IV of the directive. I declare sous notre seule responsabilité que le produit ci-dessus est en conformité avec les exigences essentielles applicatives de la directive 1999/5/CE et que toutes les séries de tests radio associées ont été effectuées. Procédure d'évaluation de conformité: annexe IV de la directive.

Applied standards / Normes appliquées:

- Item 3.1.a (protection of the health and of the safety of the user) / Article 3.1.a (protection de la santé et de la sécurité de l'utilisateur)
 - EN 62208-1:2008 + A11:2009+ A12:2011 + A1:2010
 - EN 62208-2:2010
- Item 3.1.b (protection of the environment with respect to electromagnetic compatibility) / Article 3.1.b (engagement de protection de l'environnement en ce qui concerne la compatibilité électromagnétique)
 - EN 301 486-1 v.1.2 (2001-09), EN 301 486-3 v.1.1 (2000-08), EN 301 486-7 v.1.1 (2001-07), EN 301 486-17 v.2.1.1 (2009-05), EN 301 486-24 v1.6.1 (2010-10)
- Item 3.2 (effective use of spectrum so as to avoid harmful interferences) / Article 3.2 (utilisation efficace du spectre radioélectrique de façon à éviter les interférences nuisibles)
 - EN 301 511 v.9.0.2 (2003-03), EN 301 506-1 v.6.2.1 (2011-08), EN 301 509-2 v.5.2.1 (2011-07), EN 301 338 v.1.7.1 (2005-10), EN 301 440-1 v.1.6 (2010-03), EN 301 440-2 v.1.4 (2010-08)

This product also conforms to the applicable requirements of following directives:
2004/108/EC (electromagnetic compatibility) / Ce produit est en conformité avec la directive 2004/108/CE (compatibilité électromagnétique)

- EN 55013:2001 +A2:2008
- EN 55027:2007
- directive 2011/65/EU (RoHS - restriction of the use of certain hazardous substances)

This product can connect with a Common Mobile Phone charging which complies with below standards: (Ce produit peut être utilisé avec un chargeur universel pour téléphone portable conforme aux standards suivants):

- EN301 489-34 v1.1 (2010-10)
- EN 62554:2010

Conformity of this product has been reviewed by the following Notified body of directive 1999/5/EC / La conformité de ce produit a été vérifiée par l'organisme de Notified body (notifié body) suivant:
American Certification Inc., Inc.
Suite C110, Whitler Avenue 6711, 29101 McLeans, Virginia, United States
Identification number: 1508

Date: 2013-09-22
Signature: TCT Mobile Europe SAS / Deputy General Manager, EMEA, Interciel

CE 1588

TCT Mobile Europe SAS - Siège social : 85 Avenue des Champs Flénois, Interciel - Le Capelle 59200 Nanteau France
SAS au capital de 23 501 072 euros - RCS Nanteau B 440 039 322 - Guaf 440 039 322 000 894 487

⁽¹⁾ The tests are carried out in accordance with IEC standard PT62209-1.

EC declaration of conformity / Déclaration de conformité CE

Product / Produit: HSDPA/HSPA/UMTS dual band / GSM quad band handheld station with bluetooth technology, WPA and FM radio / Portatif HSDPA/HSPA/UMTS bande / GSM quad bande avec technologie Bluetooth, WPA et radio FM

Product identification / Identificateur de produit:
Vodafone 975N type Smart III NFC

We / Nous: TCT Mobile Europe SAS
55, avenue des Champs Pommés
92000 Nanterre
France

Declare under our sole responsibility that the product above mentioned is conform to the applicable essential requirements of the directive 1999/5/EC and that all essential radio test rules have been carried out. Conformity assessment procedure: Annex IV of the directive. I declare under my sole responsibility that the product is in conformity with the requirements specified in the applicable of the directive 1999/5/EC and that all essential radio test rules have been carried out. Conformity assessment procedure: Annex IV of the directive.

Applied standards / Normes appliquées:

- Item 3.1.a (protection of the health and of the safety of the user) / Article 3.1.a (protection de la santé et de la sécurité de l'utilisateur)

- EN 50361-1:2006 + A11:2006 + A12:2011 + A1:2010
- EN 50361-2:2009
- EN 62202-2 (2010)

- EN 300 320:2002/AC:2008, Council recommendation 1999/5/EC (July 30)

- Item 3.1.b (protection requirements with respect to electromagnetic compatibility) / Article 3.1.b (exigences de protection en ce qui concerne la compatibilité électromagnétique)

- EN 301 488-1 v.1.9.2 (2011-08), EN 301 488-3, 1.4.1 (2002-08), EN 301 489-2 v.1.3.1 (2008-11), EN 301 488-17 v.2.1.1 (2008-05), EN 301 489-24 v1.6.1.1 (2010-10)

- Item 3.2 (effective use of spectrum so as to avoid harmful interferences) / Article 3.2 (utilisation efficace de spectre radioélectrique de façon à éviter les interférences nuisibles)

- EN 301 511 v.3.3.2 (2002-03), EN 301 510 v.1.1.1 (2011-09), EN 301 508 v.2 v.5.2.1 (2011-07), EN 300 328 v.1.7.1 (2005-10), EN 300 440-1 v1.6.1.1 (2010-08), EN 300 440-2 v1.4 (2010-08), EN 300 330 v.1.7.1 (2010-02), EN 300 330 v.1.5 (2010-02), EN 300 291-1 v.1.1 (2008-07), EN 300 291-2 v.1.1 (2008-07)

This product also conforms to the applicable requirements of following directives.

- directive 2004/108/EC (electromagnetic compatibility). / Ce produit est en conformité avec la directive 2004/108/EC (compatibilité électromagnétique)

- EN 55013:2001 + A2:2005

- EN 300202:2007

- directive 2011/65/EU (RoHS) - restriction of the use of certain hazardous substances)

This product can be used with a Common Mobile Phone Charger which complies with below standards: (Ce produit peut être utilisé avec un chargeur universel pour téléphone portable conforme aux standards suivants)

- EN301 489-34 v1.1.1 (2010-10)

- EN 62594:2010

Conformity of this product has been reviewed by the following Notified body of directive 1999/5/EC / Le conformité de ce produit a été vérifiée par l'organisme de certification (notified body) suivant:

American Certification Body, Inc.

Salle C10, Villimar Avenue 0731, 22101 McClean, Virginia, United States

Identification number: 1368

Date: 2013-03-25

Signature:

CE 1588

Signature: Christophe Bonnet
TCT Mobile Europe SAS / Deputy General Manager, EMIA, ...

TCT Mobile Europe SAS - Siège social: 55 Avenue des Champs Pommés, Immeuble Le Capitul 92000 Nanterre France

SAS au capital de 20 000 000 euros - RCS Nanterre 440 200 222 - Siret 440 200 222 000 33 496 46022

Driving

Driving

Full attention must be given to driving at all times in order to reduce the risk of an accident. Using a phone while driving (even with a hands free kit) causes distraction and can lead to an accident. You must comply with local laws and regulations restricting the use of wireless devices while driving.

Operating machinery

Full attention must be given to operating machinery in order to reduce the risk of an accident.

Product Handling

General Statement on handling and use

You alone are responsible for how you use your phone and any consequences of its use.

You must always switch off your phone wherever the use of a phone is prohibited. Use of your phone is subject to safety measures designed to protect users and their environment.

- Always treat your phone and its accessories with care and keep it in a clean and dust-free place.
- Do not expose your phone or its accessories to open flames or lit tobacco products.
- Do not expose your phone or its accessories to liquid, moisture or high humidity.
- Do not drop, throw or try to bend your phone or its accessories.
- Do not use harsh chemicals, cleaning solvents, or aerosols to clean the device or its accessories.
- Do not paint your phone or its accessories.
- Do not attempt to disassemble your phone or its accessories, only authorised personnel must do so.
- Do not expose your phone or its accessories to extreme temperatures, minimum -10 and maximum +50 degrees Celsius.
- Please check local regulations for disposal of electronic products.
- Do not carry your phone in your back pocket as it could break when you sit down.

Small Children

Do not leave your phone and its accessories within the reach of small children or allow them to play with it. They could hurt themselves or others, or could accidentally damage the phone.

Your phone contains small parts with sharp edges that may cause an injury or which could become detached and create a choking hazard.

Demagnetisation

To avoid the risk of demagnetisation, do not allow electronic devices or magnetic media close to your phone for a prolonged time.

Electrostatic discharge (ESD)

Do not touch the SIM card's metal connectors.

Antenna

Do not touch the antenna unnecessarily.

Normal use position

When placing or receiving a phone call, hold your phone to your ear, with the bottom towards your mouth or as you would a fixed line phone.



Air Bags

Do not place a phone in the area over an air bag or in the air bag deployment area.

Store the phone safely before driving your vehicle.

Seizures/Blackouts

This phone is capable of producing bright flashing lights.

Repetitive Motion Injuries

To minimise the risk of RSI, when texting or playing games with your phone:

- Do not grip the phone too tightly
- Press the buttons lightly
- Make use of the special features in the handset which minimise the number of buttons which have to be pressed, such as message templates and predictive text
- Take lots of breaks to stretch and relax

Emergency Calls

This phone, like any wireless phone, operates using radio signals, which cannot guarantee connection in all conditions. Therefore, you must never rely solely on any wireless phone for emergency communications.

Loud Noise

This phone is capable of producing loud noises which may damage your hearing. Prolonged exposure to music at full volume on the music player may damage the listener's hearing. Use the recommended headphones only.



PROTECT YOUR HEARING

To prevent possible hearing damage, do not listen at high volume levels for long periods. Exercise caution when holding your device near your ear while the loudspeaker is in use.

Bright Light

This phone is capable of producing flashes of light, do not use it too close to the eyes.

Phone Heating

Your phone may become warm during charging and during normal use.

Electrical Safety

Accessories

Use only approved accessories.

Do not connect with incompatible products or accessories.

Take care not to touch or allow metal objects, such as coins or key rings, to contact or short-circuit the battery terminals.

Connection to a Car

Seek professional advice when connecting a phone interface to the vehicle's electrical system.

Faulty and Damaged Products

Do not attempt to disassemble the phone or its accessories.

Only qualified personnel must service or repair the phone or its accessories.

If your phone or its accessories have been submerged in water, punctured, or subjected to a severe fall, do not use them until you have taken it to be checked at an authorised service centre.

Battery Handling & Safety

Always switch the device off and disconnect the charger before removing the battery.

Only use the battery and charger supplied, or manufacturer approved replacements intended for use with your phone. Using other batteries and chargers could be dangerous.

Do not disassemble or short-circuit the battery. Accidental short-circuiting can occur if a metallic object such as a key, paper clip, or pen touches the terminals of the battery.

Improper battery use may result in a fire, explosion, or other hazard. If you believe the battery has been damaged, do not use it, take it to a service centre for testing.

Interference

General statement on interference

Care must be taken when using the phone in close proximity to personal medical devices, such as pacemakers and hearing aids.

Pacemakers

Pacemaker manufacturers recommend that a minimum separation of 15 cm be maintained between a mobile phone and a pacemaker to avoid potential interference with the pacemaker. To achieve this use the phone on the opposite ear to your pacemaker and do not carry it in a breast pocket.

Hearing Aids

People with hearing aids or other cochlear implants may experience interference noises when using wireless devices or when one is nearby. The level of interference will depend on the type of hearing device and the distance from the interference source, increasing the separation between them may reduce the interference. You may also consult your hearing aid manufacturer to discuss alternatives.

Medical devices

Please consult your doctor and the device manufacturer to determine if operation of your phone may interfere with the operation of your medical device.

Hospitals

Switch off your wireless device when requested to do so in hospitals, clinics or health care facilities. These requests are designed to prevent possible interference with sensitive medical equipment.

Aircraft

Switch off your wireless device whenever you are instructed to do so by airport or airline staff.

Consult the airline staff about the use of wireless devices on board the aircraft, if your device offers a 'flight mode' this must be enabled prior to boarding an aircraft.

Interference in cars

Please note that because of possible interference to electronic equipment, some vehicle manufacturers forbid the use of mobile phones in their vehicles unless a handsfree kit with an external antenna is included in the installation.

Explosive environments

Petrol stations and explosive atmospheres

In locations with potentially explosive atmospheres, obey all posted signs to turn off wireless devices such as your phone or other radio equipment.

Areas with potentially explosive atmospheres include fuelling areas, below decks on boats, fuel or chemical transfer or storage facilities, areas where the air contains chemicals or particles, such as grain, dust, or metal powders.

Blasting Caps and Areas

Turn off your mobile phone or wireless device when in a blasting area or in areas posted with notifications requesting "two-way radios" or "electronic devices" are turned off to avoid interfering with blasting operations.

Your telephone is a transceiver that operates on GSM in quad-band (850/900/1800/1900MHz) or UMTS in dual-band (900/2100MHz).

CE | 588

This equipment is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC. The entire copy of the Declaration of Conformity for your telephone can be obtained through our website: <http://www.vodafone.com/smart3>

Protection against theft ⁽¹⁾

Your telephone is identified by an IMEI (phone serial number) shown on the packaging label and in the product's memory. We recommend that you note the number the first time you use your telephone by entering * # 0 6 # and keep it in a safe place. It may be requested by the police or your operator if your telephone is stolen. This number allows your mobile telephone to be blocked preventing a third person from using it, even with a different SIM card.

⁽¹⁾ Contact your network operator for service availability.



This symbol on your telephone, the battery and the accessories means that these products must be taken to collection points at the end of their life:

- Municipal waste disposal centres with specific bins for these items of equipment
- Collection bins at points of sale.

They will then be recycled, preventing substances being disposed of in the environment, so that their components can be reused.

In European Union countries:

These collection points are accessible free of charge.

All products with this sign must be brought to these collection points.

In non European Union jurisdictions:

Items of equipment with this symbol are not to be thrown into ordinary bins if your jurisdiction or your region has suitable recycling and collection facilities; instead they are to be taken to collection points for them to be recycled.

CAUTION: RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE. DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS.

Licences



microSD Logo is a trademark.



The Bluetooth word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by TCT Mobile Limited and its affiliates is under license. Other trademarks and trade names are those of their respective owners.

Vodafone975/975NBluetooth QD ID B020261

The Wi-Fi Logo is a certification mark of the Wi-Fi Alliance.



Android, Google and YouTube and other marks are trademarks of Google Inc. The Android robot is reproduced or modified from work created and shared by Google and used according to terms described in the Creative Commons 3.0 Attribution License.

You have purchased a product which uses the open source (<http://opensource.org/>) programs mtd, msdosfs, netfilter/iptables and initrd in object code and other open source programs licensed under the GNU General Public License and Apache License.

We will provide you with a complete copy of the corresponding source codes upon request within a period of three years from the distribution of the product by TCT.

You may download the source codes from <http://sourceforge.net/projects/alcatel/files/>. The provision of the source code is free of charge from internet.

Notice

The information in this manual is subject to change without notice. Every effort has been made in the preparation of this manual to ensure accuracy of the contents, but all statements, information, and recommendations in this manual do not constitute a warranty of any kind, expressed or implied. Read the safety precautions and safety information carefully to ensure that you use this wireless device in a correct and safe manner.

TCT Mobile Limited Address:

Room 1910-12A, Tower 3, China HK City, 33 Canton Road, Tsimshatsui, Kowloon, Hong Kong

Website: <http://www.vodafone.com/smart3>

15 Telephone warranty

WARRANTY TERMS AND CONDITIONS

1. Vodafone undertakes the warranty of this Mobile Phone for a period of two (2) years from the date of Purchase by the original owner (not transferable) under normal use.
2. The Battery has a limited warranty for twelve (12) months, and Charger for twenty-four (24) months against manufacturing defects. Other accessories have a limited warranty for twenty-four (24) months against manufacturing defects.
3. This Warranty does not cover damage resulting from:
 - a) Normal wear & tear of the equipment;
 - b) Defects and damages due to the equipment being used other than its normal and customary manner;
 - c) An unauthorized disassembly, repair, alteration or modification being carried out;
 - d) Misuse, abuse, negligence or accident howsoever caused;
 - e) Defects or damage arising from improper testing, operation, maintenance, installation, or any alteration or modification;
 - f) Defects or damage due to spillage of food or liquids, corrosion, rust or the use of wrong voltage;
 - g) Scratches or damage to plastic surfaces and all other externally exposed parts that are due to normal customer use;
4. The Handset requiring service/repair must be delivered at the user's cost.
5. This warranty will be null and void in any of the following events:
 - a) If the serial number or warranty seal on the equipment has been defaced or removed.
 - b) If any term contained in this warranty has been altered or modified in any way without prior written consent of Vodafone.
6. The limited warranty extends only to customer who purchase the product in one of the countries (or areas) set forth at the end of this document. The limited warranty is only valid in Vodafone's intended country (or area) of sale of the Product.
7. If the product is returned to Vodafone after the expiration of the warranty period, Vodafone's normal service policies shall apply and the Consumer will be charged accordingly.
 - a) Vodafone neither assumes for it any other obligation or liability beyond that which is expressly provided for in this limited warranty.
 - b) All warranty information, product features and specifications are subject to change without notice.
8. THIS WARRANTY IS IN LIEU OF ANY AND OTHER WARRANTIES EXPRESSED OR IMPLIED, SPECIFICALLY INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. VODAFONE ASSUMES NO LIABILITY FOR THE BREACH OF THE WARRANTY BEYOND CORRECTING THE BREACH IN THE MANNER DESCRIBED ABOVE. IN NO EVENT SHALL VODAFONE BE LIABLE FOR CONSEQUENCES.