 


kobo™

a Rakuten company

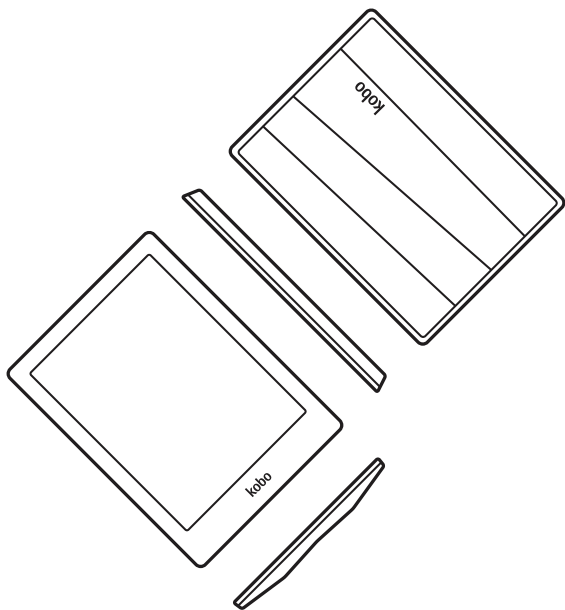

koboaura^{HD}

User Guide

Table of Contents

About your eReader	4
Anatomy of your eReader	5
Charging your eReader	7
Using the touch screen.....	8
Putting your eReader to sleep and waking it up	10
Using the light.....	12
Connecting to your computer	13
Using your Library	15
Using the Kobo Cloud	18
Downloading books from the Kobo Cloud to your eReader	20
Archiving books to the Kobo Cloud.....	22
Deleting books.....	23
Reading on your eReader	25
Reading a book.....	25
Navigating a book	25
Changing the way text looks	27

 
Adding notes and looking up or translating words.....	30
Using notes	32
Bookmarking pages	33
Using the dictionary.....	34
Translating a word	35
Getting a Book	37
Shopping for a new book.....	37
Buying a book	39
Using your Wishlist.....	40
Adding library books and books from other bookstores.....	41
Understanding EPUB, PDF, and DRM.....	43
Using Wi Fi.....	45
About Wi Fi.....	45
Turning Wi Fi on or off	46
Connecting your eReader to a wireless (Wi Fi) network	46
Getting Help.....	48
Safety, regulatory and warranty information.....	48

About your eReader

What's in this section

- Anatomy of your eReader
- Charging your eReader
- Using the touch screen
- Putting your eReader to sleep and waking up
- Using the light
- Connecting to your computer

Anatomy of your eReader

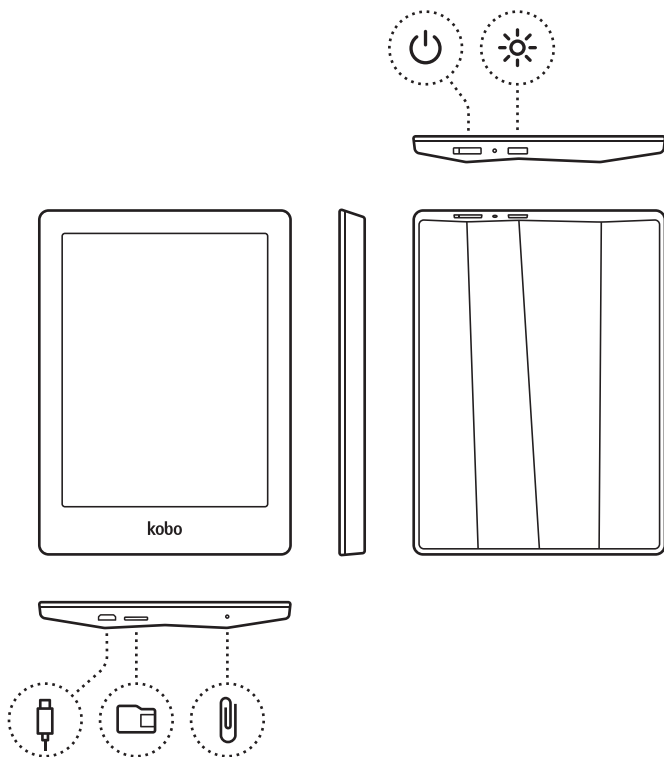



Power slider

Slide to turn your eReader on or off, or put it to sleep.



Light button

Press to turn on the screen light to read in the dark.



Micro SD slot

Increase the number of books your eReader can hold by inserting a micro SD card.



USB port

Connect your eReader to your computer using the supplied USB cable to charge your eReader or add books.

 


Reset hole

Insert a paper clip and press gently to reset your eReader.

Charging your eReader

To charge your eReader, connect it to your computer using the USB cable provided in your box.

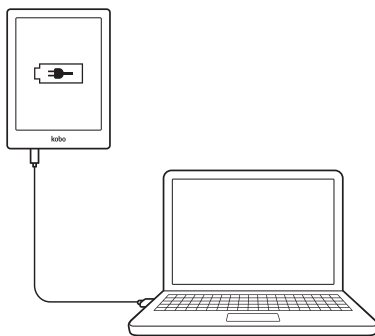

As it charges, your eReader will display the battery's charge at the top right-hand corner of the screen.

Battery icon...

Meaning...



Your eReader is out of power.



Your eReader is charging.



Your eReader has a partial charge.



Your eReader is fully charged.

You can see the battery icon at the top of the Reading Menu. To see the Reading Menu while you read, tap the centre of the page. You'll find the battery icon at the top right-hand corner of the screen showing how much charge the battery has.

Using the touch screen

When your eReader is on, you can touch the screen to open books, turn pages, select items, and more. In many cases you can just touch the screen lightly with a fingertip to interact with it. There are a few other gestures that you may find useful.

Tapping

This is the gesture you'll use the most. Just tap the screen lightly to open a book, turn a page, select a menu, and more.

Swiping

You can use this gesture to go through your Library to see more books, and to page through books you are reading.

To page forward, place your finger on the right edge of screen and quickly drag it horizontally to the left. The page will turn just like a real book. You can swipe from the left edge of the screen to page backwards.

Press and hold

This gesture is also called *long press*. To use this gesture, touch the screen and hold your finger in place. This allows you to select text while reading. Just press and hold on a word, and when you let go, your eReader will underline your selection and show two circles — one at each end of the word. You can then drag on the circles to select more text.

Note: Not all books allow text selection; for example, you cannot select text in PDFs or comic books.

Double-tapping

To double-tap, you tap the same spot on the screen twice quickly. If you're reading a PDF, you can double-tap to zoom in to a page and make it bigger. If you're already zoomed in, double-tapping the page will zoom out.

Dragging

 
If you're reading a PDF and zoom in to see a bigger version of your page, you can drag the page to see different parts of it. To do this, touch anywhere on the screen and lightly move your finger around. The page will move in the direction of your finger.

Putting your eReader to sleep and waking it up

You can turn your eReader off or put it to sleep when you're not reading. Both help your battery last longer. The main difference is that when you put your eReader to sleep and then wake it up, you go back to the last screen you saw. This could be a page in a book, the Kobo Store, or an area in your Library. If you turn your eReader off, you'll always go back to your Home page when you turn it on again.

Another significant difference between putting your eReader to sleep and turning it off is the length of time it takes to wake up again. When you wake up your eReader after putting it to sleep, it's ready to use in one or two seconds; when you turn it off, it can take up to 25 seconds before it's ready to use.

Note that putting your eReader to sleep can interrupt things such as syncing your Library and wireless (Wi Fi) connections.

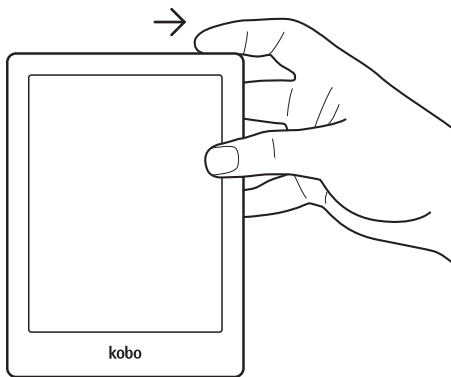

To turn on your eReader:

- Slide the power button and hold it until your eReader turns on.

To turn off your eReader:

- Slide the power button and hold until the Off screen appears.

To put your eReader to sleep:

 
- Quickly slide the power button and release.

To wake your eReader from sleep:

- Quickly slide the power button and release.

Using the light

 
Your eReader has a built-in light that lets you read in the dark and in areas with low light. You can adjust the screen's brightness to your liking.

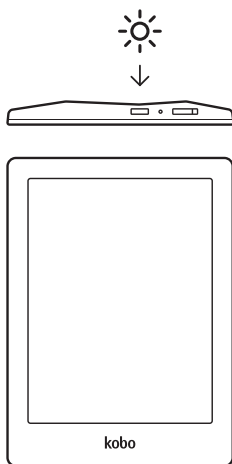

To turn the light on or off:

- Press the light button beside the power button.

To adjust the brightness of the light:

1. Tap the  Menu icon at the top of the screen. The Quick Settings panel will appear.

2. Tap **Brightness**.
3. Drag the brightness slider to adjust the screen's brightness.
4. Tap **X** when you're done.

Connecting to your computer

You can use Kobo Desktop to do many of the things you can do from your eReader using a Wi Fi network, like browsing the Kobo Bookstore. You can also use Kobo Desktop to manage your eReader when it's connected to your computer. Depending on your Wi Fi network speed, it can be faster to use Kobo Desktop to do some things – for example, to download your Library if it includes many large books or comics.

Here are a few things you can do with Kobo Desktop:

- Read your books on your computer
- Manage your collection of books
- Browse the Kobo Store, read previews and buy books

You can also do all of these actions on your eReader directly.

For more details on Kobo Desktop, you can download the Kobo Desktop guide from www.kobo.com/userguides. You can also

search our online help portal at www.kobo.com/help to ask questions about Kobo Desktop or your eReader.


Using your Library

What's in this section

- Navigating your Home Page
- Navigating your Library
- Searching for books
- Using the Kobo Cloud
- Downloading books from the Kobo Cloud to your eReader
- Archiving books to the Kobo Cloud
- Deleting books

Navigating your Home Page

Your Home page is the first thing you see when you turn on your eReader after setup. From your Home page, you can see your recently opened books, access the Kobo Bookstore, and more.

If you're reading or browsing on your Kobo Aura HD, you can always get to your Home page by tapping the  Home icon at the top of the screen.

Your Home Page shows your most recently opened book in the first column.

To make finding things easier on your Home page, your recent activities are organized with Tiles.

Some of your Home page Tiles include:

- Books you've recently opened or purchased.
- Recommendations for books we think you'll enjoy (based on what you've read).
- Reading Life awards.
- The Sync option to refresh your Library.

Tiles come in different shades so that you can easily find what you need:

- **Grey Tiles:** Content related to your Library like your current read, awards, shelves, and Reading Life.
- **Black Tiles:** Content that's related to the Kobo Bookstore like Related Reads and Recommended books.

You can tap a Tile to interact with it. Above the Tiles, you'll see the Search bar. You can use the Search bar to find books in your Library, or to find a specific book in the Kobo Bookstore.

Navigating Your Library

Your Library shows you books, magazines and newspapers you've purchased, previews you've downloaded, or shelves you've created. Your Library lets you read and manage books on your eReader.

To open your Library:

1. Go to your Home page.
2. Tap **Library**.
3. Select one of your Library areas:
 - **Books** — see all the books and documents in your Library.
 - **News & Magazines** — see any newspapers and magazines you have subscribed to.
 - **Previews** — see excerpts of new and exciting books.
 - **Shelves** — see, add, and edit bookshelves to organize your Library.

Searching for books

If you know exactly what you want to read, you can search to find a book already in your library, or a new book in the Kobo Store.

You can search using the book title, author name, or a keyword.

To find a book, on your Home page:

1. Tap the search bar at the top of the screen.
2. Choose where you'd like to search:
 - Tap **Bookstore** to search the Kobo Bookstore (you must be connected to the Internet).
 - Tap **Library** to search your eReader's library.
3. Using the keyboard, type a book title, author name, or keyword. Your search results will appear as you type. Tap a suggestion to go to that result.

Using the Kobo Cloud

The Kobo Cloud is an online collection of all the books you've bought from Kobo. Any books you've purchased from the Kobo Bookstore are automatically stored in the Kobo Cloud. With the Kobo Cloud, you can store unlimited content, so your Library can never grow too large. For example, if you have fifty books in your Kobo Library, you can choose to only have ten books downloaded on your eReader. This frees up storage space on your eReader so you can add and read new books.

When you're ready to read, simply go to your Library on your

eReader, and download what you want.

And when you need space for something new on your eReader, you can archive items you've downloaded. After they're archived, they're available in the Kobo Cloud for when you want to read them again.

Note: You can't use the Kobo Cloud to manage documents loaded with a micro SD card.

If you have bought eBooks from Kobo before, you can easily add these to your eReader using a Wi Fi connection. Just set up your eReader, and it will automatically download your top five most recently read or purchased books. This is called *updating* or *syncing*. The rest of your books are stored in the Kobo Cloud where you can download your books from at any time.

To sync your eReader over Wi Fi, from your Home page:

- Tap  **Sync** .


Downloading books from the Kobo Cloud to your eReader


When you're ready to download items in your Library, simply connect to a wireless network or to your computer using Kobo Desktop, and select the items you want. Each book, magazine or comic you select is added to a download queue, and downloaded in the order you've selected it.

 
If you change your mind about an item before it downloads, you can remove it from the download queue.

Note: You can select as many books as you'd like to download in a queue.


To remove a book from the download queue:


1. Tap the book with the  Download icon that you want to remove from the download queue. A prompt will ask you to confirm if you'd like to remove the item from the download queue.
2. Tap **Yes**.

It's easy to identify which items you've downloaded and those which are still in the Kobo Cloud—books that you haven't downloaded appear with a  Download icon.

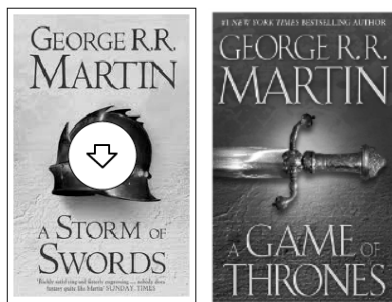

To download books on your eReader, from your Home page:

1. Tap **Library**.
2. Tap **Books**.
3. Tap the book cover or title with a  Download icon.
4. If required, connect to a Wi Fi network.
The book you've selected will download.

Note: If your Wi Fi connection is interrupted while you're downloading books, just tap the  Sync icon on the Home page to resume.

 
Archiving books to the Kobo Cloud

To free up space on your eReader, you can archive books you've downloaded. When you archive a book, you remove the content from your eReader—which frees up memory for other things—but you'll still see the book cover in your Library.

To archive your books one at a time, from the Home page:

1. Tap **Library**.
2. Tap **Books**.
3. Tap and hold the cover or title of the book you'd like to archive.
A menu will appear.
4. Tap **Archive**.
5. Tap **Yes**.
The book content will be removed from your eReader.

To archive your entire Library at once, from your Home page:

1. Tap **Library**.
2. Tap **Books**.
3. Tap the  Menu icon on the grey bar at the top of the screen.
4. Tap **Archive All**.

5. Tap **Yes**.

The content of all your books will be removed from your eReader.

Deleting books

If you're done with a book, you can delete it from your eReader. This means that if you use any of Kobo's other reading apps you will no longer have access to the book.

Deleting is different from archiving. When you delete a book, it's removed from your Library, and you won't be able to see it. When you archive a book, you'll still see the book in your Library, but you'll need to re-download the book to read it.

Don't worry, though. If you ever want to retrieve your book, sign in to kobo.com and visit the My Account page. You can add books from your purchase history back to your Library.

To delete a book, from your Home page:

1. Tap **Library**.

2. Tap **Books**.

3. Press and hold the cover or title of the book you'd like to delete.

A menu will appear.

4. Tap **Delete**.

5. Tap **Yes**.

Reading on your eReader

What's in this section

- Reading a book
- Navigating a book
- Changing the way text looks
- Closing a book and bookmarking your page

Reading a book

To open a book from the Home page or Library, just tap the title or cover.



 



Navigating a book


To turn pages in a book, just tap or swipe the sides of the page.

If you want to jump forward by more than a page or two, you can:

- Use the navigation bar to change pages or chapters.
- Use the Table of Contents to browse a list of chapters and change chapters.

To jump around in a book using the navigation bar:

1. Tap the center of the page to bring up the Reading Menu.
2. Tap the  Navigation icon.
 - To scroll through the book's pages, touch the circle in the navigation bar and slide it to the right to move forward or to the left to go back.
 - To move to the next page, tap the  Forward icon.
 - To move to the previous page, tap the  Back icon.
 - To jump to the next chapter, tap the  Jump Forward icon.
 - To jump to the previous chapter, tap the  Jump Back icon.
3. To close the navigation bar, tap anywhere on the page; or tap the  icon on the navigation bar.

Note: When using the navigation bar, you can quickly return to your original position in the book by tapping the  Snap Back icon.

Changing the way text looks

 

When you are reading a book, you can adjust the size or alignment of the text or adjust the line spacing to make reading easier on your eyes. Your eReader offers several different sizes of text for most books.

Note:

- Line spacing, margin spacing, and text justification aren't available in Japanese books.
- If you are reading a PDF you can't change the size or style of the text, but you can zoom in to make the entire page bigger and easier to read.

To change the way text looks:

1. While reading, tap the center of the page to bring up the Reading Menu.
2. Tap the **Aa** Text icon.
3. To change the style of the text, select a font from the Font Face list.
4. To make text bigger or smaller, tap the + or - icons beside Font Size.
5. To add more space between lines of text, tap the + or - icons beside Line Spacing.

6. To add more space around the edges of your screen, tap the + or - icons beside Margins.
7. To change how text lines up at the edges of each page, select one of the Justification options:
 - **OFF** Uses the default publisher's settings for your book.
 -  Forces text to line up on both the left and right sides.
 -  Forces text to line up with the left side of the screen.
8. When you're done customizing your book, tap anywhere on the screen to go back to reading.

Note:

- When you change the way text looks, your eReader remembers your preferred text size and style, and applies it to other books you read in the future.

Closing books and bookmarking your page

When you're done reading, you can stop reading by:

- Turning your eReader off or putting it to sleep
- Going to your Home page or one of your Library pages

Your eReader automatically closes your book and remembers the page you were on. The next time you open the book, it will remember where you stopped reading and open your book to that page.

Books that you're still reading are shown on your Home page. If you're finished with a book and don't want it on your Home page, here's how you can close it:

1. In the Books area of your Library, find the book you would like to close.
2. Press and hold the book's cover
A menu will appear.
3. Select **Mark as finished**.

Adding notes and looking up or translating words

What's in this section

- Highlighting text
- Using notes
- Bookmarking pages
- Using the dictionary
- Translating a word

Highlighting text


Some eBooks let you highlight text in a way that is similar to using a highlighter in a printed book.

To highlight text:

1. In your book, press and hold a word on the page.
2. Release your finger from the page.
You'll see a line under the word and two circles — one at each end of the word.
3. Drag the first circle to the start of the text you want to highlight, and the second circle to the end of the text.

4. Tap the  Highlight icon.
5. Tap **Highlight**.


To see all the text you've highlighted in a book:

1. Tap the center of the page to bring up the Reading Menu.
2. Tap the  Book icon.
3. Tap **Annotations**.

Your eReader will show a list of all the highlights you've made in your book.

4. Tap a highlight to go to the page where you created your highlight.

To delete a highlight:

1. Tap the center of the page to bring up the Reading Menu.
2. Tap the  Book icon.
3. Tap **Annotations**.

Your eReader will show a list of all the highlights and notes you've made in your book.

4. Press and hold the highlight.
A menu will appear.
5. Tap **Remove Highlight**.

Using notes


You can add notes to your books. This can be useful when you study a passage, or want to add comments about what you're reading.

To add a note:


1. In your book, press and hold a word in the section you'd like to comment on.
2. Release your finger from the page.


You'll see a line under the word and two circles — one at each end of the word.

Note: You can select more text to highlight by moving the circles at either end of the word.



3. Tap the  Highlight icon.
4. Tap **Add Note**.
5. Use the keyboard to enter your note.
6. Tap **Save**.

To delete a note:

1. In your book, tap the centre of the page to bring up the Reading Menu.
2. Tap the  Book icon.

3. Tap **Annotations**.
4. Tap the note you'd like to delete.
5. Tap the  Menu icon at the bottom of the page.
6. Tap **Delete Annotation**.
7. Tap **Continue**.

To read your note, while reading:

1. Tap the center of the page to bring up the Reading Menu.
2. Tap the  Book icon.
3. Tap **Annotations**.
Your eReader will show a list of all of your notes and highlights.
4. Tap the text next to the  Note icon.



Bookmarking pages

Like a paper book, you can mark interesting passages or pages that you want to return to using bookmarks or dog-ears.

To bookmark a page:

- While reading, tap the top right-hand corner of the page. A bookmark will appear in that corner of the page.

To find a dog-eared page:

1. While reading, tap the center of the page to bring up the Reading Menu.
2. Tap the  Book icon.
3. Tap **Annotations**.
4. Tap the bookmark you want to see.
5. Tap the  Menu icon at the bottom of the screen.
6. Tap **Show on Page**.

Using the dictionary

Your Kobo eReader has a built-in dictionary that you can use while reading Kobo eBooks. The dictionary may not work if you're reading books from other sources, such as books you get from a public library, or free eBooks you've found on the Internet. The dictionary also does not work with PDFs.



To find a definition:

1. In your book, press and hold the word you'd like to look up.
An underline will appear beneath the word.
2. Release your finger from the page.

Translating a word

Your Kobo eReader has built-in translation that you can use while reading Kobo eBooks. Translation may not work if you're reading books from other sources, and does not work when reading PDFs.

 

To translate a word into different languages:

1. In your book, press and hold the word you'd like to translate.
2. Release your finger from the page.
3. Tap the  Dictionary icon.
4. Tap **Translation Dictionary**.
5. Tap the  drop-down arrow at the top of the screen.
6. Select the language that you'd like the translation for.

Note:

You may need to download additional dictionaries for some languages.

To download additional dictionaries, from the Home page:

1. Tap the  Menu icon at the top of the screen. The Quick Settings panel will appear.
2. Tap **Settings**.
3. Tap **Language**.
4. Tap **Edit**.
5. Tap the  plus icon beside the dictionary that you'd like to add to your eReader.
6. Tap **Save**.

Getting a Book

What's in this section

- Shopping for a new book
- Buying a book
- Using your Wishlist
- Adding library books and books from other bookstores

Shopping for a new book

You can find and purchase books in several ways on your eReader.

Using the Kobo Bookstore

You can browse the Kobo Bookstore in different ways:

- **Related Reading** — find books that are similar to the ones in your library.
- **Recommended for you** — find books recommended based on your reading preferences.
- **Categories** — see a list of book categories.
- **Reading Lists** — see a list of popular book selections.
- **Wishlist** — see a list of books you've added to your Wishlist.

- **Search** — search for a specific book in the Kobo Bookstore.

To access the Bookstore, from your Home page:

1. Tap **Bookstore**.
2. Tap any of the listed options.

Getting Recommendations

You can see book recommendations based on books you own and books you've rated. If you've set up your eReader for the first time, you'll need to add some books before you see recommendations.

To see book recommendations, from your Home page:

1. Tap **Bookstore**.
2. Tap **Recommended for you**.
3. Tap the arrow icons beside a book cover to see more books.

Note: Tap a book cover to see a synopsis.

Buying a book

When you've found a book you want to purchase, simply tap **Buy Now** to check out. You can use credit cards, store credit, or gift cards from select partners to pay for your book. If you have a promo code (which is a sort of coupon) you can enter this during checkout to get a discount on your book.

Note: Available payment methods may vary by country.

To buy a book:

1. Tap the **Buy Now** button.

If you have shopped with Kobo before and saved your billing information, you'll go directly to the confirmation screen. Skip to step 5.

2. Use the keyboard to enter your billing address and credit card information.

Note: This is the address associated with your credit card. You need to provide this even if you use store credit or a gift card to pay for your order — this address is used to ensure the correct tax is calculated for your purchases.


3. Tap **Done** to continue.
4. Review your order.
5. If you want to use a gift card to pay, tap **Add Gift Card**. If you want to use a promo code, tap **Add Promo Code**.

6. Tap **Buy Now**.
7. Tap **Keep Shopping** to buy more books.

Using your Wishlist

Your Wishlist is where you save books you are interested in but not yet ready to buy. You can add books to your Wishlist while browsing and easily find them later. For example, if you see three books you like in the Kobo Bookstore, you can add them to your Wishlist and buy them later.

To add a book to your Wishlist:

1. While shopping in the Bookstore, tap the  drop-down arrow beside the Buy button.
2. Tap **Add to Wishlist**.

To see the books in your Wishlist, from your Home page:

1. Tap **Bookstore**.
2. Tap **Wishlist**.
 - Tap a book to read the synopsis or buy it.

Adding library books and books from other bookstores

Want to borrow eBooks from a public library and read them on your eReader? Or maybe you have eBooks from other sources that you'd like to add?

Most eBooks that you borrow and buy are protected using Digital Rights Management, or DRM. They're protected so that only you can read them (and in the case of library books, only for a specific period of time). Your eReader can display books protected using Adobe DRM, which is a form of DRM used by most libraries and booksellers.

You'll know when you've bought or borrowed a book using this type of protection if the library or bookseller gives you a file with an .acsm extension (rather than an .epub or .pdf extension). The .acsm file contains licensing information for unlocking your book.

To read one of these books on your Kobo eReader, you need to use an application called Adobe Digital Editions. This application can open your .acsm file, read the licensing information, download your book, and copy the book to your eReader.

To download Adobe Digital Editions or get more information,
see:

<http://www.adobe.com/products/digital-editions.html>

Understanding EPUB, PDF, and DRM

eBooks come in a range of formats. When you look for books to read on your Kobo eReader, look for books in EPUB or PDF formats.

There are different types of EPUBs, as well: Kobo EPUBs, which come from the Kobo store, and other EPUBs, which come from other sources. There are some features in Kobo EPUBs that you may not find in other EPUBs.

Sometimes books are protected using Digital Rights Management (DRM). DRM prevents unauthorized copying of books, and is often used to protect the books you get from libraries and booksellers. There are several types of DRM. Your eReader can display books that are protected using Adobe DRM.

Once you've found books that you want to read, you can choose from several ways to add them to your eReader. You can transfer books using:

- A wireless connection on your eReader
- The free Kobo Desktop software on your computer
- Adobe Digital Editions
- A micro SD card

- Drag and drop

Which method works best depends on whether your books are protected by DRM, and where they came from.

If you purchase books from Kobo, you can add them to your eReader using a wireless connection or using the free Kobo Desktop software for your computer. See *Syncing your Library*.

If your books are protected by DRM, you can add them to your eReader using Adobe Digital Editions.

If your books are not protected by DRM, you can add them to your eReader using:

- a Micro SD card
- drag and drop
- Adobe Digital Editions

For details on adding books to your eReader, please visit our help page at www.kobo.com.

Using Wi Fi





What's in this section

- About Wi Fi
- Turning off Wi Fi
- Connecting your eReader to a wireless network
- Syncing your Library over Wi Fi

About Wi Fi

You can use your eReader to connect to Kobo over a wireless Internet connection (Wi Fi). When you're connected to Kobo you can update your Library and shop for new books.

 
To see when you're connected, look for the Wi Fi status icon at the top right corner of your eReader's screen:

-  you are not connected
-  Wi Fi is on, but your eReader can't find a network
-  you have a fairly good connection
-  you have an excellent connection

Turning Wi Fi on or off

If you want to extend the battery life of your eReader or you want to use your eReader on a plane or in a hospital, you can turn Wi Fi off.


To turn off Wi Fi, from your Home page:

1. Tap the  Menu icon at the top of the screen. The Quick Settings panel will appear.
2. Tap **Wi Fi**.
When the Wi Fi menu says *Disabled*, Wi Fi is turned off.

Connecting your eReader to a wireless (Wi Fi) network


Before you can add Kobo books to your eReader, you need to connect to Kobo online. Your eReader lets you use Wi Fi (wireless Internet) to connect. All you need is access to a wireless network in your area.

To connect to a wireless network, from the Home page:

1. Tap  **Sync**.

Your eReader will try to connect to Wi Fi. This may take a moment.

2. You will be prompted to choose a wireless network. Tap the name of the network you want to use.

If there is a  Lock icon next to a network, you need a password to use that network.

3. If you're prompted for a network password, use the keyboard to type in the password and then tap **Join**. You can tap Show Password to see what you're typing.

Getting Help

Got questions or need help?

Online:

www.kobo.com/help

Find answers to your questions using our help page. Simply type a question in the field to get your answer.

Safety, regulatory and warranty information

Important safety, regulatory and warranty details about your Kobo Aura HD can be found on the Kobo website at www.kobo.com/userguides.

Note: The Declaration of Conformity may vary for different models of the Kobo Aura HD eReader. The web site includes details of how to find your Kobo Aura HD model number.