

Contents

Getting started.....6

Assembly.....	6
Turning on the phone.....	6
Help.....	7
Charging the battery.....	7
Phone overview.....	9
Menu overview.....	11
Navigation.....	13
Memory.....	14
Phone language.....	15
Entering text.....	15

Walkman™16

Stereo portable handsfree.....	16
Walkman™ player.....	17
TrackID™ and MusicID™	20
Video player.....	20
FM radio	21
MusicDJ™.....	22
Record sound.....	22
AT&T Music.....	22

Transferring and handling content.....23

Handling content in the phone.....	23
------------------------------------	----

Sending content to another phone.....	24
Using a USB cable.....	24
Transferring content to and from a computer.....	26
Phone name.....	28
Using Bluetooth™ wireless technology.....	28
Backing up and restoring.....	29

Calling.....31

Making and receiving calls.....	31
Address Book	33
Speed dial.....	36
More calling features.....	36

Messaging.....39

Text and multimedia messages.....	39
Conversations.....	41
Voice messages.....	41
Mobile Email.....	41
Instant Messaging (IM).....	42

Imaging44

Using the camera.....	44
More camera features.....	45

Camera tips and tricks.....	45	Games.....	56
Viewing and tagging photos.....	46	Applications.....	56
Using photos.....	47	Locks.....	57
Working with photos.....	47	Password Saver	58
Printing photos.....	47	IMEI number.....	59
MEdia™ Net.....	48	Using the flip.....	59
Bookmarks.....	48	Troubleshooting.....	59
History pages.....	48	Common questions.....	59
More browser features.....	49	Error messages.....	62
Internet security and certificates.....	50	Hearing Aid Compatibility...63	
Synchronizing.....	50	Hearing Aid Settings.....	63
Synchronizing using a computer.....	50	Hearing Aid Compatibility and New Technologies.....	63
More features.....	51	Hearing Aid Compatibility Rating....	64
Flight mode.....	51	Important information.....	65
Gesture control.....	51	Index.....	75
Alarms.....	52		
Calendar.....	53		
Notes.....	53		
Tasks.....	54		
Profiles.....	54		
Time and date.....	55		
Theme.....	55		
Main menu layout.....	55		
Ringtones.....	55		
Screen orientation.....	56		

Sony Ericsson W518a Walkman™

This User guide is published by Sony Ericsson Mobile Communications AB or its local affiliated company, without any warranty. Improvements and changes to this User guide necessitated by typographical errors, inaccuracies of current information, or improvements to programs and/or equipment, may be made by Sony Ericsson Mobile Communications AB at any time and without notice. Such changes will, however, be incorporated into new editions of this User guide.

All rights reserved.

©Sony Ericsson Mobile Communications AB, 2009
Publication number: 1225-2673.1

Attention: Some of the services and features described in this User guide are not supported by all networks and/or service providers in all areas. Without limitation, this applies to the GSM International Emergency Number 112. Please contact AT&T or your service provider to determine availability of any specific service or feature and whether additional access or usage fees apply.

Please read the *Important information* before you use your phone.

Your phone has the capability to download, store and forward additional content, for example ringtones. The use of such content may be restricted or prohibited by rights of third parties, including but not limited to restriction under applicable copyright laws. You, and not Sony Ericsson, are entirely responsible for additional content that you download to or forward from your phone. Prior to your use of any additional content, please verify that your intended use is properly licensed or is otherwise authorized. Sony Ericsson does not guarantee the accuracy, integrity or quality of any additional content or any other third party content. Under no circumstances will Sony Ericsson be liable in any way for your improper use of additional content or other third party content.

Smart-Fit Rendering is a trademark or a registered trademark of ACCESS Co., Ltd.

Bluetooth is a trademark or a registered trademark of Bluetooth SIG Inc. and any use of such mark by Sony Ericsson is under license.

The Liquid Identity logo, SensMe, MusicDJ, PhotoDJ, TrackID and VideoDJ are trademarks or registered trademarks of Sony Ericsson Mobile Communications AB.

TrackID™ is powered by Gracenote Mobile MusicID™. Gracenote and Gracenote Mobile MusicID are trademarks or registered trademarks of Gracenote, Inc.

WALKMAN, WALKMAN logo, Sony, Memory Stick Micro™ and M2™ are trademarks or registered trademarks of Sony Corporation.

Media Go is a trademark or registered trademark of Sony Media Software and Services.

PictBridge is a trademark or registered trademark of Canon Kabushiki Kaisha Corporation.

Style-Up is a trademark or registered trademark of Sony Ericsson Mobile Communications AB.

MEdia is a trademark or registered trademark of ATT Mobility.

Yahoo! Is a trademark or a registered trademark of Yahoo! Inc.

AOL and AIM are trademarks or registered trademarks of AOL LLC.

AT&T is a registered trademark of AT&T Corporation. Ericsson is a trademark or registered trademark of Telefonaktiebolaget LM Ericsson.

Adobe Photoshop Album Starter Edition is a trademark or registered trademark of Adobe Systems Incorporated in the United States and/or other countries.

Microsoft, ActiveSync, Windows, Outlook, Windows Media and Vista are registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries.

T9™ Text Input is a trademark or a registered trademark of Tegic Communications. T9™ Text Input is licensed under one or more of the following: U.S. Pat. Nos. 5,818,437, 5,953,541, 5,187,480, 5,945,928, and 6,011,554; Canadian Pat. No. 1,331,057, United Kingdom Pat. No. 2238414B; Hong Kong Standard Pat. No. HK0940329; Republic of Singapore Pat. No. 51383; Euro.Pat. No. 0 842 463(96927260.8) DE/DK, FI, FR, IT, NL, PT, ES, SE, GB; and additional patents are pending worldwide.

This product is protected by certain intellectual property rights of Microsoft. Use or distribution of such technology outside of this product is prohibited without a license from Microsoft.

Content owners use Windows Media digital rights management technology (WMDRM) to protect their intellectual property, including copyrights. This device uses WMDRM software to access WMDRM-protected content. If the WMDRM software fails to protect the content, content owners may ask Microsoft to revoke the software's ability to use WMDRM to play or copy protected content.

Revocation does not affect unprotected content. When you download licenses for protected content, you agree that Microsoft may include a revocation list with the licenses. Content owners may require you to upgrade WMDRM to access their content. If you decline an upgrade, you will not be able to access content that requires the upgrade.

This product is licensed under the MPEG-4 visual and AVC patent portfolio licenses for the personal and non-commercial use of a consumer for (i) encoding video in compliance with the MPEG-4 visual standard ("MPEG-4 video") or the AVC standard ("AVC video") and/or (ii) decoding MPEG-4 or AVC video that was encoded by a consumer engaged in a personal and non-commercial activity and/or was obtained from a video provider licensed by MPEG LA to provide MPEG-4 and/or AVC video. No license is granted or shall be implied for any other use. Additional information including that relating to promotional, internal and commercial uses and

licensing may be obtained from MPEG LA, L.L.C. See <http://www.mpegla.com>. MPEG Layer-3 audio decoding technology licensed from Fraunhofer IIS and Thomson.

Java, JavaScript and Java-based trademarks and logos are trademarks or registered trademarks of Sun Microsystems, Inc. in the U.S. and other countries.

End-user license agreement for Sun Java Platform, Micro Edition.

1. Restrictions: Software is confidential copyrighted information of Sun and title to all copies is retained by Sun and/or its licensors. Customer shall not modify, decompile, disassemble, decrypt, extract, or otherwise reverse engineer Software. Software may not be leased, assigned, or sublicensed, in whole or in part.

2. Export regulations: This product, including any software or technical data contained in or accompanying the product, may be subject to import and export regulations of the European Union, the United States and other countries. The user and any possessor of the product agrees to comply strictly with all such regulations and acknowledges that it is their responsibility to obtain any required licenses to export, re-export, or import this product. Without limiting the foregoing, and as an example, the user and any possessor of the product: (1) must not knowingly export or re-export Products to destinations identified pursuant to Articles in Chapter II of European Council Regulation (EC) 1334/2000; (2), must comply with U.S. government Export Administration Regulations ("EAR", 15 C.F.R. §§ 730-774, <http://www.bis.doc.gov/>) administered by Department of Commerce, Bureau of Industry and Security; and (3) must comply with economic sanctions regulations (30 C.F.R. §§ 500 et. seq., <http://www.treas.gov/offices/enforcement/ofac/>) administered by the U.S. Department of Treasury, Office of Foreign Assets Control. The user and any possessor of the product

may not transport or deliver the product, its accessories or separate software to any country, region, entity or person prohibited by these regulations.

Restricted Rights: Use, duplication or disclosure by the United States government is subject to the restrictions as set forth in the Rights in Technical Data and Computer Software Clauses in DFARS 252.227-7013(c) (1) (ii) and FAR 52.227-19(c) (2) as applicable.

Other product and company names mentioned herein may be the trademarks of their respective owners.

Any rights not expressly granted herein are reserved. All illustrations are for illustration only and may not accurately depict the actual phone.


Your phone is designed to make it easy for you to access a wide variety of content. For your protection, we want you to be aware that some applications that you enable may involve the location of your phone being shared. For applications available through AT&T, we offer privacy controls that let you decide how an application may use the location of your phone and other phones on your account. However, the AT&T privacy tools do not apply to applications available outside of AT&T. Please review the terms and conditions and the associated privacy policy for each location-based service to learn how location information will be used and protected. In addition, your AT&T phone may be used to access the Internet and to download, and/or purchase goods, applications, and services from AT&T or elsewhere from third parties. AT&T provides tools for you to control access to the Internet and certain Internet content. These controls may not be available for certain devices which bypass AT&T controls.

Instruction symbols

These symbols may appear in the User guide.

 Note

 Tip

 Warning

> Use a selection or navigation key to scroll and select. See *Navigation* on page 13.

Getting started

Assembly


Before you start using your phone, you need to insert a SIM card and the battery.

To insert the SIM card



- 1 Remove the battery cover.
- 2 Slide the SIM card into its holder with the gold-colored contacts facing down.

To insert the battery

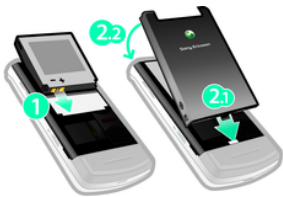




- 1 Insert the battery with the label side up and the connectors facing each other.
- 2 Attach the battery cover.

Turning on the phone

To turn on the phone



- 1 Press and hold down .
- 2 Enter your SIM card PIN, if requested, and select **OK**.
- 3 Select a language.
- 4 Follow the instructions to use the setup wizard for basic settings and useful tips.

 If you want to correct a mistake when you enter your PIN, press .

SIM card

When you register as a subscriber with AT&T, you get a SIM (Subscriber Identity Module) card, which contains information about your subscription. Always turn off your phone and detach

the charger before you insert or remove the SIM card.

- 💡 You can save contacts on the SIM card before you remove it from your phone. See *To copy names and numbers to the SIM card on page 34.*

PIN

You may need a PIN (Personal Identification Number) to activate the services and functions in your phone. Your PIN is supplied by AT&T. Each PIN digit appears as *, unless it starts with emergency number digits, for example, 112 or 911. You can see and call an emergency number without entering a PIN.

- ⚠️ If you enter the wrong PIN three times in a row, the SIM card is blocked. See *SIM card lock on page 57.*

Standby

After you have turned on your phone and entered your PIN, the name of the network operator appears. This view is called standby. Your phone is now ready for use.

Using other networks

Making and receiving calls, using messaging, and data transfer, for example, Internet-based services,

outside your home network (roaming), may incur additional costs. Contact AT&T for more information.

Help

In addition to this User guide, Feature guides and more information are available at www.sonyericsson.com/support.

Help and information are also available in your phone.

To view information about functions

- Scroll to a function and select **Info**, if available. In some cases, **Info** appears under **Options**.


To view the phone status

- Select **Menu > Settings > General > Phone status**.


Charging the battery

The phone battery is partly charged when you buy it.

To charge the battery

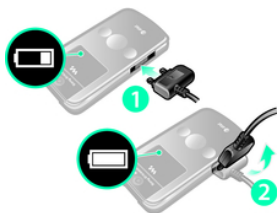

- 1 Connect the charger to the phone. It takes approximately 2.5 hours to fully charge the battery. Press a key to view the screen.
- 2 Remove the charger by tilting the plug upwards.

 You can use your phone while it is charging. You can charge the battery at any time and for more or less than 2.5 hours. You can interrupt the charging without damaging the battery.

Phone overview

- 1 Ear speaker
- 2 Screen
- 3 Selection keys
- 4 Call key
- 5 Activity menu key
- 6 Microphone
- 7 Connector for charger, handsfree and USB cable
- 8 End key, On/off key
- 9 C key (Clear)
- 10 Navigation key
- 11 Silent key



- 12 Media player key - play/stop
- 13 Media player key - next/fast forward
- 14 Screen light sensor
- 15 Volume, digital zoom keys
- 16 Battery cover
- 17 Key lock switch
- 18 Memory Stick Micro™ (M2™) slot
- 19 Loudspeaker
- 20 Media player key - previous/rewind
- 21 External display
- 22 Main camera



Menu overview



AT&T Music
WALKMAN
Shop Music
Music ID
XM Radio
Music Videos
Make-UR-Tones
Community
Music Apps



MEdia Net



Camera



My Stuff
Camera album
Music
Pictures
Video
Themes
Web pages
Games
Applications
Other



Messaging
Write new
Inbox/Conversations
Mobile Email
IM*
Call voicemail
Sent messages
Drafts

Saved messages
Templates
Manage messages
Settings



MEdia Mall



Address Book
Myself
New contact



Tools & Apps
Applications
Tools
Organiser
Alarms
FM Radio
Record sound
Recent calls



Yellow Pages



AT&T GPS
AT&T Navigator
Where
Shop GPS Apps



Entertainment
Photo
Music
Video
Games
Settings



Settings

General
Profiles
Time & date
Language
Gesture control
Software update ***
Voice control
New events
Shortcuts
Flight mode
Security
Setup wizard
Accessibility
Phone status
Master reset

Sounds & alerts
Ring volume
Ringtone
Silent mode
Increasing ring
Vibrating alert
Message alert
Key response

Display
Wallpaper
Main menu layout
Theme
Screen saver
Brightness

Calls
Speed dial
Smart search

Forward calls
Manage calls
Video Share*
Time & cost*
Show/hide my no.
Handsfree
Open to answer

Connectivity


Bluetooth
USB
GPS
Phone name
Mobile networks***
Internet settings
Streaming settings
Message settings*
SIP settings
IMS settings
Accessories

* Some menus are operator-, network- and subscription-dependent.

*** Menu appears only when available.





Navigation

To access the main menu

- When **Menu** appears on the screen, press the right selection key to select **Menu**.
- If **Menu** does not appear on the screen, press , and then press the right selection key to select **Menu**.

To navigate the phone menus



- Press the navigation key , ,  or  to move through the menus.

To select actions on the screen

- Press the left, center or right selection key.


To view options for an item

- Select **Options** to, for example, edit.

To end a function

- Press .


To return to standby

- Press .

To navigate your media










- 1 Select **Menu** > **Media**.
- 2 Scroll to a menu item and press .
- 3 To go back, press .







To delete items

- Press  to delete items such as numbers, letters, pictures and sounds.

Status bar icons

You may see icons in the standby screen of your phone.





Icon	Description
	GSM network signal strength
	GPRS network is within range and can be used
	EDGE network is within range and can be used
	HSDPA network is within range and can be used
	Battery strength indicator
	Battery is charging
	Missed incoming call
	Voicemail waiting
	Alarm is set and turned on

-  Text messaging waiting
-  Bluetooth is turned on
-  Headphones are attached
-  Internet session is active
-  Key lock is on
-  Silent mode is on

Shortcuts

You can use keypad shortcuts to go directly to functions from standby.

To use navigation key shortcuts

- Press , ,  or  to go directly to a function.






To edit a navigation key shortcut

- 1 Select **Menu** > **Settings** > **General** > **Shortcuts**.
- 2 Scroll to an option and select **Edit**.
- 3 Scroll to a menu option and select **Shortc..**

Main menu shortcuts

Menu numbering starts from the top left icon and moves across and then down row by row.

To go directly to a main menu item


- Select **Menu** and press  – , ,  or .
- ! The *Main menu layout* must be set to *Grid*. See *To change the main menu layout* on page 55.

Activity menu

The activity menu allows you to multitask and gives you a quick access to:

- **New events** – missed calls and new messages.
- **Running apps** – applications that are running in the background.
- **My shortcuts** – add your favorite functions to access them quickly.
- **Internet** – quick access to the Internet.

To open the activity menu

- Press .

Memory

You can save content on a memory card, in the phone memory and on the SIM card. Photos and music are saved on the memory card, if a memory card is inserted. If not, or if the memory card is full, photos and music are saved in the phone memory. Messages and

contacts are saved in the phone memory, but you can choose to save them on the SIM card.

Memory card

- ! You may have to purchase a memory card separately.

Your phone supports Memory Stick Micro™ (M2™) memory card adding more storage space to your phone. It can also be used as a portable memory card with other compatible devices.

You can move content between a memory card and the phone memory. See *Handling content in the phone* on page 23.

To insert a memory card



- Remove the battery cover and insert the memory card with the gold-colored contacts facing down.


Phone language

You can select a language to use in your phone.


To change the phone language

- 1 Select **Menu** > **Settings** > **General** > **Language** > **Phone language**.
- 2 Select an option.

Entering text

You can use multitap text input or T9™ Text Input  to enter text. The T9 Text Input method uses a built-in dictionary.



To change text input method

- When you enter text, press and hold down .

To shift between capitals and lower-case letters

- When you enter text, press .

To enter numbers

- When you enter text, press and hold down  - .

To enter periods and commas

- When you enter text, press .

To enter a symbol

- 1 When you enter text, select **Options** > **Add symbol**.

- 2 Scroll to a symbol and select **Insert**.

To enter text using T9™ Text Input

- 1 Select, for example, **Menu** > **Messaging** > **Write new** > **Message**.
- 2 If **T9** is not displayed, press and hold down ***368** to change to T9 Text Input.
- 3 Press each key only once, even if the letter you want is not the first letter on the key. For example, to write the word “Jane”, press **5**, **2**, **6**, **3**. Write the whole word before looking at the suggestions.
- 4 Use **▲** or **▼** to view suggestions.
- 5 Press **#↔↔** to accept a suggestion.

To enter text using multitap

- 1 Select, for example, **Menu** > **Messaging** > **Write new** > **Message**.
- 2 If **T9** is displayed, press and hold down ***368** to change to multitap text input.
- 3 Press **2** – **9** repeatedly until the desired letter appears.
- 4 When a word is written, press **#↔↔** to add a space.

To add words to the built-in dictionary

- 1 When you enter text using T9 Text Input, select **Options** > **Spell word**.
- 2 Write the word using multitap input and select **Insert**.

Walkman™

You can listen to music, audio books and podcasts. For more information, see *Transferring content to and from a computer* on page 26.

 
Stereo portable handsfree



To use a handsfree

- Connect a portable handsfree. Music stops when you receive a call and resumes when the call has ended.
- ! *If headphones are not included with the phone, you may purchase them separately.*

Walkman™ player



You can use the media player keys to control the Walkman™ player when the phone is closed. The keys must be unlocked. For information on how to unlock the keys, see *To unlock the media player keys* on page 59.

To play music

- 1 When the phone is open, select **Menu** > **AT&T Music** > **WALKMAN**.
- 2 Browse by category using the navigation key.
- 3 Scroll to a title and select **Play**.

💡 You can use **▶▶** to start playing music when the phone is closed. **▶▶** starts the last used music application, that is the Walkman™ player or the radio.

To stop playing music

- When the phone is closed, press **▶▶**.

To fast forward and rewind

- When the phone is closed, press and hold down **▶▶▶** or **◀◀◀**.

To move between tracks

- When the phone is closed, press **▶▶** or **◀◀**.

To minimize the player


- When the phone is open, select **Options** > **Minimise**.

To return to the player

- When the phone is open and you are not in any menu, press **⏏**.

Shake control


To switch tracks

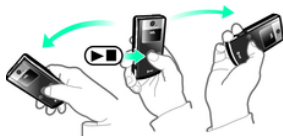


- 1 When the phone is closed and music is playing, press and hold down **▶▶** and move the phone to the right with a flick of your wrist to go to the next track.
- 2 To go to the previous track, use the same action to the left.


To shuffle tracks



- When the phone is closed and music is playing, press and hold down  and shake your phone.

To change the volume

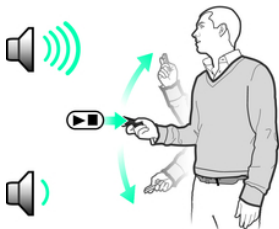

- 1 When the phone is closed and music is playing, hold the phone out in front of you facing upwards.
- 2 Press and hold down  and bend your arm upwards towards you to increase the volume. To decrease the volume, repeat the action in the opposite direction.

Playlists

You can create playlists to organize your music. You can add tracks and folders to a playlist. It may take a few minutes for the phone to create a playlist.

To create a playlist


- 1 Select [Menu](#) > [AT&T Music](#) > [WALKMAN](#) > [Playlists](#).
- 2 Scroll to [New playlist](#) and select [Add](#).
- 3 Enter a name and select [OK](#).
- 4 For each track you want to add, scroll to the track and select [Mark](#).
- 5 Select [Add](#) to add the marked tracks to the playlist.

To add tracks to a playlist

- 1 When the phone is open, select [Menu](#) > [AT&T Music](#) > [WALKMAN](#) > [Playlists](#).
- 2 Select a playlist.
- 3 Scroll to [Add music](#) and select [Add](#).
- 4 For each track you want to add, scroll to the track and select [Mark](#).

- 5 Select **Add** to add the marked tracks to the playlist.

SensMe™

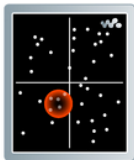

With SensMe™ you can create playlists in two ways, by mood or from all the tracks in your phone. By mood, you first use Media Go™ to transfer tracks to your phone. Information such as mood, tempo and chords is then added. The tracks are displayed as dots on a map with two axes. In the **All** view, all the tracks in your phone are placed randomly on the map.

To create a playlist by mood

- 1 When the phone is open, select **Menu** > **Media** > **Music**.
- 2 Scroll to **SensMe™** and select **Open**.
- 3 Press **⊕**, **⊖**, **⏪** or **⏩**.
- 4 Make sure you are in **Mood** view. If you are not, select **Mood**.
- 5 To preview different tracks, press **⊕**, **⊖**, **⏪** or **⏩**.

- 6 To choose an area of tracks, select **Add** and press **⊕** or **⊖**.
- 7 To create the playlist and play it in the Walkman™ player, select **Create**.
- 8 Select **Options** > **Save playlist**.
- 9 Enter a name and select **OK**.

To create a playlist from All view

- 1 When the phone is open, select **Menu** > **Media** > **Music**.
- 2 Scroll to **SensMe™** and select **Open**.
- 3 Press **⊕**, **⊖**, **⏪** or **⏩**.
- 4 Make sure you are in **All** view. If you are not, select **All**.
- 5 To preview different tracks, press **⊕**, **⊖**, **⏪** or **⏩**.
- 6 To choose an area of tracks, select **Add** and press **⊕** or **⊖**.
- 7 To create the playlist and play it in the Walkman™ player, select **Create**.
- 8 Select **Options** > **Save playlist**.
- 9 Enter a name and select **OK**.

Audio books

If you use Media Go™ to transfer audio books to your phone from a computer, you can listen to the audio books in your phone. It may take a few minutes before a transferred audio book

appears in the list of available audio books.

- ! You can download the Media Go™ software from www.sonyericsson.com/support.

To access audio books

- Select [Menu](#) > [AT&T Music](#) > [WALKMAN](#) > [Audio books](#).
- You can find audio books in formats other than M4B and those that do not have ID3v2 chapter tags in the [Tracks](#) folder.

TrackID™ and MusicID™

TrackID™ and MusicID™ are music recognition services. You can search for title, artist and album name for a track you hear playing on the radio in your phone. TrackID can be used for songs playing on the phone's built-in FM Radio. MusicID can be used for songs playing on an external music source.

To search for track information

- When the built-in FM radio is playing select [Options](#) > [TrackID™](#).
- When an external music source is playing, select [Menu](#) > [AT&T Music](#) > [MusicID™](#).

- For best results, use TrackID™ and MusicID™ in a quiet area.

Video player

To play videos

- 1 Select [Menu](#) > [Media](#) > [Video](#) > [Videos](#).
- 2 Scroll to a title and select [Play](#).

To stop playing videos

- Press the center selection key.

To fast forward and rewind

- Press and hold down  or .

To move between videos

- Press  or .

To change the volume

- Press the side volume key up or down.

 
To change the video screen size

- 1 Select [Options](#) > [Video size](#).
- 2 Select an option.

To save a picture from a video clip

- 1 To pause the video clip, press the center selection key.
- 2 To save the paused image as a picture, select [Options](#) > [Save picture](#).

FM radio



You can use the media player keys to control the radio when the phone is closed. The keys must be unlocked. For information on how to unlock the keys, see *To unlock the media player keys* on page 59.

! *Do not use your phone as a radio in places where this is prohibited.*

To turn on the FM radio

- 1 Connect a handsfree to the phone.
- 2 Select **Menu** > **Tools & Apps** > **Radio**.

💡 You can use **⏮** to turn on the radio when the phone is closed. **⏮** starts the last used music application, that is the radio or the Walkman™ player.

To search for channels automatically

- When the phone is open, select **Search**.

To search for channels manually

- When the phone is closed, press **⏮** or **⏭**.

To change the volume

- Press the side volume key up or down.

To minimize the FM radio

- When the phone is open, select **Options** > **Minimise**.

To return to the FM radio

- Select **Menu** > **Tools & Apps** > **Radio**.

Saving channels

You can save up to 20 preset channels.

To save channels automatically

- When the phone is open, select **Options** > **Auto save**.

To save channels manually

- 1 When the phone is open and you have found a radio channel, select **Options** > **Save**.
- 2 Scroll to a position and select **Insert**.

To select saved channels

- 1 When the phone is open, select **Options** > **Channels**.
- 2 Select a radio channel.




To switch between saved channels

- When the phone is closed, press and hold down **⏭** or **⏮**.

MusicDJ™

You can compose and edit your own melodies to use as ringtones. Pre-arranged sounds with different characteristics are available.

To compose a melody

- 1 Select **Menu** > **Tools & Apps** > **Tools** > **MusicDJ™**.
- 2 Select to **Insert**, **Copy** or **Paste** sounds.
- 3 Use ,  or  to scroll between the sounds.
- 4 Select **Options** > **Save melody**.

Record sound

You can record a voice memo or a call. Recorded sounds can also be set as ringtones.

- ! *In some countries or states it is required by law that you inform the other person before recording the call.*

To record a sound

- Select **Menu** > **Entertainment** > **Record sound** > **Record**.

To record a call

- 1 During an ongoing call, select **Options** > **Record**.
- 2 To save the recording, select **Save**.

To listen to a recording

- 1 Select **Menu** > **Entertainment**.
- 2 Scroll to **Music** and select **Open**.
- 3 Scroll to a recording and select **Play**.

AT&T Music

Go to AT&T Music to access your Walkman player, purchase ringtones or to access other music applications.

AT&T Music options


- **WALKMAN** – a music player.
- **Shop Music** – discover, sample and download songs directly from your phone.
- **MusicID** – identify the song title, artist or album in a flash by holding your phone up to the music. MusicID can identify millions of songs.
- **XM Radio** – XM Mobile Radio® offers commercial-free music stations.
- **Music Videos** – stream your favorite mobile videos straight to your phone.
- **Make-UR-Tones** – lets you create custom ringtones from full track songs.
- **Community** – access a hot user community where you can chat with your friends about the latest music.
- **Music Apps** – purchase music related applications.

To access AT&T Music

- Select [Menu](#) > [AT&T Music](#) and select an option.

Transferring and handling content

You can transfer and handle content such as pictures and music.

- ! *You are not allowed to exchange some copyright-protected material.  identifies a protected item.*

Handling content in the phone

You can use [File manager](#) in your phone, to handle content saved in the phone memory or on a memory card. Tabs and icons in [File manager](#) show where the content is saved. If the memory is full, delete some content to create space.

To view memory status

- 1 Select [Menu](#) > [File manager](#).
- 2 Select [Options](#) > [Memory status](#).
- 3 Select [Memory card](#) or [Phone](#).

To select more than one item in a folder

- 1 Select [Menu](#) > [File manager](#).
- 2 Scroll to a folder and select [Open](#).
- 3 Select [Options](#) > [Mark](#) > [Mark several](#).
- 4 For each item you want to mark, scroll to the item and select [Mark](#).

To move items between the phone memory and the memory card

- 1 Select **Menu** > **File manager**.
- 2 Find an item and select **Options** > **Manage file** > **Move**.
- 3 Select **Memory card** or **Phone**.
- 4 Scroll to a folder and select **Open**.
- 5 Select **Paste**.

To view information about content

- 1 Select **Menu** > **File manager**.
- 2 Find an item and select **Options** > **Information**.

Sending content to another phone

You can send content, for example, in messages or using Bluetooth™ wireless technology.

To send content

- 1 Scroll to an item and select **Options** > **Send**.
- 2 Select a transfer method.

! *Make sure the receiving device supports the transfer method you select.*

Using a USB cable

You can connect your phone to a computer with a USB cable to

synchronize, transfer and back up phone content and use your phone as a modem. For more information, go to www.sonyericsson.com/support to read Feature guides.

! *You may have to purchase a USB cable separately.*

Before using a USB cable

See *Required operating systems* on page 27.

! *Only use a USB cable supported by your phone. Do not remove the USB cable from your phone or computer during transfer as this may corrupt the memory card or the phone memory.*

PC Software

You may use Windows® Explorer, Sony Ericsson PC Suite, or Media Go™ with your phone. Sony Ericsson PC software is available from www.sonyericsson.com/support to use with your phone.

In the phone menu, you must select the USB mode based on how you plan to use the USB cable with your phone. The table lists the available computer applications and the corresponding USB mode for each.

USB mode	Purpose	Computer application
Show menu	Displays the USB menu when the USB cable is attached to the phone.	Any
Phone mode	Synchronize the phone with a computer.	Sony Ericsson PC Suite
Media transfer	Transfer music, pictures, or other files between your phone and a computer. The phone appears as a media device on your computer. Sony Ericsson PC Suite cannot access your phone in this mode.	Microsoft® Windows® Explorer
Print	Print images from the Camera album.	
Mass storage	Transfer music, pictures or other files between your phone and a computer. The phone functions are turned off automatically. All functions except alarms and alerts are turned off in Mass storage mode. The phone shuts down, but restarts after removing the cable.	Microsoft® Windows® Explorer and Media Go™

USB default mode

You can select the USB mode the phone uses when a USB cable is attached.

To change the USB default mode

- 1 Select [Menu](#) > [Settings](#) > the [Connectivity](#) tab > [USB](#) > [USB default mode](#).
- 2 Select an option.

Disconnect the USB

The correct method for disconnecting the USB cable depends on the USB mode.

To disconnect the USB cable safely in Mass storage or Phone mode

- 1 When the phone is in [Mass storage](#) or [Phone mode](#), right-click the removable disk icon in Windows Explorer.
- 2 Select *Eject*.
- 3 When the message is shown, [Mass storage session ended. It is now safe to remove the USB cable.](#)

To disconnect the USB cable safely in Media transfer or Printer mode

- Remove the USB cable.

Transferring content to and from a computer

With Windows® Explorer or Media Go™, you can transfer music from CDs, music on your computer, or music that you have purchased online to a memory card. Windows® Explorer is a file manager that often comes with your computer and can be used to view and manage your files and folders. Media Go™ enables you to transfer music, photos and videos between your phone and a computer. You can

download Media Go™ from www.sonyericsson.com/support. For more information on using the phone with a USB cable, see *Using a USB cable* on page 24.

To use the phone with Windows® Explorer

- 1 Connect a USB cable to the phone and the computer.
- 2 On your phone (depending on the phone setup):
 - The phone may switch to [Media transfer](#) and be ready to use.
 - If prompted with a USB mode menu, select [Media transfer](#).
- 3 **On your computer:**
 - Wait until the memory card appears as an external disk in Windows Explorer.
 - Drag and drop selected files between the phone and the computer.
 - For full access to your music in the music player, place it in the Music folder on the phone's memory or a memory card. For more information on how to move files already stored on your phone or memory card to the Music folder, see *To move items*

between the phone memory and the memory card on page 24.

- ! Do not remove the USB cable from your phone or computer during transfer, as this may corrupt the memory card.

Required operating systems

You need one of these operating systems to use Sony Ericsson PC software:

- Microsoft® Windows Vista™
- Microsoft® Windows XP, Service Pack 2 or higher

To download Media Go™

- 1 **Computer:** In your Internet browser, go to www.sonyericsson.com/support.
- 2 Select a region and country.
- 3 Select *Software downloads*.
- 4 Select a phone from the list.
- 5 Select *Read more and download* under Media Go™.
- 6 Select *Download now* and save the file to your computer.

- 💡 Remember where you have saved the file.

To install Media Go™ from the downloaded file

- 1 Locate the downloaded Media Go™ file on the computer.

- 2 Double-click the file and follow the instructions.

To transfer content using Media Go™

- ! Do not remove the USB cable from your phone or computer during transfer, as this may corrupt the memory card or the phone memory.

- 1 Connect the phone to a computer with a USB cable supported by your phone.
- 2 **On your phone (depending on setup):**

- The phone may switch to [Media transfer](#). If so, disconnect the cable and change the USB default mode to [Mass storage](#). See *USB default mode* on page 25. Do not remove the USB cable from your phone or computer during transfer, as this may corrupt the memory card. Media Go™ software is available for download at www.sonyericsson.com/support.
- If prompted with a [USB mode](#) menu, select [Mass storage](#). The phone will shut down in this mode but will restart again when it is disconnected from the USB cable.

- 3 **On your computer:** Drag and drop selected files between the phone and the computer.

- 4 Wait until the phone appears in Media Go™.
- 5 Move files between your phone and the computer in Media Go™.

Phone name

You can enter a name for your phone that is shown to other devices when using, for example, Bluetooth™ wireless technology.

To enter a phone name

- 1 Select [Menu](#) > [Settings](#) > [Connectivity](#) > [Phone name](#).
- 2 Enter the phone name and select [OK](#).

Using Bluetooth™ wireless technology

The Bluetooth™ function is free of charge and makes wireless connection to other Bluetooth devices possible. You can, for example:

- Connect to handsfree devices.
- Connect to several devices at the same time.
- Connect to computers and access the Internet.
- Exchange items.
- Play multiplayer games.

! *A range within 10 metres (33 feet), with no solid objects in between, is*

recommended for Bluetooth communication.

Before using Bluetooth wireless technology

You must turn on the Bluetooth function to communicate with other devices. You may also have to pair your phone with other Bluetooth devices.

To turn on the Bluetooth function

- Select [Menu](#) > [Settings](#) > [Connectivity](#) > [Bluetooth](#) > [Turn on](#).
- ! *Make sure that the device you want to pair your phone with has the Bluetooth function activated and Bluetooth visibility turned on.*

To pair the phone with a device

- 1 Select [Menu](#) > [Settings](#) > [Connectivity](#) > [Bluetooth](#) > [My devices](#).
- 2 Scroll to [New device](#) and select [Add](#) to search for available devices.
- 3 Select a device.
- 4 Enter a passcode, if required.

To allow connection to the phone

- 1 Select [Menu](#) > [Settings](#) > [Connectivity](#) > [Bluetooth](#) > [My devices](#).
- 2 Select a device from the list.
- 3 Select [Options](#) > [Allow connection](#).

- 4 Select [Always ask](#) or [Always allow](#).

! *This is only possible with devices that require access to a secure service.*

To pair the phone with a Bluetooth handsfree for the first time

- 1 Select [Menu](#) > [Settings](#) > [Connectivity](#) > [Bluetooth](#) > [Handsfree](#).
- 2 Select a device.
- 3 Enter a passcode, if required.

Power saving

You can save battery power with the Power save function. In Power save mode you can only connect with a single Bluetooth device. If you want to connect with more than one Bluetooth device at the same time you must turn this function off.

To turn on power save

- Select [Menu](#) > [Settings](#) > [Connectivity](#) > [Bluetooth](#) > [Power save](#) > [On](#).

Transferring sound to and from a Bluetooth handsfree

You can transfer the sound to and from a Bluetooth handsfree using a phone key or the handsfree key.

To transfer sound

- 1 Select [Menu](#) > [Settings](#) > [Connectivity](#) > [Bluetooth](#) > [Handsfree](#) > [Incoming call](#).
- 2 Select an option. In [phone](#) transfers sound to the phone. In [handsfree](#) transfers sound to the handsfree.

! *You need to answer the call with the phone key for this setting to apply.*

To transfer sound during a call

- 1 During a call, select [Sound](#).
- 2 Select from the list.

Backing up and restoring

You can backup and restore contacts, the calendar, tasks, notes and bookmarks using the *Sony Ericsson PC Suite*.

You can backup and restore Address Book contacts, the calendar, tasks, notes and bookmarks using the *Sony Ericsson PC Suite*.

Before backing up and restoring, you need to install the *Sony Ericsson PC Suite*, which is available from www.sonyericsson/support.

You can backup and restore contacts within your phone using a Memory Stick Micro™ (M2™) memory card. You can move content between the

memory card and the phone memory. See *Handling content in the phone* on page 23.

- *Back up your phone content regularly to make sure you do not lose it.*

To make a backup using the Sony Ericsson PC Suite

- 1 **Computer:** Start the *Sony Ericsson PC Suite* from *Start/Programs/Sony Ericsson/Sony Ericsson PC Suite*.
- 2 Follow the instructions in the *Sony Ericsson PC Suite* for how to connect.
- 3 **Phone:** Select [Phone mode](#).
- 4 **Computer:** Go to the backup and restore section in the *Sony Ericsson PC Suite* and make a backup.

To restore phone content using the Sony Ericsson PC Suite

- ! *The Sony Ericsson PC Suite will overwrite all the phone content during the restore process. You may damage your phone if you interrupt the process.*
- 1 **Computer:** Start the *Sony Ericsson PC Suite* from *Start/Programs/Sony Ericsson/Sony Ericsson PC Suite*.


- 2 Follow the instructions in the *Sony Ericsson PC Suite* for how to connect.
- 3 **Phone:** Select [Phone mode](#).
- 4 **Computer:** Go to the backup and restore section in the *Sony Ericsson PC Suite* and restore your phone.


Calling

Making and receiving calls

You need to turn on your phone and be within range of a network.

To make a call

 

- 1 Enter a phone number (with international country code and area code, if applicable).
- 2 Press .

 You can call numbers from your Address Book and call list. See Address Book on page 33, and Call list on page 33. You can also use your voice to make calls. See Voice control on page 36.

To end a call


- Press .

To make international calls

- 1 Press and hold down  until a “+” sign appears.
- 2 Enter the country code, area code (without the first zero) and phone number.
- 3 Press .

To re-dial a number

- When **Retry?** appears select **Yes**.

 Do not hold your phone to your ear when waiting. When the call connects, your phone gives a loud signal.

To answer a call

- Press .



To reject a call

- Press .

To change the ear speaker volume during a call


- Press the volume key up or down.

To mute the microphone during a call


- 1 Press and hold down .
- 2 Press and hold down  again to resume.

To turn on the loudspeaker during a call

- Press **SpkrOn**.

 Do not hold your phone to your ear when using the loudspeaker. This could damage your hearing.

To view missed calls

- Press  to open the call list.

Networks

Your phone switches automatically between GSM and 3G (UMTS) networks depending on availability.

Emergency calls

Your phone supports international emergency numbers, for example, 112 or 911. You can normally use these numbers to make emergency calls in any country, with or without the SIM card inserted, if you are within range of a network.

! *In some countries, other emergency numbers may also be promoted. Your network operator may therefore have saved additional local emergency numbers on the SIM card.*

To make an emergency call

- Enter 112 (the international emergency number) and press .

To view your local emergency numbers

- 1 Select [Menu](#) > [Contacts](#).
- 2 Scroll to [New contact](#) and select [Options](#) > [Special numbers](#) > [Emergency nos..](#)

AT&T Video Share

You can share experiences while on a call with friends and family when they happen or save them to share later. When on a call, the person who initiates the Video Share session transmits the video. Only the person placing a Video

Share call can save the Video Share session.

Types of Video Share calls

You can share information live or a prerecorded session.

- [Live share](#) – streams live information as the camera captures it.
- [Pre-recorded](#) – allows you to share a previously recorded Video Share session.

Before you begin

To use Video Share service, both parties on the call must have:

- Video share service activated on their account.
- 3G coverage.
- Video Share turned on.

To initiate a Video Share session

- While on a call, select [Share](#).

To accept a Video Share session

- When you receive a Video Share call request, press [Yes](#).

To end a Video Share session

- To continue the call, but end the Video Share session, press [Stop](#).



To save Video Share sessions

- Select **Menu > Settings > the Calls tab > Video Share > Auto record.**

Call list


You can view information about recent calls.

To call a number from the call list

- 1 Press  and scroll to a tab.
- 2 Scroll to a name or a number and press .

Address Book

You can save names, phone numbers and personal information in **Contacts**. Information can be saved in the phone memory or on the SIM card.

-  *You can synchronize your contacts using the Sony Ericsson PC Suite.*

Default contacts

You can choose which contact information is shown as default. If **Phone contacts** is selected as default, your contacts show all the information saved in **Contacts**. If you select **SIM contacts** as default, your contacts show names and numbers saved on the SIM card.

To select default contacts

- 1 Select **Menu > Contacts**.
- 2 Scroll to **New contact** and select **Options > Advanced > Default contacts**.
- 3 Select an option.

Phone contacts

Phone contacts can contain names, phone numbers and personal information. They are saved in the phone memory.

To add a phone contact

- 1 Select **Menu > Contacts**.
- 2 Scroll to **New contact** and select **Add**.
- 3 Enter the name and select **OK**.
- 4 Scroll to **New Number:** and select **Add**.
- 5 Enter the number and select **OK**.
- 6 Select a number option.
- 7 Scroll between the tabs and add information to the fields.
- 8 Select **Save**.

Calling contacts

To call a contact

- 1 Select **Menu > Contacts**.
- 2 Scroll to a contact and press .

To go directly to the contacts list

- Press and hold down  - .

To call with Smart search

- 1 Press **0+** – **9** to enter a sequence of (at least two) digits. All entries which match the sequence of digits or corresponding letters are shown in a list.
- 2 Scroll to a contact or a phone number and press **↻**.


To turn on or off Smart search

- 1 Select **Menu > Settings > Calls > Smart search**.
- 2 Select an option.

Editing contacts

To add information to a phone contact

- 1 Select **Menu > Contacts**.
- 2 Scroll to a contact and select **Options > Edit contact**.
- 3 Scroll between the tabs and select **Add** or **Edit**.
- 4 Select an option and an item to add or edit.
- 5 Select **Save**.


-  *If your subscription supports Calling Line Identification (CLI) service, you can assign personal ringtones and pictures to contacts.*

To copy names and numbers to phone contacts

- 1 Select **Menu > Contacts**.
- 2 Scroll to **New Contact** and select **Options > Advanced > Copy from SIM**.
- 3 Select an option.

To copy names and numbers to the SIM card

- 1 Select **Menu > Contacts**.
- 2 Scroll to **New contact** and select **Options > Advanced > Copy to SIM**.
- 3 Select an option.

-  *When you copy all contacts from your phone to the SIM card, all existing SIM card information is replaced.*

To automatically save names and phone numbers on the SIM card

- 1 Select **Menu > Contacts**.
- 2 Scroll to **New contact** and select **Options > Advanced > Auto save on SIM**.
- 3 Select an option.

To save contacts on a memory card

- 1 Select **Menu > Contacts**.
- 2 Scroll to **New contact** and select **Options > Advanced > Back up to m. card**.

SIM contacts

SIM contacts can contain names and numbers only. They are saved on the SIM card.

To add a SIM contact

- 1 Select **Menu** > **Contacts**.
- 2 Scroll to **New contact** and select **Add**.
- 3 Enter the name and select **OK**.
- 4 Enter the number and select **OK**.
- 5 Select a number option and add more information, if available.
- 6 Select **Save**.

Deleting contacts

To delete all contacts

- 1 Select **Menu** > **Contacts**.
- 2 Scroll to **New contact** and select **Options** > **Advanced** > **Delete all contacts**.
- 3 Select an option.

Contact memory status

The number of contacts you can save in your phone or on the SIM card depends on available memory.

To view contact memory status

- 1 Select **Menu** > **Contacts**.
- 2 Scroll to **New contact** and select **Options** > **Advanced** > **Memory status**.

Myself

You can enter information about yourself and, for example, send your business card.

To enter Myself information

- 1 Select **Menu** > **Contacts**.
- 2 Scroll to **Myself** and select **Open**.
- 3 Scroll to an option and edit the information.
- 4 Select **Save**.

To add your own business card

- 1 Select **Menu** > **Contacts**.
- 2 Scroll to **Myself** and select **Open**.
- 3 Scroll to **My contact info** and select **Add** > **Create new**.
- 4 Scroll between the tabs and add information to the fields.
- 5 Enter the information and select **Save**.

Groups

You can create a group of phone numbers and email addresses from **Phone contacts** to send messages to. See *Messaging* on page 39. You can also use groups (with phone numbers) when you create accepted callers lists. See *Accept calls* on page 38.

To create a group of numbers and email addresses

- 1 Select **Menu** > **Contacts**.

- 2 Scroll to [New contact](#) and select [Options](#) > [Groups](#).
- 3 Scroll to [New group](#) and select [Add](#).
- 4 Enter a name for the group and select [Cont.](#).
- 5 Scroll to [New](#) and select [Add](#).
- 6 For each contact phone number or email address you want to mark, scroll to it and select [Mark](#).
- 7 Select [Cont.](#) > [Done](#).


Speed dial

Speed dialing lets you select nine contacts that you can dial quickly from standby. The contacts can be saved in positions 1-9.

To add contacts to speed dial numbers

- 1 Select [Menu](#) > [Contacts](#).
- 2 Scroll to [New contact](#) and select [Options](#) > [Speed dial](#).
- 3 Scroll to a position number and select [Add](#).
- 4 Select a contact.

To speed dial

- Enter the position number and press .

More calling features


Vicemail

If your subscription includes an answering service, callers can leave a voicemail message when you cannot answer a call.

To enter your voicemail number

- 1 Select [Menu](#) > [Messaging](#) > [Settings](#) > the [Message settings](#) tab > [Voicemail number](#).
- 2 Enter the number and select [OK](#).

To call your voicemail service

- Press and hold down .

Voice control

By creating voice commands you can:

- Voice dial – call someone by saying their name
- Answer and reject calls when you use a handsfree

To record a voice command using voice dialing

- 1 From standby select [Menu](#) > [Settings](#) > the [General](#) tab > [Voice control](#) > [Voice dialing](#) > [Activate](#).
- 2 Select [Yes](#) > [New voice command](#) and select a contact. If the contact has

- more than one number, select the number to add the voice command to.
- Record a voice command such as “John mobile.”
 - Follow the instructions that appear. Wait for the tone and say the command to record. The voice command is played back to you.
 - If the recording sounds OK, select **Yes**. If not, select **No** and repeat steps 3 and 4.

! *Voice commands are saved in the phone memory only. They cannot be used in another phone.*

To voice dial

- Press and hold down a volume key.
- Wait for the tone and say a recorded name, for example “John mobile.” The phone plays the name back to you and connects the call.

Forwarding calls

You can forward calls, for example, to an answering service.

To forward calls

- Select **Menu > Settings > Calls > Divert calls**.
- Select a call type and a forward option.
- Select **Activate**.

- Enter the number to forward calls to and select **OK**.

More than one call

You can handle more than one call at a time. For example, you can put an ongoing call on hold, while you make or answer a second call. You can also switch between the two calls. You cannot answer a third call without ending one of the first two calls.



Call waiting

You will hear a beep if you receive a second call while call waiting is active.


To activate call waiting

- Select **Menu > Settings > Calls > Manage calls > Call waiting > Activate**.


To make a second call

- During the call, press . This puts the ongoing call on hold.
- Select **Options > Add call**.
- Enter the number to call and press .

To answer a second call

- During the call, press . This puts the ongoing call on hold.

To reject a second call

- During the call, press  and continue with the ongoing call.


To end an ongoing call and answer a second call

- During the call, select [Replace active call](#).

Handling two voice calls

You can have calls ongoing and on hold at the same time.

To switch between two calls

- During the call, press .

To join two calls

- During the call, select [Options > Join calls](#).

To connect two calls

- During the call, select [Options > Transfer call](#). You are disconnected from both calls.



To end an ongoing call and return to the call on hold

- First press  and then .

Conference calls

With a conference call, you can have a joint conversation with up to five people.

To add a new participant

- 1 During the call, press . This puts the joined calls on hold.
- 2 Select [Options > Add call](#).
- 3 Enter the number to call and press .
- 4 Select [Options > Join calls](#) to add the new participant.
- 5 Repeat this task to add more participants.

To release a participant

- 1 Select [Options > Release part..](#)
- 2 Select the participant to release.

To have a private conversation

- 1 During the call, select [Options > Talk to](#) and select the participant to talk to.
- 2 To resume the conference call, select [Options > Join calls](#).

Accept calls

You can choose to receive calls from certain phone numbers only.

To add numbers to the accepted callers list

- 1 Select [Menu > Settings > Calls > Manage calls > Accept calls > Only from list](#).
- 2 Scroll to [New](#) and select [Add](#).

- 3 Select a contact or [Groups](#).

💡 See [Groups](#) on page 35.

To accept all calls

- Select [Menu](#) > [Settings](#) > [Calls](#) > [Manage calls](#) > [Accept calls](#) > [All callers](#).

Showing or hiding your phone number

You can decide to show or hide your phone number when you make a call.

To hide your phone number

- 1 Select [Menu](#) > [Settings](#) > [Calls](#) > [Show/hide my no..](#)
- 2 Select [Hide number](#).

Messaging

Text and multimedia messages



Messages can contain text, pictures, sound effects, animations, and melodies. You can also create and use templates for your messages.

When sending messages, the phone automatically selects the most suitable method (as a text or multimedia message) for sending the message.


Sending messages

You can send messages from your phone. The maximum size of a standard text message is 160 characters including spaces if no other items are added to the message. If you enter more than 160 characters, a second message is created. Your messages are sent as one concatenated message.

To create and send a message

- 1 Select [Menu](#) > [Messaging](#) > [Write new](#) > [Message](#).
- 2 Enter text. To add items to the message, press , scroll  and select an item.
- 3 Select [Continue](#) > [Contacts look-up](#).

- 4 Select a recipient and select [Send](#).

 If you send a message to a group, you will be charged for each member.

To copy and paste text in a message

- 1 When you write the message, select [Options](#) > [Copy & paste](#).
- 2 Select [Copy all](#) or [Mark & copy](#). Scroll to and mark text in the message.
- 3 Select [Options](#) > [Copy & paste](#) > [Paste](#).

Receiving and saving messages

You are notified when you receive a message. Messages are automatically saved in the phone memory. When the phone memory is full, you can delete messages or save them on a memory card or on the SIM card.

To save an incoming message on a memory card

- Select [Menu](#) > [Messaging](#) > [Settings](#) > the [Message settings](#) tab > [Save to](#) > [Memory card](#).

To save a message on the SIM card


- 1 Select [Menu](#) > [Messaging](#) > [Messages](#) and select a folder.
- 2 Scroll to a message and select [Options](#) > [Save message](#).

To view a message from the inbox

- 1 Select [Menu](#) > [Messaging](#) > [Inbox](#).

- 2 Scroll to the message and select [View](#).



To call a number in a message

- When you view the message, scroll to the phone number and press .

Templates

If you often use the same phrases and pictures in a message, you can save the message as a template.

To add a message template

- 1 Select [Menu](#) > [Messaging](#) > [Templates](#) > [New template](#) > [Add](#).
- 2 Enter text. To add items to the message, press , scroll  and select an item.
- 3 Select [Save](#).
- 4 Enter a title and select [Ok](#).

To save a message as a template

- 1 Select [Menu](#) > [Messaging](#) > [Inbox](#).
- 2 Scroll to the message and select [View](#) > [Options](#) > [Save as template](#).

Message options

You can set some options, such as the Message alert and default storage location, to apply to all messages. You can set other options, such as the Delivery priority and Delivery time, for each message you send.

To set options for all messages

- 1 Select **Menu** > **Messaging** > the **Message settings** tab.
- 2 Select an option.

To set options for a specific message

- 1 When the message is ready and a recipient is selected, select **Options** > **Advanced**.
- 2 Scroll to an option and select **Edit**.

Conversations

You can choose whether to view your messages in **Conversations** or **Inbox**. A messaging conversation shows all messaging communication between you and one of your contacts.

To view messages in Conversations

- Select **Menu** > **Messaging** > **Inbox** > the **Conversations** tab.
- Select **Menu** > **Messaging** > **Conversations** and select a conversation.

To send a message from Conversations

- 1 Select **Menu** > **Messaging** > **Conversations**.
- 2 Select a conversation.
- 3 Write a message and select **Send**.

Voice messages

You can send and receive a sound recording as a voice message.

- ! *The sender and recipient must have a subscription supporting multimedia messaging.*

To record and send a voice message

- 1 Select **Menu** > **Messaging** > **Write new** > **Voice message**.
- 2 Record the message and select **Stop** > **Send** > **Contacts look-up**.
- 3 Select a recipient and select **Send**.

Mobile Email

Check your email accounts, such as Yahoo!™ Mail, AT&T Yahoo!™, Windows™ Live Mail, AOL™ and AIM™ quickly and easily.

Before using Mobile Email

- Verify that your AT&T account supports a data plan.
- Have your email account information ready.

To use Mobile Email

- 1 Select **Menu** > **Messaging** > **Mobile Email**.

- 2 Select the provider you want to use. Follow the prompts to enter your username and password.
- 3 Select [Next](#) to log into your account.

To write a new email

- 1 From your Mobile Email inbox, select [Options](#) > [Compose New](#).
- 2 Fill in each field.
- 3 Press [Send](#).

To delete an email

- 1 From your Mobile Email inbox, select an email.
- 2 Select [Options](#) > [Delete](#).

! *Menu names may change with different email providers.*

To view message options

- 1 From your Mobile Email inbox, select an email.
- 2 Select [Options](#) and scroll to an option.

! *Menu names may change with different email providers.*

Instant Messaging (IM)

Connect and log into the IM server to communicate online with your family and friends. If your subscription supports instant messaging and presence services, you can send and

receive messages and see contact status when they are online.

To choose your IM settings

- 1 Select [Menu](#) > [Messaging](#) > [IM](#).
- 2 Select IM community > [Sign In](#).
- 3 Enter your account name and password to configure the account.
- 4 Select [Sign In](#).

! *After signing into an IM community, its name replaces [IM](#) in the menu.*

To use IM

- 1 Select [Menu](#) > [Messaging](#) .
- 2 Select your IM community > [Sign In](#).
- 3 Enter your password, if needed.
- 4 Press [Sign In](#).

To add a contact to the list

- 1 Select [Menu](#) > [Messaging](#).
- 2 Select your IM community > [Sign In](#).
- 3 Enter your password, if needed.
- 4 Press [Sign In](#).
- 5 Select the [Buddies](#) tab > [Options](#) > [Add buddy](#).
- 6 Enter the contact's screen name.

💡 *The tab name varies depending on IM community chosen.*

To send an IM

- 1 Select [Menu](#) > [Messaging](#).
- 2 Select your IM community > [Sign In](#).

- 3 Enter your password, if needed.
- 4 Press [Sign In](#).
- 5 Select your IM community > the [Buddies](#) tab.
- 6 Select a buddy > [Send IM](#).
- 7 Type your message and select [Send](#).

Status

Show your status to your contacts only or show it to all users on the IM server.

To set the status

- 1 Select [Menu](#) > [Messaging](#).
- 2 Select your IM community > [My Status](#) tab.
- 3 Choose [Available](#) and select [Edit](#).
- 4 Select an option.

Save password

Prior to logging in, you can store the password for your community to avoid entering it at each sign on.

To save the password

- 1 Select [Menu](#) > [Messaging](#).
- 2 Select your IM community > [Sign In](#).
- 3 Select [Save password](#).

Auto Sign in

You can bypass the sign in screen when logging in to your IM community by turning on the phone.

To automatically sign in

- 1 Verify [Save password](#): is on.
 - 2 Select [Menu](#) > [Messaging](#).
 - 3 Select your IM community > [Sign In](#).
- ! See [Save password on page 43](#).

Imaging


You can take photos and record video clips to view, save or send. You find saved photos and video clips in [Media](#) and in [File manager](#).

Using the camera

To activate the camera


- Select [Menu](#) > [Camera](#).

Viewfinder and camera keys

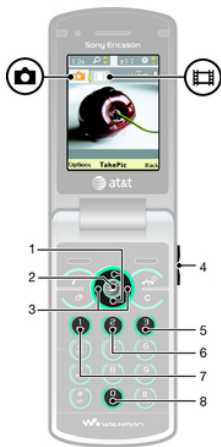


- 1 Zoom in or out
- 2 Take photos/Record video
- 3 Select still camera or video camera
- 4 Brightness
- 5 [Self-timer](#)
- 6 [Night mode](#)
- 7 Camera: [Shoot mode](#)
Video: [Video length](#)
- 8 Camera key guide

To take a photo

- 1 Activate the camera and press the navigation key to scroll to .
- 2 Press the center selection key to take a photo. The photo is automatically saved.

To record a video clip

- 1 Activate the camera and press the navigation key to scroll to .
- 2 Press the center selection key to start recording.
- 3 To stop recording, press the center selection key. The video clip is automatically saved.

To use zoom




- Press  or .

! *When taking a photo, zoom is available only in VGA picture size.*


To adjust brightness

- Press the volume key up or down.

To view photos

- 1 Activate the camera and press the navigation key to scroll to .
- 2 Select **Options** > **View all photos**
- 3 Press  or  to scroll to a photo.

To view video clips

- 1 Activate the camera and press the navigation key to scroll to .
- 2 Select **Options** > **View all clips**.
- 3 Scroll to a video clip and press the center selection key.

More camera features

To change settings

- Activate the camera and select **Options**.

To view information about settings


- Scroll to a setting and select **Info**.

Photo fix

You can use Photo fix to improve photos. In a one-click operation,

brightness, light and contrast are adjusted to give you the best possible photo. The improvements are saved as a copy of the photo. The original photo is not affected.

To improve a photo with Photo fix

- 1 Activate the camera and press the navigation key to scroll to .
- 2 Make sure **Review** is set to **On**. Select **Options** > **Review** > **On**.
- 3 Take a photo.
- 4 During review, select **Options** > **Photo fix**.

Camera tips and tricks

Rule of thirds

Don't place your subject in the middle of the frame. By placing it a third of the way in, you will achieve a better result.

Hold it steady

Avoid blurry pictures by holding the camera steady. Try to steady your hand by leaning it against a solid object.

Get closer

By getting as close as possible to your subject you won't have to rely on the zoom. Try to fill your viewfinder with your subject.

Stay within the flash range

Pictures taken beyond the maximum flash range will be too dark. The maximum flash range is about four steps away.

Consider variety

Think different angles, move towards the object. Take some vertical pictures. Try different positions.

Use a plain background

A plain background will help to highlight your subject.

Keep your lens clean

Phones are used in all manner of weather and places and carried in pockets and bags. This results in the camera lens becoming dirty and covered with fingerprints. Use a soft cloth to clean the lens.

Viewing and tagging photos

To view photos in a slide show

- 1 Select **Menu** > **Media** > **Camera media** > **Camera album**.
- 2 Select a month.
- 3 Scroll to a photo and select **View**.
- 4 Select **Options** > **Slide show**.
- 5 Select a mood.

Photo tags

You can organize your photos with photo tags. You can create new tags, assign one or several tags to a photo, or remove a tag from a photo. Photos with the same tag are put together under **Photo tags**. For example, you can add tag "Vacation" to all your vacation photos, and view them all in **Photo tags**, under the tag "Vacation".

To create a new photo tag

- 1 Select **Menu** > **Media** > **Camera media** > **Camera album**.
- 2 Select a month.
- 3 Scroll to a photo and select **View**.
- 4 Press **ⓘ** and select **Options** > **New tag**.
- 5 Enter a name and select **OK**.
- 6 Select an icon.
- 7 To tag the photo, select **Options** > **Tag this photo**.

To tag photos

- 1 Select **Menu** > **Media** > **Camera media** > **Camera album**.
- 2 Select a month.
- 3 Scroll to a photo and select **View**.
- 4 Press **ⓘ** and scroll to a tag.
- 5 Select **Options** > **Tag this photo**.
- 6 For each photo you want to tag, scroll to the photo and select **Options** > **Tag this photo**.

Using photos

You can add a photo to a contact.

To use photos

- 1 Select **Menu** > **Media** > **Camera media** > **Camera album**.
- 2 Select a month.
- 3 Scroll to a photo and select **View**.
- 4 Select **Options** > **Use as**.
- 5 Select an option.

Working with photos

You can view, enhance and organize your photos and video clips on your computer by installing the *Adobe™ Photoshop™ Album Starter Edition*. It is available for download at www.sonyericsson.com/support.

Use **Media Go™** to transfer content to and from your phone. For more information, see *Transferring content to and from a computer* on page 26.

PhotoDJ™ and VideoDJ™

You can edit photos and video clips.

To edit and save a photo

- 1 Select **Menu** > **Media** > **Photo** > **Camera album**.
- 2 Select a month.
- 3 Scroll to a photo and select **View**.

- 4 Select **Options** > **Edit in PhotoDJ™**.
- 5 Edit the photo.

To edit and save a video clip

- 1 Select **Menu** > **Tools & Apps** > **Tools** > **VideoDJ**.
- 2 Select **Add** > **Video clip** and scroll to a video clip.
- 3 Select **Edit** and choose an option.
- 4 Edit the video clip.
- 5 Select **Options** > **Save**.

To trim a video clip

- 1 Select **Menu** > **Tools & Apps** > **Tools** > **VideoDJ**.
- 2 Select **Add** > **Video clip** and scroll to a video clip.
- 3 Select **Edit** > **Trim**.
- 4 Select **OK** > **Set** > **Start** to set the starting point.
- 5 Select **Set** > **End** to set the ending point.
- 6 Select **Trim** > **Options** > **Save**.

Printing photos

You can print your photos by transferring them to a computer that is connected to a standard printer. For more information, see *Transferring content to and from a computer* on page 26. You can also print photos without a computer by connecting your

phone directly to a printer that accepts USB, Bluetooth, or Memory Stick Duo connections.

To print photos using a USB cable

- 1 Connect a USB cable to the phone.
- 2 Connect the USB cable to the printer.
- 3 Select [Menu](#) > [Settings](#) > the [Connectivity](#) tab > [USB](#) > [USB mode](#).
- 4 Disconnect and reconnect the cable to the phone.
- 5 Select [Print](#).
- 6 Select a month.
- 7 Scroll to a photo and select [Options](#) > [Print](#).

💡 *You should disconnect and re-connect the USB cable if there is a printer error.*

To print photos via memory stick

- 1 Save the photos on your phone to M2 Memory Stick.
- 2 Insert the M2 Memory Stick into a Memory Stick Duo adaptor.
- 3 Insert the Memory Stick Duo adaptor into a printer that accepts Memory Stick Duo.


! *You may have to purchase a M2 Memory Stick and a Memory Stick Duo adaptor separately.*

💡 *You can also print using a Bluetooth compatible printer that supports the Object Push Profile.*

MEdia™ Net

You can browse the Internet by accessing [MEdia Net](#).

To start browsing

- 1 Select .
- 2 Enter a Web address, a search phrase or the name of a bookmark.

To exit the browser

- Select [Options](#) > [Exit browser](#).

Bookmarks

You can create and edit bookmarks as quick links to your favorite Web pages.

To create a bookmark

- 1 When you browse the Internet, select [Options](#) > [Tools](#) > [Add Bookmark](#).
- 2 Enter a title and an address. Select [Save](#).

To select a bookmark

- 1 Select .
- 2 Select [Options](#) > [Go to](#) > [Bookmarks](#).
- 3 Scroll to a bookmark and select [Go to](#).

History pages



You can view Web pages you have browsed.

To view history pages

- Select  > [Options](#) > [Go to](#) > [History](#).

More browser features

To use pan and zoom on a Web page

- 1 When you browse the Internet, press .
- 2 Use the navigation key to move the frame.
- 3 Press [Zoom](#).
- 4 To switch back to pan, press .

- ! *To use pan and zoom, [Smart-Fit](#) must be turned off.*

To turn on or off Smart-Fit Rendering™

- 1 Select [Menu](#) > > [Options](#) > [Advanced](#) > [Smart-Fit](#).
- 2 Select an option.

To make a call when you browse

- Press .

To save a picture from a Web page

- 1 When you browse the Internet, select [Options](#) > [Tools](#) > [Save picture](#).
- 2 Select a picture.

To find text on a Web page

- 1 Select [Options](#) > [Tools](#) > [Find on page](#).
- 2 Enter text and select [Find](#).


 


To send a link

- 1 When you browse the Internet, select [Options](#) > [Tools](#) > [Send link](#).
- 2 Select a transfer method.


- ! *Make sure the receiving device supports the transfer method you select.*

Internet keypad shortcuts

You can use the keypad to go directly to an Internet browser function.

Key	Shortcut
	Bookmarks
	Enter text to Enter address , Search Internet or search in Bookmarks
	Zoom
	Pan & zoom (when Smart-Fit is off)

To select Internet keypad shortcuts

- 1 Select .
- 2 Select [Options](#) > [Advanced](#) > [Keypad mode](#) > [Shortcuts](#).

Internet security and certificates

Your phone supports secure browsing. Certain Internet services, such as banking, require certificates in your phone. Your phone may already contain certificates when you buy it or you can download new certificates.

To view certificates in the phone

- Select **Menu** > **Settings** > **General** > **Security** > **Certificates**.

Synchronizing


You can synchronize your phone using a computer program.

For more information, go to www.sonyericsson.com/support to read the *Synchronization Feature* guide.

Synchronizing using a computer

You can use a USB cable or Bluetooth wireless technology to synchronize phone contacts, appointments, bookmarks, tasks and notes with a computer program such as Microsoft Outlook®.

Before synchronizing, you need to install the *Sony Ericsson PC Suite*.

-  *Sony Ericsson PC Suite software is available for download at www.sonyericsson.com/support.*

See *Required operating systems* on page 27.

To download Sony Ericsson PC Suite

- 1 **Computer:** In your Internet browser, go to www.sonyericsson.com/support.
- 2 Select a region and country.
- 3 Select *Software downloads*.

- 4 Select a phone from the list.
- 5 Select *Read more and download* under *PC Suite*.
- 6 Select *Download now* and save the file to your computer.

💡 *Remember where you save the file.*

To install Sony Ericsson PC Suite from the downloaded file

- 1 Locate the downloaded *Sony Ericsson PC Suite* file on the computer.
- 2 Double-click the file and follow the instructions.

To synchronize using the Sony Ericsson PC Suite

- 1 **Computer:** Start *Sony Ericsson PC Suite* from *Start/Programs/Sony Ericsson/Sony Ericsson PC Suite*.
- 2 Follow the instructions in the *Sony Ericsson PC Suite* for how to connect.
- 3 **Phone:** Select [Phone mode](#).
- 4 **Computer:** When you are notified that the *Sony Ericsson PC Suite* has found your phone, you can start synchronizing.

💡 *For usage details, see the Sony Ericsson PC Suite Help section once the software has been installed on your computer.*

More features

Flight mode

In [Flight mode](#) the network and radio transceivers are turned off to prevent disturbance to sensitive equipment.

When the flight mode menu is activated you are asked to select a mode the next time you turn on your phone:

- [Normal mode](#) – full functionality
- [Flight mode](#) – limited functionality

To activate the flight mode menu

- Select [Menu](#) > [Settings](#) > [General](#) > [Flight mode](#) > [Continue](#) > [Show at startup](#).

To select flight mode

- 1 When the flight mode menu is activated, turn off your phone.
- 2 Turn on your phone and select [Flight mode](#).

Gesture control

When the phone is closed, you can mute incoming calls or snooze alarms with a hand gesture.

To use gesture control

- When a call comes in or the alarm rings, a light appears adjacent to the camera.

When the light appears, sweep your hand back and forth once in front of the camera lens to mute the call or snooze the alarm.

! *The distance between your hand and the camera lens must be 0–3 inches (0–7 cm).*

To turn on gesture control

- Select [Menu](#) > [Settings](#) > [General](#) > [Gesture control](#) > [Turn on](#).

Alarms

You can set a sound or the radio as an alarm signal. The alarm sounds even if the phone is turned off. When the alarm sounds you can silence it or turn it off.


To set the alarm

- 1 Select [Menu](#) > [Tools & Apps](#) > [Alarms](#).
- 2 Scroll to an alarm and select [Edit](#).
- 3 Scroll to [Time:](#) and select [Edit](#).
- 4 Enter a time and select [OK](#) > [Save](#).

To set the recurring alarm

- 1 Select [Menu](#) > [Tools & Apps](#) > [Alarms](#).
- 2 Scroll to an alarm and select [Edit](#).
- 3 Scroll to [Recurrent:](#) and select [Edit](#).
- 4 Scroll to a day and select [Mark](#).
- 5 To select another day, scroll to the day and select [Mark](#).
- 6 Select [Done](#) > [Save](#).

To set the alarm signal

- 1 Select [Menu](#) > [Tools & Apps](#) > [Alarms](#).
- 2 Scroll to an alarm and select [Edit](#).
- 3 Scroll to the  tab.
- 4 Scroll to [Alarm signal:](#) and select [Edit](#).
- 5 Find and select an alarm signal. Select [Save](#).

To silence the alarm

- When the alarm sounds, press any key.
- To repeat the alarm, select [Snooze](#).

To turn off the alarm

- When the alarm sounds, press any key, then select [Turn off](#).


To cancel the alarm

- 1 Select [Menu](#) > [Tools & Apps](#) > [Alarms](#).
- 2 Scroll to an alarm and select [Turn off](#).

The alarm in silent mode

You can set the alarm not to sound when the phone is in silent mode.

To set an alarm to sound or not in silent mode

- 1 Select [Menu](#) > [Tools & Apps](#) > [Alarms](#).
- 2 Scroll to an alarm and select [Edit](#).
- 3 Scroll to the  tab.
- 4 Scroll to [Silent mode](#) and select [Edit](#).
- 5 Select an option.

To set the snooze duration

- 1 Select **Menu > Tools & Apps > Alarms.**
- 2 Scroll to an alarm and select **Edit.**
- 3 Scroll to **Snooze duration** and select **Edit.**
- 4 Select an option.

Calendar

- 💡 *You can synchronise your calendar with a computer calendar, with a calendar on the Web or with a Microsoft® Exchange Server (Microsoft® Outlook®).*
- 💡 *You can synchronize your calendar with a Microsoft® Exchange Server (Microsoft® Outlook®).*

Appointments

You can add new appointments or reuse existing appointments.

To add an appointment

- 1 Select **Menu > Tools & Apps > Organizer > Calendar.**
- 2 Select a date.
- 3 Scroll to **New appointment** and select **Add.**
- 4 Enter the information and confirm each entry.
- 5 Select **Save.**

To view an appointment

- 1 Select **Menu > Tools & Apps > Organizer > Calendar.**
- 2 Select a date.
- 3 Scroll to an appointment and select **View.**

To edit an appointment

- 1 Select **Menu > Tools & Apps > Organizer > Calendar.**
- 2 Select a date.
- 3 Scroll to an appointment and select **View.**
- 4 Select **Options > Edit.**
- 5 Edit the appointment and confirm each entry.
- 6 Select **Save.**

To set when reminders should sound

- 1 Select **Menu > Tools & Apps > Organizer > Calendar.**
- 2 Select a date.
- 3 Select **Options > Advanced > Reminders.**
- 4 Select an option.

! *A reminders option set in calendar affects a reminders option set in tasks.*

Notes

You can make notes and save them.
You can also show a note in standby.

To add a note

- 1 Select [Menu](#) > [Tools & Apps](#) > [Organizer](#) > [Notes](#).
- 2 Scroll to [New note](#) and select [Add](#).
- 3 Write a note and select [Save](#).

To show a note in standby

- 1 Select [Menu](#) > [Tools & Apps](#) > [Organizer](#) > [Notes](#).
- 2 Scroll to a note and select [Options](#) > [Show in standby](#).

To hide a note from standby

- 1 Select [Menu](#) > [Tools & Apps](#) > [Organizer](#) > [Notes](#).
- 2 Scroll to the note shown in standby. This is marked with an icon. Select [Options](#) > [Hide in standby](#).

Tasks

You can add new tasks or reuse existing tasks.

To add a task

- 1 Select [Menu](#) > [Tools & Apps](#) > [Organizer](#) > [Tasks](#).
- 2 Select [New task](#) and select [Add](#).
- 3 Enter an option.
- 4 Enter details and confirm each entry.

To set when reminders should sound

- 1 Select [Menu](#) > [Tools & Apps](#) > [Organizer](#) > [Tasks](#).
- 2 Scroll to a task and select [Options](#) > [Reminders](#).
- 3 Select an option.

! A reminders option set in tasks affects a reminders option set in calendar.

Profiles

You can change settings such as the ring volume and vibrating alert to suit different locations. You can reset all profiles to the phone's original settings.

To select a profile

- 1 Select [Menu](#) > [Settings](#) > [General](#) > [Profiles](#).
- 2 Select a profile.

To view and edit a profile

- 1 Select [Menu](#) > [Settings](#) > [General](#) > [Profiles](#).
- 2 Scroll to a profile and select [Options](#) > [View and edit](#).

! You cannot rename the *Normal* profile.

Time and date

To set the time

- 1 Select **Menu** > **Settings** > **General** > **Time & date** > **Time**.
- 2 Enter the time and select **Save**.

To set the date

- 1 Select **Menu** > **Settings** > **General** > **Time & date** > **Date**.
- 2 Enter the date and select **Save**.

To set the time zone

- 1 Select **Menu** > **Settings** > **General** > **Time & date** > **My time zone**.
- 2 Select the time zone you are in.

! If you select a city, *My time zone* also updates the time when daylight saving time changes.

Theme

You can change the appearance of the screen through items such as colors and wallpaper. You can also create new themes and download them. For more information, go to www.sonyericsson.com/fun.

To set a theme

- 1 Select **Menu** > **Settings** > **Display** > **Theme**.
- 2 Scroll to a theme and select **Set**.

Main menu layout

You can change the layout of the icons in the main menu.

To change the main menu layout

- 1 Select **Menu** > **Options** > **Main menu layout**.
- 2 Select an option.

Ringtones


 
To set a ringtone

- 1 Select **Menu** > **Settings** > **Sounds & alerts** > **Ringtone**.
- 2 Find and select a ringtone.

To set the ringtone volume

- Use the side volume keys to raise or lower the volume.

To turn off the ringtone

- Press  and then press and hold down .

! The alarm signal is not affected.

To set the vibrating alert

- 1 Select **Menu** > **Settings** > **Sounds & alerts** > **Vibrating alert**.
- 2 Select an option.

Screen orientation

You can change between landscape and portrait orientation, or select [Auto rotate](#) to have the orientation change when you rotate the phone.

To change screen orientation in the browser

- 1 Select .
- 2 Select [Options](#) > [View](#).
- 3 Select [Landscape](#) or [Portrait](#).

To change screen orientation in Media

- 1 Select [Menu](#) > [Media](#) > [Settings](#) > [Orientation](#).
- 2 Select an option.


Games

Your phone contains preloaded games. You can also download games. For more information, go to www.sonyericsson.com/fun. Help texts are available for most games.

To start a game

- 1 Select [Menu](#) > [Media](#) > [Games](#).
- 2 Select a game.

To end a game

- Press .

Applications

You can download and run Java applications. You can also view information or set different permissions.

To select a Java application

- 1 Select [Menu](#) > [Tools & Apps](#) > [Applications](#).
- 2 Select an application.

Java application screen size

Some Java applications are designed for a specific screen size. For more information, contact the application vendor.

! *The screen size of your phone is 240 x 320 pixels.*

To set the screen size for a Java application

- 1 Select [Menu](#) > [Tools & Apps](#) > [Applications](#).
- 2 Scroll to an application and select [Options](#) > [Screen size](#).
- 3 Select an option.

To set a Java™ application as a wallpaper

- 1 Select [Menu](#) > [Settings](#) > [Display](#).
- 2 Select [Wallpaper](#) > [Application](#).

- 3 Select a Java application.

! *You can only see the Java applications that have support for wallpaper.*

Locks

SIM card lock

This lock only protects your subscription. Your phone will work with a new SIM card. If the lock is on, you have to enter a PIN (Personal Identity Number).

If you enter your PIN incorrectly three times in a row, the SIM card is blocked and you need to enter your PUK (Personal Unblocking Key). Your PIN and PUK are supplied by AT&T.

To unblock the SIM card

- 1 When **PIN blocked** appears, enter your PUK and select **OK**.
- 2 Enter a new four-to-eight-digit PIN and select **OK**.
- 3 Re-enter the new PIN and select **OK**.

To edit the PIN

- 1 Select **Menu > Settings > General > Security > Locks > SIM protection > Change PIN**.
- 2 Enter your PIN and select **OK**.
- 3 Enter a new four-to-eight-digit PIN and select **OK**.

- 4 Re-enter the new PIN and select **OK**.

! *If **Codes do not match** appears, you entered the new PIN incorrectly. If **Wrong PIN** appears, followed by **Old PIN**, you entered your old PIN incorrectly.*

To use the SIM card lock

- 1 Select **Menu > Settings > General > Security > Locks > SIM protection > Protection**.
- 2 Select an option.
- 3 Enter your PIN and select **OK**.

Phone lock

You can stop unauthorized use of your phone. Change the phone lock code (0000) to any four-to-eight-digit personal code.

! *It is important that you remember your new code. If you forget it, you have to take your phone to your local Sony Ericsson retailer.*

To use the phone lock

- 1 Select **Menu > Settings > General > Security > Locks > Phone protection > Protection**.
- 2 Select an option.
- 3 Enter the phone lock code and select **OK**.

To unlock the phone

- Enter your code and select **OK**.

To change the phone lock code

- 1 Select **Menu** > **Settings** > **General** > **Security** > **Locks** > **Phone protection** > **Change code**.
- 2 Enter the old code and select **OK**.
- 3 Enter the new code and select **OK**.
- 4 Repeat the code and select **OK**.

Password Saver

You can save security codes, for example, for credit cards. You must set a passcode to open the Password Saver.

Checkword

The checkword confirms that you have entered the correct passcode. If the passcode is correct, the correct codes are shown. If the passcode is incorrect, the checkword and the codes shown are also incorrect.

To open Password Saver for the first time

- 1 Select **Menu** > **Tools & Apps** > **Organizer** > **Code memo**.
- 2 Follow the instructions that appear and select **Continue**.
- 3 Enter a passcode and select **Continue**.

- 4 Confirm the passcode and select **Continue**.
- 5 Enter a checkword and select **Done**.

To add a code

- 1 Select **Menu** > **Tools & Apps** > **Organizer** > **Code memo**.
- 2 Enter a passcode and select **Continue**.
- 3 Scroll to **New code** and select **Add**.
- 4 Enter a name associated with the code and select **Continue**.
- 5 Enter the code and select **Done**.

To change a passcode

- 1 Select **Menu** > **Tools & Apps** > **Organizer** > **Code memo**.
- 2 Enter your passcode and select **Ok**.
- 3 Select **Options** > **Change passcode**.
- 4 Enter your new passcode and select **Ok**.
- 5 Re-enter the new passcode and select **Ok**.

Forget your passcode?

If you forget your passcode, you must reset the Password Saver. This means that all entries in the Password Saver are deleted. The next time you enter the Password Saver, you must proceed as if you are opening it for the first time. See *To open Password Saver for the first time* on page 58.

IMEI number

Keep a copy of your IMEI (International Mobile Equipment Identity) number in case your phone is stolen.

To view your IMEI number

- Press ***#06#**, **#06#**, **0+**, **6**, **#06#**.

Using the flip

When the phone is closed, you can use the media player keys on the flip to control your Walkman™ player or radio. You can lock these keys to avoid accidental touch.

To unlock the media player keys

- Slide the key lock switch away from **⏏**.

To lock the media player keys

- Slide the key lock switch towards **⏏**.

Troubleshooting

Some problems will require you to call AT&T.

For more support go to www.sonyericsson.com/support.

Common questions

I have problems with memory capacity or the phone is working slowly

Restart your phone every day to free memory or do a [Master reset](#).

Master reset

If you select [Reset settings](#), the changes that you have made to settings will be deleted.

If you select [Reset all](#), your settings and content, such as contacts, messages, pictures, sounds and downloaded games, will be deleted. You may also lose content that was in the phone at purchase.

To reset the phone

- 1 Select [Menu](#) > [Settings](#) > [General](#) > [Master reset](#).
- 2 Select an option.
- 3 Follow the instructions that appear.

I cannot charge the phone or battery capacity is low

The charger is not properly connected or the battery connection is poor. Remove the battery and clean the connectors.

The battery is worn out and needs to be replaced. See *Charging the battery* on page 7.

No battery icon appears when I start charging the phone

It may take a few minutes before the battery icon appears on the screen.

Some menu options appear in gray

A service is not activated. Contact AT&T.


I cannot use Internet-based services

Your subscription does not include data capability. Settings are missing or incorrect.

You can download settings using the setup wizard or by going to www.sonyericsson.com/support.

To download settings

- 1 Select **Menu > Settings > User help > Settings download**.
- 2 Follow the instructions that appear.

 *Contact your network operator or service provider for more information.*

I cannot send messages from my phone

Most messages require a service center number to send them. The number is supplied by AT&T and is usually saved on the SIM card. If the number to your service center is not saved on your SIM card, you must enter the number yourself. To send most picture messages, you must set an MMS profile and the address of your message server.

To send most multimedia messages, you must set an MMS profile and the address of your message server. If no MMS profile or message server exists, you may be able to obtain the settings automatically from AT&T or atwww.sonyericsson.com/support.

To enter a service center number

- 1 Select **Menu > Settings > Connectivity > Message settings > Text message** and scroll to **Service centre**. The number is shown if it is saved on the SIM card.
- 2 If there is no number shown, select **Edit**.
- 3 Scroll to **New ServiceCentre** and select **Add**.

- 4 Enter the number, including the international “+” sign and country code.
- 5 Select [Save](#).

To select an MMS profile

- 1 Select [Menu](#) > [Settings](#) > [Connectivity](#) > [Message settings](#) > [Picture message](#).
- 2 Select an existing profile or create a new one.

To set the message server address

- 1 Select [Menu](#) > [Settings](#) > [Connectivity](#) > [Message settings](#) > [Picture message](#).
- 2 Scroll to a profile and select [Options](#) > [Edit](#).
- 3 Scroll to [Message server](#) and select [Edit](#).
- 4 Enter the address and select [OK](#) > [Save](#).

The phone does not ring or rings too softly

Make sure that [Silent mode](#) has not been set to [On](#). See *To turn off the ringtone* on page 55.

Check the ringtone volume. See *To set the ringtone volume* on page 55.

Check the profile. See *To select a profile* on page 54.

Check the forward call options. See *To forward calls* on page 37.

The phone cannot be detected by other devices using Bluetooth wireless technology

You have not turned the Bluetooth function on. Make sure that the visibility is set to [Show phone](#). See *To turn on the Bluetooth function* on page 28.

I cannot synchronize or transfer content between my phone and my computer, when using a USB cable.

The cable or software has not been properly installed. Go to www.sonyericsson.com/support to read Feature guides which contain detailed installation instructions and troubleshooting sections.

I have forgotten my Password Saver passcode

If you forget your passcode, you must reset the Password Saver. This means that all entries in the Password Saver are deleted. The next time you enter the Password Saver, you must proceed as if you are opening it for the first time.

To reset Password Saver

- 1 Select [Menu](#) > [Tools & Apps](#) > [Organizer](#) > [Code memo](#).

- 2 Enter an incorrect passcode three times.
- 3 **Reset code memo and delete all items?** appears.
- 4 Select **Yes**.

Where can I find the regulatory information such as my IMEI number if I cannot turn on my phone?



Error messages

Insert SIM

There is no SIM card in your phone or you may have inserted it incorrectly.

See *To insert the SIM card* on page 6.

The SIM card connectors need cleaning. If the card is damaged, contact AT&T.

Insert correct SIM card

Your phone is set to work only with certain SIM cards. Check if you are using the correct operator SIM card.

Wrong PIN/Wrong PIN2

You have entered your PIN or PIN2 incorrectly.

Enter the correct PIN or PIN2 and select **Yes**.

PIN blocked/PIN2 blocked

You have entered your PIN or PIN2 code incorrectly three times in a row.

To unblock, see *SIM card lock* on page 57.

Codes do not match

Codes that you have entered do not match. When you want to change a security code, for example your PIN, you have to confirm the new code. See *SIM card lock* on page 57.

No netw. coverage

Your phone is in flight mode. See *Flight mode* on page 51.

Your phone is not receiving any network signal, or the received signal is too weak. Contact AT&T and make sure that the network has coverage where you are.

The SIM card is not working properly. Insert your SIM card in another phone. If this works, it is probably your phone

that is causing the problem. Please contact the nearest Sony Ericsson service location.

Emerg. calls only

You are within range of a network, but you are not allowed to use it. However, in an emergency, some network operators allow you to call the international emergency number 112. See *Emergency calls* on page 32.

PUK blocked. Contact operator.

You entered your personal unblocking key code (PUK) incorrectly 10 times in a row.

Hearing Aid Compatibility

Your phone is designed for Hearing Aid Compatibility (HAC) and uses settings to optimize its use with hearing aids.

Hearing Aid Settings

You can choose the setting in the phone to match the setting in your hearing aid before making or receiving calls.

To select a phone setting for HAC

- Select **Menu > Settings > General > Accessibility > Hearing aid** and choose an option:
- **On** – Use when your hearing aid is set to T-coil mode.
- **Off** – Use when your hearing aid is set to Microphone mode.

Hearing Aid Compatibility and New Technologies

This phone has been tested and rated for use with hearing aids for some of the wireless technologies that it uses. However, there may be some newer wireless technologies used in this phone that have not been tested yet for use with hearing aids. It is important to

try the different features of this phone thoroughly and in different locations, using your hearing aid or cochlear implant, to determine if you hear any interfering noise. Consult your service provider about its return and exchange policies and for information on hearing aid compatibility.

Hearing Aid Compatibility Rating

This model handset was designed to comply with the requirements set forth in Section 20.19 of the Federal Communication Commission's (FCC) rules governing hearing aid compatibility (HAC), for the reduction of RF interference and magnetic coupling (T-coil) to hearing aids. The Microphone (M) rating and T-coil (T) rating is defined and labeled on the handset box. Devices meeting HAC compliance must have a minimum M3 and/or T3 rating or above as defined by the FCC in accordance with the latest ANSI Standard C63.19. The (M) rating refers to lower RF emission levels of the handset. The (T) rating refers to the magnetic coupling between the handset and the T-coil compatible hearing aid. Some hearing aids are also provided an (M) rating, and are more

immune than others to interference. To determine the (M) rating of your hearing aid, please contact your hearing health professional. More information about digital wireless devices and hearing aid compatibility can be found at www.sonyericsson-snc.com.

Important information

Sony Ericsson Consumer Web site

At www.sonyericsson.com/support there is a support section where help and tips are only a few clicks away. Here you will find the latest computer software updates and tips on how to use your product more efficiently.

Service and support

You have access to a portfolio of exclusive service advantages such as:

- Global and local Web sites providing support.
- A global network of call centers.
- An extensive network of Sony Ericsson service partners.
- A warranty period. Learn more about the warranty conditions in the Important information.

At www.sonyericsson.com/support, you can find the latest support tools and information. For operator-specific services and features, please contact your network operator.

You can also contact our call centers. If your country/region is not represented in the list below, please contact your local dealer. (Calls are charged according to national rates, including local taxes, unless the phone number is a toll-free number.)

If your product needs service, please contact the dealer from whom it was purchased, or one of our service partners. For warranty claims, save proof of purchase.

Guidelines for Safe and Efficient Use

Please follow these guidelines. Failure to do so might entail a potential health risk or product malfunction. If in doubt as to its proper function, have the product checked by a certified service partner before charging or using it.



Recommendations for care and safe use of our products

- Handle with care and keep in a clean and dust-free place.
- **Warning!** May explode if disposed of in fire.
- Do not expose to liquid or moisture or excess humidity.
- For optimum performance, the product should not be operated in temperatures below +14°F(-10°C) or above +113°F(+45°C). Do not expose the battery to temperatures above +140°F(+60°C).
- Do not expose to flames or lit tobacco products.
- Do not drop, throw or try to bend the product.
- Do not paint or attempt to disassemble or modify the product. Only Sony Ericsson authorized personnel should perform service.
- Consult with authorized medical staff and the instructions of the medical device manufacturer before using the product near pacemakers or other medical devices or equipment.
- Discontinue use of electronic devices, or disable the radio transmitting functionality of the device, where required or requested to do so.
- Do not use where a potentially explosive atmosphere exists.



- Do not place the product, or install wireless equipment, in the area above an air bag in a car.
- **Caution:** Cracked or broken displays may create sharp edges or splinters that could be harmful upon contact.
- Do not use the Bluetooth Headset in positions where it is uncomfortable or will be subject to pressure.

Children

Warning! Keep out of the reach of children. Do not allow children to play with phones or accessories. They could hurt themselves or others. Products may contain small parts that could become detached and create a choking hazard.



Power supply (Charger)

Connect the charger to power sources as marked on the product. Do not use outdoors or in damp areas. Do not alter or subject the cord to damage or stress. Unplug the unit before cleaning it. Never alter the plug. If it does not fit into the outlet, have a proper outlet installed by an electrician. When a power supply is connected there is a small drain of power. To avoid this small energy waste, disconnect the power supply when the product is fully charged. Use of charging devices that are not Sony Ericsson branded may pose increased safety risks.

Battery

New or idle batteries can have short-term reduced capacity. Fully charge the battery before initial use. Use for the intended purpose only. Charge the battery in temperatures between +41°F(+5°C) and +113°F(+45°C). Do not put the battery into your mouth. Do not let the battery contacts touch another metal object. Turn off the product before removing the battery. Performance depends on temperatures, signal strength, usage patterns, features selected

and voice or data transmissions. Only Sony Ericsson service partners should remove or replace built-in batteries. Use of batteries that are not Sony Ericsson branded may pose increased safety risks. Replace the battery only with another Sony Ericsson battery that has been qualified with the product per the standard IEEE-1725. Use of an unqualified battery may present a risk of fire, explosion, leakage or other hazard.

Personal medical devices

Mobile phones may affect implanted medical equipment. Reduce risk of interference by keeping a minimum distance of 6 inches (15 cm) between the phone and the device. Use the phone at your right ear. Do not carry the phone in your breast pocket. Turn off the phone if you suspect interference. For all medical devices, consult a physician and the manufacturer.

Driving

Some vehicle manufacturers forbid the use of phones in their vehicles unless a handsfree kit with an external antenna supports the installation. Check with the vehicle manufacturer's representative to be sure that the phone or Bluetooth handsfree will not affect the electronic systems in the vehicle. Full attention should be given to driving at all times and local laws and regulations restricting the use of wireless devices while driving must be observed.

GPS/Location based functions

Some products provide GPS/Location based functions. Location determining functionality is provided "As is" and "With all faults". Sony Ericsson does not make any representation or warranty as to the accuracy of such location information.

Use of location-based information by the device may not be uninterrupted or error free and may

additionally be dependent on network service availability. Please note that functionality may be reduced or prevented in certain environments such as building interiors or areas adjacent to buildings. Caution: Do not use GPS functionality in a manner which causes distraction from driving.

Emergency calls

Calls cannot be guaranteed under all conditions. Never rely solely upon mobile phones for essential communication. Calls may not be possible in all areas, on all networks, or when certain network services and/or phone features are used.

Antenna

Use of antenna devices not marketed by Sony Ericsson could damage the phone, reduce performance, and produce SAR levels above the established limits. Do not cover the antenna with your hand as this affects call quality, power levels and can shorten talk and standby times.

Radio Frequency (RF) exposure and Specific Absorption Rate (SAR)

When the phone or Bluetooth handsfree is turned on, it emits low levels of radio frequency energy. International safety guidelines have been developed through periodic and thorough evaluation of scientific studies. These guidelines establish permitted levels of radio wave exposure. The guidelines include a safety margin designed to assure the safety of all persons and to account for any variations in measurements.

Specific Absorption Rate (SAR) is used to measure radio frequency energy absorbed by the body when using a mobile phone. The SAR value is determined at the highest certified power level in laboratory conditions, but because the phone is designed to use the minimum power necessary to access the chosen network, the actual SAR level can be well

below this value. There is no proof of difference in safety based on difference in SAR value.

Products with radio transmitters sold in the US must be certified by the Federal Communications Commission (FCC). When required, tests are performed when the phone is placed at the ear and when worn on the body. For body-worn operation, the phone has been tested when positioned a minimum of 15 mm from the body without any metal parts in the vicinity of the phone or when properly used with an appropriate Sony Ericsson accessory and worn on the body.

For more information about SAR and radio frequency exposure, go to:
www.sonyericsson.com/health.

Flight mode

Bluetooth and WLAN functionality, if available in the device, can be enabled in Flight mode but may be prohibited onboard aircraft or in other areas where radio transmissions are prohibited. In such environments, please seek proper authorization before enabling Bluetooth or WLAN functionality even in Flight mode.

Malware

Malware (short for malicious software) is software that can harm the phone or other computers. Malware or harmful applications can include viruses, worms, spyware, and other unwanted programs. While the device does employ security measures to resist such efforts, Sony Ericsson does not warrant or represent that the device will be impervious to the introduction of malware. You can however reduce the risk of malware attacks by using care when downloading content or accepting applications, refraining from opening or responding to messages from unknown sources, using trustworthy services to access the Internet, and only downloading content to the phone from known, reliable sources.

Accessories

Use only Sony Ericsson branded original accessories and certified service partners. Sony Ericsson does not test third-party accessories. Accessories may influence RF exposure, radio performance, loudness, electric safety and other areas. Third-party accessories and parts may pose a risk to your health or safety or decrease performance.

Accessible Solutions/Special Needs

In the US, compatible Sony Ericsson phones may offer compatibility with TTY terminals (with use of necessary accessory). For more information call the Sony Ericsson Special Needs Center on 877 878 1996 (TTY) or 877 207 2056 (voice), or go to www.sonyericsson-snc.com.

Disposal of old electrical and electronic equipment



Electronic equipment and batteries should not be included as household waste but should be left at an appropriate collection point for recycling. This helps prevent potential negative consequences for the environment and human health. Check local regulations by contacting your local city office, your household waste disposal service, the shop where you purchased the product or calling a Sony Ericsson call center.

Disposing of the battery



Check local regulations or call a Sony Ericsson call center for information. Never use municipal waste.

Memory card

If the product comes complete with a removable memory card, it is generally compatible with the handset purchased but may not be compatible with

other devices or the capabilities of their memory cards. Check other devices for compatibility before purchase or use. If the product is equipped with a memory card reader, check memory card compatibility before purchase or use.

Memory cards are generally formatted prior to shipping. To reformat the memory card, use a compatible device. Do not use the standard operating system format when formatting the memory card on a PC. For details, refer to the operating instructions of the device or contact customer support.

Warning!

If the device requires an adapter for insertion into the handset or another device, do not insert the card directly without the required adapter.

Precautions on memory card use

- Do not expose the memory card to moisture.
- Do not touch terminal connections with your hand or any metal object.
- Do not strike, bend, or drop the memory card.
- Do not attempt to disassemble or modify the memory card.
- Do not use or store the memory card in humid or corrosive locations or in excessive heat such as a closed car in summer, in direct sunlight or near a heater, etc.
- Do not press or bend the end of the memory card adapter with excessive force.
- Do not let dirt, dust, or foreign objects get into the insert port of any memory card adapter.
- Check you have inserted the memory card correctly.
- Insert the memory card as far as it will go into any memory card adapter needed. The memory card may not operate properly unless fully inserted.
- We recommend that you make a backup copy of important data. We are not responsible for any

loss or damage to content you store on the memory card.

- Recorded data may be damaged or lost when you remove the memory card or memory card adapter, turn off the power while formatting, reading or writing data, or use the memory card in locations subject to static electricity or high electrical field emissions.

Protection of personal information

Erase personal data before disposing of the product. To delete data, perform a master reset. Deleting data from the phone memory does not ensure that it cannot be recovered. Sony Ericsson does not warrant against recovery of information and does not assume responsibility for disclosure of any information even after a master reset.

Loudness warning!

Avoid volume levels that may be harmful to your hearing.

End User License Agreement

Software delivered with this device and its media is owned by Sony Ericsson Mobile Communications AB, and/or its affiliated companies and its suppliers and licensors.

Sony Ericsson grants you a non-exclusive limited license to use the Software solely in conjunction with the Device on which it is installed or delivered. Ownership of the Software is not sold, transferred or otherwise conveyed.

Do not use any means to discover the source code or any component of the Software, reproduce and distribute the Software, or modify the Software. You are entitled to transfer rights and obligations to the Software to a third party, solely together with the Device with which you received the Software, provided the third party agrees in writing to be bound by the terms of this License.

This license exists throughout the useful life of this Device. It can be terminated by transferring your rights to the Device to a third party in writing. Failure to comply with any of these terms and conditions will terminate the license immediately. Sony Ericsson and its third party suppliers and licensors retain all rights, title and interest in and to the Software. To the extent that the Software contains material or code of a third party, such third parties shall be beneficiaries of these terms.

This license is governed by the laws of Sweden. When applicable, the foregoing applies to statutory consumer rights.

In the event Software accompanying or provided in conjunction with your device is provided with additional terms and conditions, such provisions shall also govern your possession and usage of the Software.

Limited Warranty

Sony Ericsson Mobile Communications AB, SE-221 88 Lund, Sweden, (Sony Ericsson) or its local affiliated company, provides this Limited Warranty for your phone, original accessory delivered with your phone, and/or your mobile computing product (hereinafter referred to as "Product").

Should your Product need warranty service, please return it to the dealer from whom it was purchased, or contact your local Sony Ericsson Call Center (national rates may apply) or visit www.sonyericsson.com to get further information.

Our warranty

Subject to the conditions of this Limited Warranty, Sony Ericsson warrants this Product to be free from defects in design, material and workmanship at the time of its original purchase by a consumer. This Limited Warranty will last for a period of one (1) year as from the original date of purchase of the Product.

What we will do

If, during the warranty period, this Product fails to operate under normal use and service, due to defects in design, materials or workmanship, Sony Ericsson authorized distributors or service partners, in the country/region* where you purchased the Product, will, at their option, either repair or replace the Product in accordance with the terms and conditions stipulated herein.

Sony Ericsson and its service partners reserve the right to charge a handling fee if a returned Product is found not to be under warranty according to the conditions below.

Please note that some of your personal settings, downloads and other information may be lost when your Sony Ericsson Product is repaired or replaced. At present, Sony Ericsson may be prevented by applicable law, other regulation or technical restrictions from making a backup copy of certain downloads. Sony Ericsson does not take any responsibility for any lost information of any kind and will not reimburse you for any such loss. You should always make backup copies of all the information stored on your Sony Ericsson Product such as downloads, calendar and contacts before handing in your Sony Ericsson Product for repair or replacement.

Conditions

1. This Limited Warranty is valid only if the original proof of purchase for this Product issued by a Sony Ericsson authorized dealer specifying the date of purchase and serial number**, is presented with the Product to be repaired or replaced. Sony Ericsson reserves the right to refuse warranty service if this information has been removed or changed after the original purchase of the Product from the dealer.
2. If Sony Ericsson repairs or replaces the Product, the repair for the defect concerned, or the replaced Product shall be warranted for the remaining time of

the original warranty period or for ninety (90) days from the date of repair, whichever is longer. Repair or replacement may involve the use of functionally equivalent reconditioned units. Replaced parts or components will become the property of Sony Ericsson.

3. This warranty does not cover any failure of the Product due to normal wear and tear, or due to misuse, including but not limited to use in other than the normal and customary manner, in accordance with the Sony Ericsson instructions for use and maintenance of the Product. Nor does this warranty cover any failure of the Product due to accident, software or hardware modification or adjustment, acts of God or damage resulting from liquid. A rechargeable battery can be charged and discharged more than a hundred times. However, it will eventually wear out – this is not a defect and corresponds to normal wear and tear. When the talk-time or standby time is noticeably shorter, it is time to replace the battery. Sony Ericsson recommends that you use only batteries and chargers approved by Sony Ericsson. Minor variations in display brightness and color may occur between phones. There may be tiny bright or dark dots on the display. These are called defective pixels and occur when individual dots have malfunctioned and can not be adjusted. Two defective pixels are deemed acceptable. Minor variations in camera image appearance may occur between phones. This is nothing uncommon and is not regarded as a defective camera module.
4. Since the cellular system on which the Product is to operate is provided by a carrier independent from Sony Ericsson, Sony Ericsson will not be responsible for the operation, availability, coverage, services or range of that system.
5. This warranty does not cover Product failures caused by installations, modifications, or repair or opening of the Product performed by a non-Sony Ericsson authorized person.

6. The warranty does not cover Product failures which have been caused by use of accessories or other peripheral devices which are not Sony Ericsson branded original accessories intended for use with the Product.
7. Tampering with any of the seals on the Product will void the warranty.
8. THERE ARE NO EXPRESS WARRANTIES, WHETHER WRITTEN OR ORAL, OTHER THAN THIS PRINTED LIMITED WARRANTY. ALL IMPLIED WARRANTIES, INCLUDING WITHOUT LIMITATION THE IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED TO THE DURATION OF THIS LIMITED WARRANTY. IN NO EVENT SHALL SONY ERICSSON OR ITS LICENSORS BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES OF ANY NATURE WHATSOEVER, INCLUDING BUT NOT LIMITED TO LOST PROFITS OR COMMERCIAL LOSS TO THE FULL EXTENT THOSE DAMAGES CAN BE DISCLAIMED BY LAW.

Some countries/states do not allow the exclusion or limitation of incidental or consequential damages, or limitation of the duration of implied warranties, so the preceding limitations or exclusions may not apply to you.

The warranty provided does not affect the consumer's statutory rights under applicable

legislation in force, nor the consumer's rights against the dealer arising from their sales / purchase contract.

*Geographical scope of the warranty

If you have purchased your Product in a country member of the European Economic Area (EEA) or in Switzerland or the Republic of Turkey, and such Product was intended for sale in the EEA or in Switzerland or in Turkey, you can have your Product serviced in any EEA country or in Switzerland or in Turkey, under the warranty conditions prevailing in the country in which you require servicing, provided that an identical Product is sold in such country by an authorised Sony Ericsson distributor. To find out if your Product is sold in the country you are in, please call the local Sony Ericsson Contact Center. Please observe that certain services may not be available outside the country of original purchase, for example, due to the fact that your Product may have an interior or exterior which is different from equivalent models sold in other countries. Please note in addition that it may sometimes not be possible to repair SIM-locked Products.

** In some countries/regions additional information (such as a valid warranty card) may be requested.

Anguilla	1-800-080-9518 (Toll Free)	questions.CO@support.sonyericsson.com
Antigua and Barbuda	1-800-081-9518 (Toll Free)	questions.CO@support.sonyericsson.com
Argentina	0800-333-7427 (número gratuito)	questions.CO@support.sonyericsson.com
Australia	1300 650-050 (Toll Free)	questions.AU@support.sonyericsson.com
The Bahamas	1-800-205-6062 (Toll Free)	questions.CO@support.sonyericsson.com
Barbados	1-800-082-9518 (Toll Free)	questions.CO@support.sonyericsson.com
Belgique/België	02-0745 1611	questions.BE@support.sonyericsson.com
Belize	AN 815, PIN 5597 (Toll Free)	questions.CO@support.sonyericsson.com

Bermuda	1-800-083-9518 (Toll Free)	questions.CO@support.sonyericsson.com
Bolivia	800-100-542 (número gratuito)	questions.CO@support.sonyericsson.com
Brasil	4001-0444 (ligação gratuita)	questions.BR@support.sonyericsson.com
Canada	1 866 766 9374 (Toll Free / sans frais)	questions.CA@support.sonyericsson.com
Cayman Islands	1-800-084-9518 (Toll Free)	questions.CO@support.sonyericsson.com
Central and Southern Africa	+27 11 506 0123	questions.CF@support.sonyericsson.com
Česká republika	0844 550 055	questions.CZ@support.sonyericsson.com
Chile	800-646-425 (número gratuito)	questions.CO@support.sonyericsson.com
Colombia	01800-0966-080 (número gratuito)	questions.CO@support.sonyericsson.com
Costa Rica	0 800 011 0400 (número gratuito)	questions.CO@support.sonyericsson.com
Danmark	3331 2828	questions.DK@support.sonyericsson.com
Deutschland	0180 534 2020 (ortsübliche Gebühren)	questions.DE@support.sonyericsson.com
Dominica	1-800-085-9518 (Toll Free)	questions.CO@support.sonyericsson.com
Ecuador	1-800-0102-50 (número gratuito)	questions.CO@support.sonyericsson.com
Eesti	06 032 032	questions.EE@support.sonyericsson.com
Egypt/مصر	16727	questions.EG@support.sonyericsson.com
Ελλάδα	801 11 810 810 +30 210 899 19 19 (από κινητό τηλέφωνο)	questions.GR@support.sonyericsson.com
El Salvador	800-6323 (número gratuito)	questions.CO@support.sonyericsson.com
España	902 180 576 (tarifa local)	questions.ES@support.sonyericsson.com
France	09 69 32 21 21 09 69 32 21 22 (Xperia™ uniquement)	questions.FR@support.sonyericsson.com
Guatemala	1-800-300-0057 (número gratuito)	questions.CO@support.sonyericsson.com
Haiti/Ayiti	AN 193, PIN 5598 (numéro gratuit / nimewo gratis)	questions.CO@support.sonyericsson.com
Honduras	AN 8000122, PIN 5599 (número gratuito)	questions.CO@support.sonyericsson.com
Hong Kong/香港	+852 8203 8863	questions.HK@support.sonyericsson.com
Hrvatska	062 000 000	questions.HR@support.sonyericsson.com
India/भारत	1800 11 1800 (Toll Free) +91 (011) 39011111	questions.IN@support.sonyericsson.com
Indonesia	021 2701388	questions.ID@support.sonyericsson.com

Ireland	1850 545 888 (Local rate)	questions.IE@support.sonyericsson.com
Italia	06 48895206 (tariffa locale)	questions.IT@support.sonyericsson.com
Jamaica	1-800-442-3471 (Toll Free)	questions.CO@support.sonyericsson.com
Κύπρος/Kıbrıs	0800 90 909	questions.CY@support.sonyericsson.com
Latvija	67 21 43 01	questions.LV@support.sonyericsson.com
Lietuva	8 700 55030	questions.LT@support.sonyericsson.com
Magyarország	01 880 47 47	questions.HU@support.sonyericsson.com
Malaysia	1800-88-9900 (Toll Free / bebas tol)	questions.MY@support.sonyericsson.com
Maroc/المغرب	+212 2 2958 344	questions.MA@support.sonyericsson.com
México	0 1800 000 4722 (número gratuito)	questions.MX@support.sonyericsson.com
Nederland	0900 8998318	questions.NL@support.sonyericsson.com
Nederlandse Antillen	001-866-509-8660 (gratis nummer)	questions.CO@support.sonyericsson.com
New Zealand	0800-100-150 (Toll Free)	questions.NZ@support.sonyericsson.com
Nicaragua	AN 1800-0166, PIN 5600 (número gratuito)	questions.CO@support.sonyericsson.com
Norge	815 00 840 (lokaltakst)	questions.NO@support.sonyericsson.com
Österreich	0810 200 245	questions.AT@support.sonyericsson.com
Pakistan/پاکستان	021 - 111 22 55 73	questions.PK@support.sonyericsson.com
Panamá	00800-787-0009 (número gratuito)	questions.CO@support.sonyericsson.com
Paraguay	009 800 54 20032 (número gratuito)	questions.CO@support.sonyericsson.com
Perú	0800-532-38 (número gratuito)	questions.CO@support.sonyericsson.com
Philippines/Pilipinas	+63 2 7891860	questions.PH@support.sonyericsson.com
Polska	+48 22 22 77 444	questions.PL@support.sonyericsson.com
Portugal	808 204 466 (chamada local)	questions.PT@support.sonyericsson.com
República Dominicana	1-800-751-3370 (número gratuito)	questions.CO@support.sonyericsson.com
România	+40 21 401 0401	questions.RO@support.sonyericsson.com
Saint Kitts and Nevis	1-800-087-9518 (Toll Free)	questions.CO@support.sonyericsson.com
Saint Vincent and the Grenadines	1-800-088-9518 (Toll Free)	questions.CO@support.sonyericsson.com
Schweiz/Suisse/Svizzera	0848 824 040	questions.CH@support.sonyericsson.com
Singapore	+65 6744 0733	questions.SG@support.sonyericsson.com
Slovensko	02 5443 6443	questions.SK@support.sonyericsson.com

South Africa	0861 632222	questions.ZA@support.sonyericsson.com
South Korea/대한민국	(+82) 1588 4170	questions.KO@support.sonyericsson.com
Suomi	09 299 2000	questions.FI@support.sonyericsson.com
Sverige	013 24 45 00 (lokal taxa)	questions.SE@support.sonyericsson.com
Trinidad and Tobago	1-800-080-9521 (Toll Free)	questions.CO@support.sonyericsson.com
Türkiye	+90 212 473 77 77	questions.TR@support.sonyericsson.com
United Kingdom	08705 237 237 (Local rate)	questions.GB@support.sonyericsson.com
United States	1 866 766 9374	questions.US@support.sonyericsson.com
Uruguay	000-401-787-013 (número gratuito)	questions.CO@support.sonyericsson.com
Venezuela	0-800-1-00-2250 (número gratuito)	questions.CO@support.sonyericsson.com
Việt Nam	1900 1525 (miễn phí)	questions.VN@support.sonyericsson.com
Беларусь	8 82 00 361 0001	questions.BY@support.sonyericsson.com
България	0800 1 8778	questions.BG@support.sonyericsson.com
Россия	+7 (495) 7870986	questions.RU@support.sonyericsson.com
Україна	(+380) 44 590 1515	questions.UA@support.sonyericsson.com
الأردن	+971 4 3919 880	questions.JO@support.sonyericsson.com
الإمارات العربية المتحدة	+971 4 3919 880 (UAE)	questions.AE@support.sonyericsson.com
الكويت	+971 4 3919 880	questions.KW@support.sonyericsson.com
المملكة العربية السعودية	800-8200-727	questions.SA@support.sonyericsson.com
中国	+86 400 810 0000	questions.CN@support.sonyericsson.com
台灣	+886 2 25625511	questions.TW@support.sonyericsson.com
ไทย	02 2483 030	questions.TH@support.sonyericsson.com

Index

A

activity menu	14
Address Book	33
alarms	52
answering service	36
applications	56
appointments	53
assembly	6
AT&T Video Share	32
audio book	19
auto rotate	56

B

backing up and restoring	29
battery	
capacity	7
charging	8
inserting	6
use and care	66
Bluetooth™ wireless technology	28
bookmarks	48
business card	35

C

calendar	53
call forward	37
call list	33
call numbers in message	40
caller-specific ringtones	34

calls

accepting	38
answering and rejecting	31
emergency	32
handling two calls	38
international	31
making and receiving	31
putting on hold	37
recording	22
camera	44
printing	47
conference calls	38
contacts	
adding phone contacts	33
default contacts	33
groups	35
Smart search	34
costs	7

D

date	55
download	
settings	60

E

emergency numbers	32
end user license agreement	69
entering text	15

F	
flight mode	51
flip	
locking	59
unlocking	59
FM radio	21
G	
games	56
gesture control	51
groups	35
H	
handsfree	16, 36
Bluetooth™ wireless technology .	29
hearing aid compatibility	64
help	7
hiding number	39
I	
IM	42
imaging	44
IMEI number	59
instant messaging	42
Internet	
bookmarks	48
screen orientation	56
security and certificates	50
settings	60
K	
keys	9
L	
language	15
lock	
phone	57
SIM card	57
locking	
flip	59
M	
master reset	59
Media Go™	26
media transfer	27
MEdia™ Net	48
memory	14
memory card	15
memory status	35
menu overview	11
messages	
text and picture	39
voice	41
messaging	
instant	42
microphone	31
<i>MMS See multimedia messages</i>	
Mobile Email	41
model name	7
multimedia messages	39
MusicDJ™	22
MusicID™	20
my phone number	7
My Stuff	23

N	
navigating menus	13
notes	53
P	
pan and zoom	
Web pages	49
password saver	58, 61
PC Suite	50
phone memory	7, 14
phone mode	51
phone name	28
phone, turning on	6
photo fix	45
PhotoDJ™	47
photos	46
editing	47
improving	45
tags	46
pictures	46
PIN	7, 57
playlists	18
power saving	29
profiles	54
PUK	57
R	
recording	
listening to	22
ringtones	55
setting	55
roaming	7
S	
safety guidelines	65
screen orientation	56
search	
on Web pages	49
selection keys	13
SensMe™	19
setting	
ringtones	55
settings	
download	60
Internet	60
shake control	17
shortcuts	14
SIM card	
copying to/from	34
inserting	6
lock and unblock	57
SMS See <i>text messages</i>	
SOS See <i>emergency numbers</i>	
sound recorder	22
speed dialing	36
standby	7
notes	54
support	65
synchronizing	50
T	
T9™ Text Input	16
tagging photos	46
tasks	54
templates	40

theme	55
time	55
time zone	55
TrackID™	20
transfer method	
Bluetooth™ wireless technology .	28
USB cable	24
transferring	
music	26
photos	26
sound	29
turning on/off	
Bluetooth™ function	28
phone lock	57
SIM lock protection	57

U

USB cable	24
-----------------	----

V

video editing	47
video player	20
video recorder	44
video ringtones	55
Video Share	32
VideoDJ™	47
voice control	36
voice messages	41
voicemail	36
volume	
ear speaker	31

W

Walkman™ player	16, 17
warranty	69
Web pages	
history	49

Z

zoom	45
------------	----