


HTC Desire 526G+ dual sim

Inserting your micro SIM and microSD cards

IMPORTANT: USE A STANDARD MICRO SIM ONLY.


Inserting a smaller size SIM, such as a nano SIM with an adapter or a modified SIM, may cause the card to not fit properly or damage the card slot.

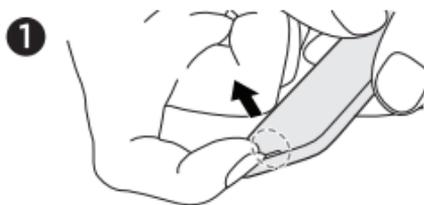

1. With the phone facing down, open the back cover from the small opening at the bottom.




2. With the gold contacts facing down and the cut off corner facing in, insert the micro SIM cards into the slots that are labeled SIM 1 and SIM 2.

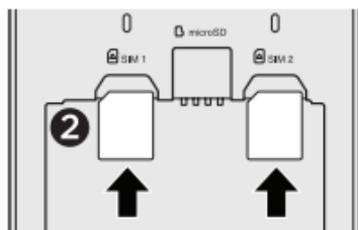


Note: You can insert a 3G micro SIM card in either slot. When you have two cards inserted, only one card can connect to the 3G network. The other card will connect to the 2G network only.




SIM 1 connects to the 3G network by default. You can also set which card connects to 3G. For details, see the user guide.

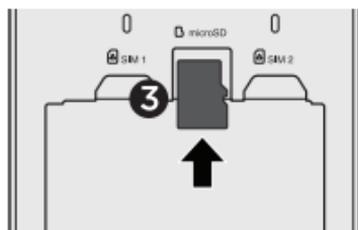

3. With your microSD™ card's gold contacts facing down and the narrow side facing in, insert the microSD card into the middle slot.

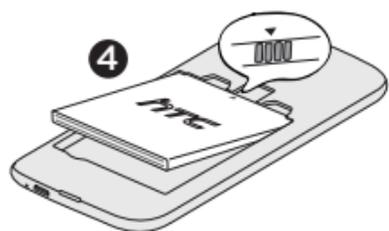

4. Insert the battery into the battery compartment.

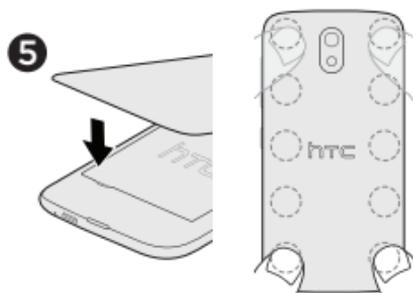

5. To replace the back cover, first align it onto the top part of the phone. Then align the edges and press down on the back cover from top to bottom along the edges until the cover clicks into place.

Want some guidance on using your phone?

Go to www.htc.com/support/ to find the how-tos, user guide, and more.

© 2015 HTC Corporation. All rights reserved.

 
HTC, the HTC logo, and HTC Desire are trademarks of HTC Corporation.

microSD is a trademark of SD-3C LLC.

All other company, product and service names mentioned herein are trademarks, registered trademarks or service marks of their respective owners.

htc.com

Complies with
IDA Standards
DB 104368



91H0xxxx-xxM Rev.A