

Some of the contents in this manual may differ from your phone depending on the software of the phone or your service provider.

Depending on your country, your phone and accessories may appear different from the illustrations in this guide.

**SAMSUNG ELECTRONICS**



World Wide Web  
<http://www.samsungmobile.com>

Printed in Korea  
Code No.:GH68-19823A  
English (SEA). 08/2008. Rev. 1.0



# Samsung S7330 user manual



# using this manual

This user manual has been specially designed to guide you through the functions and features of your mobile phone. To get started quickly, refer to “introducing your mobile phone,” “assembling and preparing your mobile phone,” and “using basic functions.”

## Instructional icons

---

Before you start, familiarise yourself with the icons you will see in this manual:



WARNING

**Warning**—situations that could cause injury to yourself or others



CAUTION

**Caution**—situations that could cause damage to your phone or other equipment



**Note**—notes, usage tips, or additional information



**Refer to**—pages with related information; for example: ► p.12 (represents “see page 12”)

- **Followed by**—the order of options or menus you must select to perform a step; for example: Press <Menu> → **Messages** → **Create message** (represents **Menu**, followed by **Messages**, followed by **Create message**)
- [ ] **Square brackets**—phone keys; for example: [  ] (represents the Power/Menu exit key)
- < > **Angled brackets**—softkeys that control different functions at each screen; for example: <OK> (represents the **OK** softkey)

## Copyright information

---

Rights to all technologies and products that comprise this device are the property of their respective owners:

- Bluetooth® is a registered trademark of the Bluetooth SIG, Inc. worldwide—Bluetooth QD ID: B013981.
- Java™ is a trademark of Sun Microsystems, Inc.
- Windows Media Player® is registered trademark of Microsoft Corporation.

# contents

<b>safety and usage information</b>	<b>2</b>
Safety warnings .....	2
Safety precautions .....	4
Important usage information .....	7
<b>introducing your mobile phone</b>	<b>9</b>
Unpack .....	9
Phone layout .....	10
Keys .....	11
Display .....	12
Icons .....	13
<b>assembling and preparing your mobile phone</b>	<b>15</b>
Install the SIM or USIM card and battery ...	15
Charge the battery .....	17
Insert a memory card (optional) .....	18
<b>using basic functions</b>	<b>19</b>
Turn your phone on and off .....	19

Access menus .....	20	Print images .....	45
Customise your phone .....	20	Edit videos .....	45
Use basic call functions .....	23	Use Java-powered games and applications .....	49
Send and view messages .....	24	Use the RSS reader .....	50
Add and find contacts .....	26	Upload photos and videos to the web .....	51
Use basic camera functions .....	26	Create and view world clocks .....	52
Listen to music .....	28	Set and use alarms .....	53
Browse the web .....	29	Use the calculator .....	54
<b>using advanced functions</b> .....	<b>31</b>	Convert currencies or measurements .....	54
Use advanced call functions .....	31	Set a countdown timer .....	55
Use advanced Phonebook functions .....	33	Use the stopwatch .....	55
Use advanced messaging functions .....	34	Create a new task .....	55
Use advanced music functions .....	36	Create a text memo .....	55
<b>using tools and applications</b> .....	<b>39</b>	Manage your calendar .....	56
Use the Bluetooth wireless feature .....	39	<b>troubleshooting</b> .....	<b>a</b>
Activate the mobile tracker .....	40		
Record and play voice memos .....	41		
Edit images .....	42		

# safety and usage information

Comply with the following precautions to avoid dangerous or illegal situations and ensure peak performance of your mobile phone.



## Safety warnings

---

### Keep your phone away from small children and pets

Keep your phone and all accessories out of the reach of small children or animals. Small parts may cause choking or serious injury if swallowed.

### Protect your hearing



Listening to a headset at high volumes can damage your hearing. Use only the minimum volume setting necessary to hear your conversation or music.

## Install mobile phones and equipment with caution

Ensure that any mobile phones or related equipment installed in your vehicle are securely mounted. Avoid placing your phone and accessories near or in an air bag deployment area. Improperly installed wireless equipment can cause serious injury when air bags inflate rapidly.

## Handle and dispose of batteries and chargers with care

- Use only Samsung-approved batteries and chargers specifically designed for your phone. Incompatible batteries and chargers can cause serious injuries or damage to your phone.
- Never dispose of batteries or phones in a fire. Follow all local regulations when disposing used batteries or phones.

- Never place batteries or phones on or in heating devices, such as microwave ovens, stoves, or radiators. Batteries may explode when overheated.
- Never crush or puncture the battery. Avoid exposing the battery to high external pressure, which can lead to an internal short circuit and overheating.

## Avoid interference with pacemakers

Maintain a minimum of 15 cm (6 inches) between mobile phones and pacemakers to avoid potential interference, as recommended by manufacturers and the independent research group, Wireless Technology Research. If you have any reason to suspect that your phone is interfering with a pacemaker or other medical device, turn off the phone immediately and contact the manufacturer of the pacemaker or medical device for guidance.

## Turn off the phone in potentially explosive environments

Do not use your phone at refuelling points (service stations) or near fuels or chemicals. Turn off your phone whenever directed by warning signs or instructions. Your phone could cause explosions or fire in and around fuel or chemical storage and transfer areas or blasting areas. Do not store or carry flammable liquids, gases, or explosive materials in the same compartment as the phone, its parts, or accessories.

## Reduce the risk of repetitive motion injuries

When sending text messages or playing games on your phone, hold the phone with a relaxed grip, press the keys lightly, use special features that reduce the number of keys you have to press (such as templates and predictive text), and take frequent breaks.



## Safety precautions

---

### Drive safely at all times

Avoid using your phone while driving and obey all regulations that restrict the use of mobile phones while driving. Use hands-free accessories to increase your safety when possible.

### Follow all safety warnings and regulations

Comply with any regulations that restrict the use of a mobile phone in a certain area.

### Use only Samsung-approved accessories

Using incompatible accessories may damage your phone or cause injury.

## Turn off the phone near medical equipment

Your phone can interfere with medical equipment in hospitals or health care facilities. Follow all regulations, posted warnings, and directions from medical personnel.

## Turn off the phone or disable the wireless functions when in an aircraft

Your phone can cause interference with aircraft equipment. Follow all airline regulations and turn off your phone or switch to a mode that disables the wireless functions when directed by airline personnel.

## Protect batteries and chargers from damage

- Avoid exposing batteries to very cold or very hot temperatures (below 0° C/32° F or above 45° C/113° F). Extreme temperatures can reduce the charging capacity and life of your batteries.
- Prevent batteries from contacting metal objects, as this can create a connection between the + and - terminals of your batteries and lead to temporary or permanent battery damage.
- Never use a damaged charger or battery.

## Handle your phone carefully and sensibly

- Do not allow your phone to get wet—liquids can cause serious damage. Do not handle your phone with wet hands. Water damage to your phone can void your manufacturer's warranty.

CAUTION

- Avoid using or storing your phone in dusty, dirty areas to prevent damage to moving parts.
- Your phone is a complex electronic device—protect it from impacts and rough handling to avoid serious damage.
- Do not paint your phone, as paint can clog moving parts and prevent proper operation.
- Avoid using the phone's camera flash or light close to the eyes of children or animals.
- Your phone and memory cards may be damaged by exposure to magnetic fields. Do not use carrying cases or accessories with magnetic closures or allow your phone to come in contact with magnetic fields for extended periods of time.

## Avoid interference with other electronic devices

Your phone emits radio frequency (RF) signals that may interfere with unshielded or improperly shielded electronic equipment, such as pacemakers, hearing aids, medical devices, and other electronic devices in homes or vehicles. Consult the manufacturers of your electronic devices to solve any interference problems you experience.

# CAUTION



## Important usage information

### Use your phone in the normal position

Avoid contact with your phone's internal antenna.

### Allow only qualified personnel to service your phone

Allowing unqualified personnel to service your phone may result in damage to your phone and will void your warranty.

### Ensure maximum battery and charger life

- Avoid charging batteries for more than a week, as overcharging may shorten battery life.
- Over time, unused batteries will discharge and must be recharged before use.

- Disconnect chargers from power sources when not in use.
- Use batteries only for their intended purpose.

### Handle SIM cards and memory cards with care

- Do not remove a card while the phone is transferring or accessing information, as this could result in loss of data and/or damage to the card or phone.
- Protect cards from strong shocks, static electricity, and electrical noise from other devices.
- Frequent writing and erasing will shorten the life span of memory cards.
- Do not touch gold-coloured contacts or terminals with your fingers or metal objects. If dirty, wipe the card with a soft cloth.

## Ensure access to emergency services

Emergency calls from your phone may not be possible in some areas or circumstances. Before travelling in remote or undeveloped areas, plan an alternate method of contacting emergency services personnel.

## Specific Absorption Rate (SAR) certification information

Your phone conforms to European Union (EU) standards that limit human exposure to radio frequency (RF) energy emitted by radio and telecommunications equipment. These standards prevent the sale of mobile phones that exceed a maximum exposure level (known as the Specific Absorption Rate, or SAR) of  $2.0 \text{ W/kg}^1$  of body tissue.

During testing, the maximum SAR recorded for this model was  $0.522 \text{ W/kg}$ . In normal use, the actual SAR is likely to be much lower, as the phone has been designed to emit only the RF energy necessary to transmit a signal to the nearest base station. By automatically emitting lower levels when possible, your phone reduces your overall exposure to RF energy.

The Declaration of Conformity at the back of this manual demonstrates your phones compliance with the European Radio & Terminal Telecommunications Equipment (R&TTE) directive. For more information about the SAR and related EU standards, visit the Samsung mobile phone website.

---

**1** The SAR limit for mobile phones used by the public is 2.0 watts/kilogram (W/kg) averaged over ten grams of body tissue. The limit incorporates a substantial margin of safety to give additional protection for the public and to account for any variations in measurements. The SAR values may vary, depending on national reporting requirements and the network band.

# introducing your mobile phone

In this section, learn about your mobile phone's layout, keys, display, and icons.

## Unpack

---

Check your product box for the following items:

- Mobile phone
- Battery
- Travel adapter (charger)
- User manual




The items supplied with your phone may vary depending on the software and accessories available in your region or offered by your service provider.


You can obtain additional accessories from your local Samsung dealer.

## Phone layout

The front of your phone includes the following keys and features:

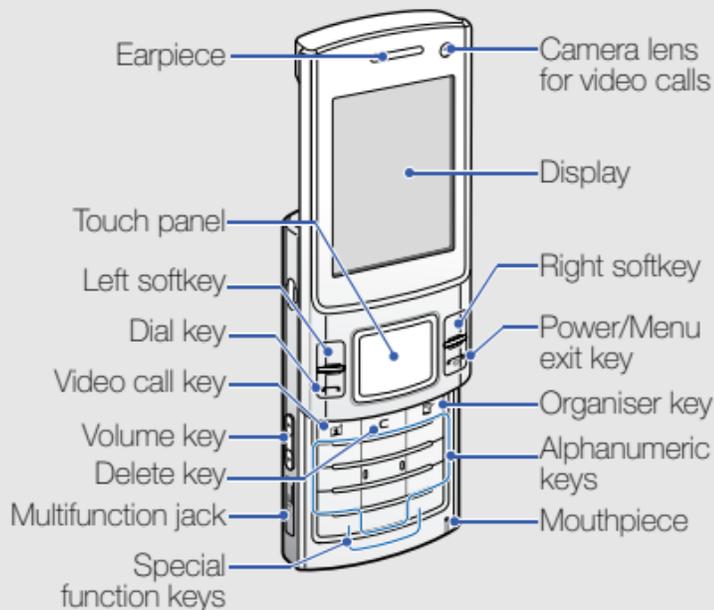

The rear of your phone includes the following keys and features:

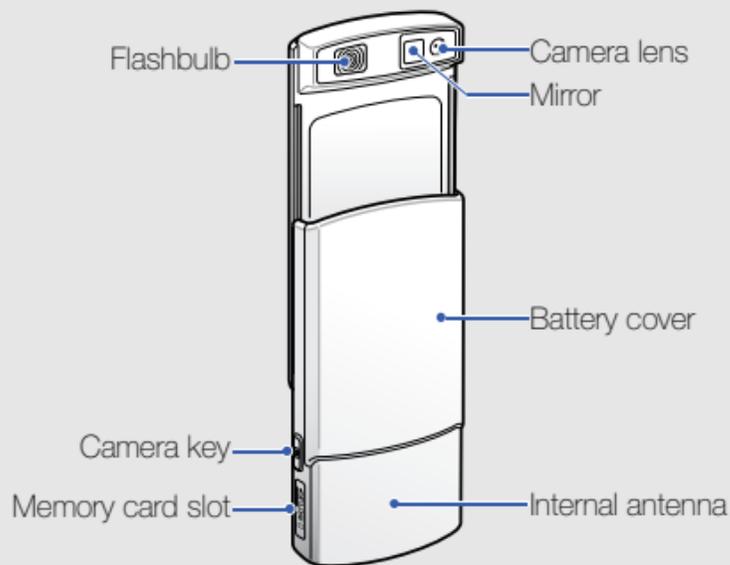

Closing the phone automatically locks the exposed keys to prevent you from accidentally pressing them. To unlock these keys, press **<Unlock>** → **<OK>**.

# Keys


Key	Function
 Softkeys	Perform actions indicated at the bottom of the display
 Touch panel	In Idle mode, access the Simplified menu (centre) or user-defined menus (left/right/up/down); In Menu mode, select the highlighted menu option or confirm input (centre), or scroll through menu options (left/right/up/down)
 Dial	Make or answer a call; In Idle mode, retrieve recently dialled, missed, or received numbers

Key	Function
 Power/ Menu exit	Turn the phone on and off (press and hold); End a call; In Menu mode, cancel input and return to Idle mode
 Video call	From the dialling screen, make a video call
 Delete	Delete characters or items in an application
 Organiser	In Idle mode, access organiser applications
 Alpha- numeric	Enter numbers, letters and special characters; In Idle mode, press and hold [1] to access voice mails and [0] to enter an international call prefix

Key	Function
	<p>Special function</p> <p>Enter special characters or perform special functions; In Idle mode, press and hold [#] for <b>Silent</b> profile; Press and hold [*] to enter a pause between numbers</p>
	<p>Volume</p> <p>Adjust the phone's volume</p>
	<p>Camera</p> <p>In Idle mode, turn on the camera (press and hold); In Camera mode, take a photo or record a video</p>

## Display

Your phone's display consists of three areas:

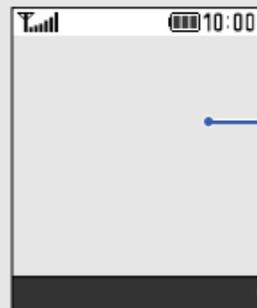

### Icon line

Displays various icons

### Text and graphic area

Displays messages, instructions, and information you enter

### Softkey line

Displays the current actions assigned to each softkey

## Icons

Learn about the icons that appear on your display.

Icon	Definition
	Signal strength
	GPRS network status <ul style="list-style-type: none"><li>• Blue: GPRS network connected</li><li>• Red: Transferring data via GPRS network</li></ul>
	EDGE network status <ul style="list-style-type: none"><li>• Blue: EDGE network connected</li><li>• Red: Transferring data via EDGE network</li></ul>
	UMTS network status <ul style="list-style-type: none"><li>• Blue: UMTS network connected</li><li>• Red: Transferring data via UMTS network</li></ul>
	HSDPA network status <ul style="list-style-type: none"><li>• Blue: HSDPA network connected</li><li>• Red: Transferring data via HSDPA network</li></ul>
	Voice call in progress
	Video call in progress

Icon	Definition
	Synchronised with PC
	Browsing the web
	Connecting to secured web page
	FM radio on
	FM radio suspended
	Music playback in progress
	Music playback paused
	Music playback stopped
	Alarm activated
	Bluetooth hands-free car kit or headset connected
	Bluetooth activated
	Memory card inserted
	New text message (SMS)
	New multimedia message (MMS)

Icon	Definition
	New email message
	New voice mail message
	New push message
	New configuration message
	Normal profile activated
	Silent profile activated
	Driving profile activated
	Meeting profile activated
	Outdoor profile activated
	Offline profile activated
	Battery power level
<b>10:00</b>	Current time



# assembling and preparing your mobile phone

Get started by assembling and setting up your mobile phone for its first use.

## Install the SIM or USIM card and battery


---

When you subscribe to a cellular service, you will receive a Subscriber Identity Module, or SIM card, with subscription details, such as your personal identification number (PIN) and optional services.

To use UMTS or HSDPA services, you can purchase a Universal Subscriber Identity Module (USIM) card.


To install the SIM or USIM card and battery,

1. Remove the battery cover.

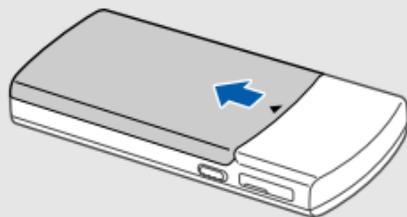


If the phone is on, press and hold [  ] to turn it off.

2. Insert the SIM or USIM card.

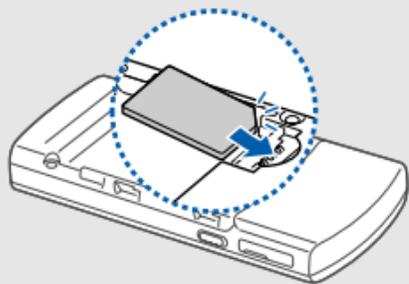


Place the SIM or USIM card in the phone with the gold-coloured contacts facing down.

3. Insert the battery.

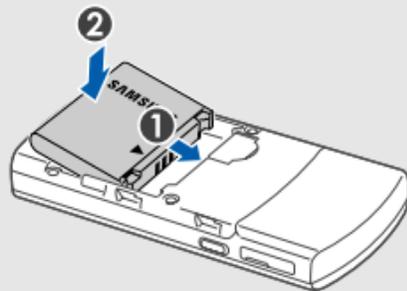


4. Replace the battery cover.

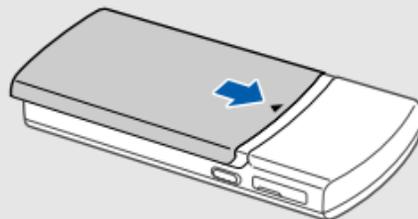

## Charge the battery

Before using the phone for the first time, you must charge the battery.

1. Open the cover to the multifunction jack and plug the small end of the travel adapter.

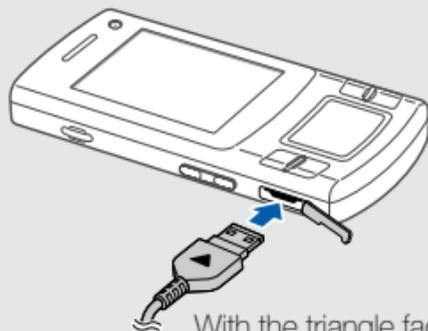

With the triangle facing up



Improperly connecting the travel adapter can cause serious damage to the phone. Any damages by misuse are not covered by the warranty.

2. Plug the large end of the travel adapter into a power outlet.
3. When the battery is fully charged (the  icon is no longer moving), unplug the travel adapter from the power outlet.
4. Unplug the travel adapter from the phone.
5. Close the cover to the multifunction jack.




### About the low battery indicator

When your battery is low, the phone will emit a warning tone and a low battery message. Also, the empty battery icon will be blinking. If the battery level becomes too low, the phone will automatically power off. Recharge your battery to continue using your phone.

## Insert a memory card (optional)

To store additional multimedia files, you must insert a memory card. Your phone accepts microSD™ memory cards up to 8 GB (depending on memory card manufacturer and type).

1. Open the cover to the memory card slot on the side of the phone.
2. Insert a memory card with the label side facing up.

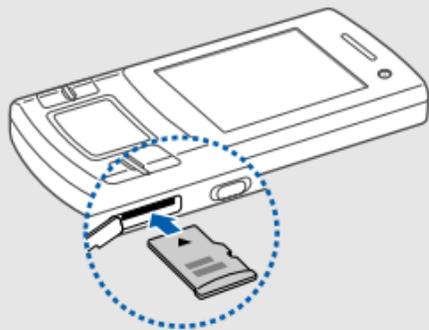

3. Push the memory card in the memory card slot until it locks in place.

To remove the memory card, push it gently until it disengages from the phone, and then pull the memory card out of the memory card slot.

# using basic functions

Learn how to perform basic operations and use the main features of your mobile phone.

## Turn your phone on and off

---

To turn your phone on,

1. Press and hold [].
2. Enter your PIN and press <Confirm> (if necessary).
3. When the setup wizard opens, customise your phone as desired by following the screen.

To turn your phone off, repeat step 1 above.

## Switch to the Offline profile

By switching to the **Offline** profile, you can use your phone's non-network services in areas where wireless devices are prohibited, such as aeroplanes and hospitals.

To switch to the **Offline** profile, press **<Menu>** → **Settings** → **Phone profiles** → **Offline**.



Follow all posted warnings and directions from official personnel when in areas where wireless devices are prohibited.

## Access menus

---

To access your phone's menus,

1. Press the left soft key.
2. Use the touch panel to scroll to a menu or option.
3. Press **<Select>** or **<OK>** to confirm the highlighted option.
4. Press **<Back>** to move up one level; Press [] to return to Idle mode.

## Customise your phone

---

Get more from your phone by customising it to match your preferences.

### Adjust the volume of the key tones

In Idle mode, press [/] to adjust the key tone volume.

### Switch to or from the Silent profile

In Idle mode, press and hold [**#**] to turn on or off the silent mode.

### Change your ringtone

1. In Idle mode, press **<Menu>** → **Settings** → **Phone profiles**.
2. Scroll to the profile you are using.
3. Press **<Options>** → **Edit** → **Voice call ringtone** or **Video call ringtone**.

4. Select a ringtone category → a ringtone.

5. Press <Options> → **Save**.

To switch to another profile, select it from the list.

## Select a wallpaper (Idle mode)

1. In Idle mode, press <Menu> → **Settings** → **Display & light settings** → **Display** → **Homescreen**.

2. Scroll left or right to **Image**.

3. Select **Wallpaper** → an image category → an image.

4. Press <Options> → **Save**.

## Select a theme for the display

To create a theme,

1. In Idle mode, press <Menu> → **Settings** → **Display & light settings** → **Display** → **My theme**.

2. Press <Options> → **Create** → **Easy** or **Expert**.

3. Press <Next> and customise the theme as desired by following the screen.

4. When you have finished, enter a name for the theme and press [OK].

5. Press <Yes> to apply the theme.



If you select the same colour for the entire theme, you may not be able to recognise the display.

To apply a theme,

1. In Idle mode, press <Menu> → **Settings** → **Display & light settings** → **Display** → **My theme**.

2. Select a theme.

3. Press <OK> to apply the theme.

## Select a colour for the touch panel

1. In Idle mode, press <Menu> → **Settings** → **Display & light settings** → **Touch panel**.
2. Press <Options> → **Create**.
3. Scroll left or right to set the colour of the icons and press <Next>.
4. Scroll left or right to set the colour of the effects and press <Save>.

## Set menu shortcuts

1. In Idle mode, press <Menu> → **Settings** → **Phone settings** → **Shortcuts**.
2. Select a key to use as a shortcut.
3. Select a menu to assign to the shortcut key.

## Use the Simplified menu

To set up Simplified menu items,

1. In Idle mode, press .
2. Press <Options> → **Customise menu**.
3. Select your favourite menus.  
Press <Options> → **Open** to select submenus (if necessary).
4. Press <Save>.

To access an item from the Simplified menu,

1. In Idle mode, press .
2. Scroll to the menu item you want and press [OK].

## Lock your phone

1. In Idle mode, press <Menu> → **Settings** → **Security** → **Phone lock** → **On**.
2. Enter a new 4- to 8-digit password and press <Confirm>.
3. Enter the new password again and press <Confirm>.

## Use basic call functions

---

Learn to make or answer calls and use basic call functions.

### Make a call

1. In Idle mode, enter an area code and a phone number.
2. Press [>] to dial the number.  
For a video call, press [>].
3. To end the call, press [>].

### Answer a call

1. When a call comes in, press [>] or **Accept**.
2. For a video call, press <**Show me**>.
3. To end the call, press [>].

### Adjust the volume

To adjust the volume during a call, press [/].

### Use the speakerphone feature

1. During a call, press [>] → <**Yes**> to activate the speaker.
2. To switch back to the earpiece, press [].



In noisy environments, you may have difficulty hearing the calls while using the speakerphone feature. For better audio performance, use the normal phone mode.

## Use the headset

By plugging the supplied headset into the multifunction jack, you can also use the supplied headset to make and answer calls:

- To redial the last call, press and hold the headset button twice.
- To answer a call, press and hold the headset button.
- To end a call, press and hold the headset button.

## Send and view messages

---

Learn to send and view text (SMS), multimedia (MMS), and email messages.

### Send a text or multimedia message

1. In Idle mode, press **<Menu>** → **Messages** → **Create message** → **Message**.

2. Enter your message text. ► p. 25  
For sending as a text message, skip to step 6.  
For attaching multimedia, continue with step 3.
3. Press **<Options>** → **Add item** or **Create item** and **add an image, sound** or **video**.
4. Press **<Options>** → **Add subject**.
5. Enter a subject.
6. Scroll up and enter a destination number.
7. Press [] to send the message.

### Send an email

1. In Idle mode, press **<Menu>** → **Messages** → **Create message** → **Email**.
2. Enter your email text.
3. Press **<Options>** → **Add attachment** or **Create item** and attach a file (if necessary).
4. Scroll up and enter a subject.

5. Scroll up and enter an email address.
6. Press [✉] to send the email.

## Enter text

When entering text, you can change the text input mode:

- Press and hold [✱] to select an input mode.
- Press [✱] to change case or switch to Number mode.
- Press and hold [#] to switch to Symbol mode.

Enter text in one of the following modes:

Mode	Function
ABC	Press the appropriate alphanumeric key repeatedly until the character you want appears on the display.

Mode	Function
T9	<ol style="list-style-type: none"> <li>1. Press the appropriate alphanumeric keys to enter an entire word.</li> <li>2. When the word displays correctly, press [#] to insert a space. If the correct word does not display, press [0] to select an alternate word.</li> </ol>
Number	Press the appropriate alphanumeric key to enter a number.
Symbol	Press the appropriate alphanumeric key to select a symbol.

## View text or multimedia messages

1. In Idle mode, press <Menu> → **Messages** → **Inbox**.
2. Select a text or multimedia message.

## View an email

1. In Idle mode, press <Menu> → **Messages** → **Email inbox**.
2. Press <Options> → **Download**.
3. Select an email or a header.
4. If you selected a header, press <Options> → **Retrieve** to view the body of the email.

## Add and find contacts

Learn the basics of using the **Phonebook** feature.

### Add a new contact

1. In Idle mode, enter a phone number and press <Options>.
2. Select **Add to Phonebook** → a memory location (phone or SIM) → **New**.
3. Select a number type (for phone storage only).

4. Enter contact information.
5. Press <Options> → **Save** to add the contact to memory.

### Find a contact

1. In Idle mode, press <Menu> → **Phonebook**. You can also press <Contacts> in Idle mode.
2. Enter the first few letters of the name you want to find.
3. Select the contact's name from the search list.



Once you have found a contact, you can:

- call the contact by pressing [**☎**]
- edit the contact information by pressing <Options> → **Edit**.

## Use basic camera functions

---

Learn the basics to capture and view photos and videos.

### Capture photos

1. In Idle mode, press and hold [📷] to turn on the camera.
2. Rotate the phone counterclockwise for landscape view.
3. Aim the lens at the subject and make any adjustments.
4. Press [📷] or [📸] to take a photo.  
The photo is saved automatically.
5. Press [📷] or <📷> to take another photo (step 3).

### View photos

In Idle mode, press <Menu> → **My files** → **Camera album** → a photo file.

### Capture videos

1. In Idle mode, press and hold [📷] to turn on the camera.
2. Press [1] repeatedly to switch to Recording mode.
3. Rotate the phone counterclockwise for landscape view.
4. Aim the lens at the subject and make any adjustments.
5. Press [📷] or [📹] to start recording.
6. Press [📷] or <📷> to stop recording.  
The video is saved automatically.
7. Press [📷] or <📷> to record another video (step 4).

## View videos

In Idle mode, press <Menu> → **My files** → **Camera album** → a video file.

## Listen to music

Learn how to listen to music via the music player or FM radio.

### Listen to the FM radio

1. Plug the supplied headset into the phone's multifunction jack.
2. In Idle mode, press <Menu> → **Multimedia** → **FM radio**.
3. Press <Yes> to start automatic tuning.  
The radio scans and saves available stations automatically.



The first time you turn on **FM radio**, you will be prompted to start automatic tuning.

4. Press [▶] to start the FM radio.
5. Press [←] or [→] to select a radio station.
6. To turn off the FM radio, press [■].

### Listen to music files

Start by transferring files to your phone or memory card:

- Download from the wireless web.  
▶ p. 29
- Download from a PC with the optional Samsung PC Studio. ▶ p. 36
- Receive via Bluetooth. ▶ p. 40
- Copy to your memory card. ▶ p. 36
- Synchronize with Windows Media Player 11.  
▶ p. 37

After transferring music files to your phone or memory card,

1. In Idle mode, press <Menu> → **Multimedia** → **Music player**.
2. Select a music category → a music file.
3. Control playback using the following keys:

Key	Function
	Pause or resume playback
	Adjust the volume up or down
	Skip backward; Scan backward in a file (press and hold)
	Skip forward; Scan forward in a file (press and hold)
	Open the playlist
	Stop playback

## Browse the web

---

Learn to access and bookmark your favourite web pages.

### Browse web pages

1. In Idle mode, press <Menu> → **Browser** → **Go to homepage** to launch your service provider's homepage.
2. Navigate web pages using the following keys:

Key	Function
	Scroll up or down on a web page
OK	Select an item
<Back>	Return to the previous page
<Options>	Access a list of browser options

## Bookmark your favorite web pages

1. In Idle mode, press <Menu> → **Browser** → **Bookmarks**.
2. Press <Options> → **Add bookmark**.
3. Enter a page title and a web address (URL).
4. Press .



# using advanced functions

Learn how to perform advanced operations and use additional features of your mobile phone.

## Use advanced call functions

---

Learn about your phone's additional calling capabilities.

### View and dial missed calls

Your phone will display calls you have missed on the display. To dial the number of a missed call,

1. Press <View>.
2. Scroll to the missed call you want to dial.
3. Press [>] to dial.

### Call a recently dialed number

1. In Idle mode, press [>] to display a list of recent numbers.
2. Scroll to the number you want and press [>] to dial.

## Hold a call or retrieve a held call

Press <**Hold**> to place a call on hold or press <**Retrieve**> to retrieve a held call.

## Dial a second call

If your network supports this function, you can dial another number during a call:

1. Press <**Hold**> to place the first call on hold.
2. Enter the second number to dial and press [].
3. Press <**Swap**> to switch between the two calls.
4. To end the call on hold, press <**Options**> → **End held call**.
5. To end the current call, press [].

## Answer a second call

If your network supports this function, you can answer a second incoming call:

1. Press [] to answer the second call.  
The first call is automatically placed on hold.
2. Press <**Swap**> to switch between the calls.

## Make a multiparty call (conference call)

1. Call the first party you want to add to the multiparty call.
2. While connected to the first party, call the second party.  
The first party is automatically placed on hold.
3. When connected to the second party, press <**Options**> → **Conference call**.
4. Repeat steps 2 and 3 to add more parties (if necessary).
5. To end the multiparty call, press [].

## Call an international number

1. In Idle mode, press and hold [0] to insert the + character.
2. Enter the complete number you want to dial (country code, area code, and phone number), and then press [↵] to dial.

## Call a contact from Phonebook

You can call numbers directly from **Phonebook** using stored contacts. ► p. 26

1. In Idle mode, press <Menu> → **Phonebook**.  
You can also press <Contacts> in Idle mode.
2. Scroll to the number you want to dial and press [↵] to dial.

## Use advanced Phonebook functions

Learn to create namecards, set speed dial numbers, and create groups of contacts.

### Create a namecard

1. In Idle mode, press <Menu> → **Phonebook**.  
You can also press <Contacts> in Idle mode.
2. Press <Options> → **My namecard**.
3. Enter your personal details, and press <Options> → **Save**.



You can send your namecard by attaching it to a message or email or transferring it via the Bluetooth wireless feature.

### Set speed dial numbers

1. In Idle mode, press <Menu> → **Phonebook**.  
You can also press <Contacts> in Idle mode.

2. Scroll to a contact to assign to the number.
3. Press <Options> → **Add to speed dial**.
4. Scroll to a number you want to set (2-9) and press [OK].

The contact is saved to the speed dial number.



You can now call this contact from Idle mode by pressing and holding the assigned speed dial number.

## Create a group of contacts

By creating groups of contacts, you can assign ringtones and caller ID photos to each group or send messages and emails to an entire group. Start by creating a group:

1. In Idle mode, press <Menu> → **Phonebook**.  
You can also press <Contacts> in Idle mode.
2. Scroll left or right to **Groups**.

3. Press <Options> → **Create group**.
4. Enter a group name and press [OK].
5. To set the caller ID image, press <Options> → **Group settings** → **Pictures** → an image category → an image.
6. To set a group ringtone, scroll down and press [>>] → a ringtone category → a ringtone.
7. Press <Options> → **Save**.

## Use advanced messaging functions

---

Learn to create templates and use templates to create new messages.

### Create a text template

1. In Idle mode, press <Menu> → **Messages** → **Templates** → **Text templates**.

2. Press <Create> to open a new template window.
3. Enter your text and press  to save the template.

## Create a multimedia template

1. In Idle mode, press <Menu> → **Messages** → **Templates** → **Multimedia templates**.
2. Press <Create> to open a new template window.
3. Create a multimedia message, with a subject and desired attachments, to use as your template. ► p. 24
4. Press <Options> → **Save as template** to save the template.

## Insert text templates in new messages

1. To start a new message, press <Menu> → **Messages** → **Create message** → a message type.
2. In the text field, press <Options> → **Insert** → **Text template** → a template.

## Create a message from a multimedia template

1. In Idle mode, press <Menu> → **Messages** → **Templates** → **Multimedia templates**.
2. Scroll to the template you want and press <Options> → **Send**.  
Your template opens as a new multimedia message.

## Use advanced music functions

---

Learn to prepare music files, create playlists, and store radio stations.

### Copy music files via Samsung PC Studio

1. In Idle mode, press <Menu> → **Settings** → **Phone settings** → **PC connections** → **Samsung PC studio** → .
2. Using the PC data cable, connect the phone to the PC.
3. Run Samsung PC Studio and copy files from the PC to the phone.  
Refer to the Samsung PC Studio help for more information.

### Copy music files to a memory card

1. Insert a memory card.
2. In Idle mode, press <Menu> → **Settings** → **Phone settings** → **PC connections** → **Mass storage** → .
3. Press [>] to return to Idle mode.
4. Using the PC data cable, connect the phone to the PC.  
When connected, a pop-up window will appear on the PC.
5. Select **Open folder to view files** in the pop-up window on the PC.
6. Copy files from the PC to the memory card.

## Synchronize your phone with Windows Media Player

1. Insert a memory card.
2. In Idle mode, press <Menu> → **Settings** → **Phone settings** → **PC connections** → **Media player** → .
3. Press [>] to return to Idle mode.
4. Using the PC data cable, connect the phone to the PC.  
When connected, a pop-up window will appear on the PC.
5. Select **Sync digital media files to this device** in the pop-up window on the PC.
6. Edit or enter your phone's name in the pop-up window (if necessary), and then click **Finish**.

7. Select and drag the music files you want to the sync list.
8. Click **Start Sync**.

## Create a playlist

1. In Idle mode, press <Menu> → **Multimedia** → **Music player** → **Playlists**.
2. Press <Options> → **Create playlist**.
3. Enter a title for your new playlist and press [OK].
4. Select the new playlist.
5. Press <Options> → **Add** → **Tracks**.
6. Select the files you want to include and press <OK>.

## Customise your music player settings

Learn to adjust the playback and sound settings for your music player.

1. In Idle mode, press **<Menu>** → **Multimedia** → **Music player**.
2. Press **<Options>** → **Player settings**.
3. Adjust the settings to customise your music player.
4. Press .

## Store radio stations automatically

1. Plug the supplied headset into the phone's multifunction jack.
2. In Idle mode, press **<Menu>** → **Multimedia** → **FM radio**.

3. Press  to start the FM radio.
4. Press **<Options>** → **Self-tuning**.
5. Press **<Yes>** to confirm (if necessary).  
The radio scans and saves available stations automatically.

# using tools and applications

Learn how to work with your mobile phone's tools and additional applications.

## Use the Bluetooth wireless feature

Learn about your phone's ability to connect to other wireless devices for exchanging data and using hands-free features.

### Turn on the Bluetooth wireless feature

1. In Idle mode, press **<Menu>** → **Applications** → **Bluetooth** → **Activation** → **On**.
2. To allow other devices to locate your phone, select **My phone's visibility** → **On**.

### Find and pair with other Bluetooth-enabled devices

1. In Idle mode, press **<Menu>** → **Applications** → **Bluetooth** → **My devices** → **Search for new device**.
2. Scroll to a device and press **[OK]**.

3. Enter a PIN for the Bluetooth wireless feature or the other device's Bluetooth PIN, if it has one, and press <OK>.

When the owner of the other device enters the same code or accepts the connection, pairing is complete.

## Send data using the Bluetooth wireless feature

1. Select the file or item from one of your phone's applications that you want to send.
2. Press <Options> → **Send via**, **Send URL**, or **Send namecard via** → **Bluetooth** or **Via Bluetooth** (when sending contact data, specify which data to send).

## Receive data using the Bluetooth wireless feature

1. Enter the PIN for the Bluetooth wireless feature and press <OK> (if necessary).
2. Press <Yes> to confirm that you are willing to receive data from the device (if necessary).

## Activate the mobile tracker

---

When someone inserts a new SIM or USIM card in your phone, the mobile tracker feature will automatically send the contact number to two recipients to help you locate and recover your phone.

To activate the mobile tracker,

1. In Idle mode, press <Menu> → **Settings** → **Security** → **Mobile tracker**.
2. Enter your password and press <Confirm>.

3. Scroll left or right to **On**.
4. Scroll down and press [ >> ] to open the recipient list.
5. Press < **Options** > → **Phonebook** to open your contact list.
6. Scroll to a contact and press [ **OK** ].
7. Select a number.
8. Press [ **OK** ] to save the recipients.
9. Scroll down and enter the sender's name.
10. Press [  ] → < **Accept** >.

## Record and play voice memos

---

Learn to operate your phone's voice recorder.

### Record a voice memo

1. In Idle mode, press < **Menu** > → **Multimedia** → **Voice recorder**.
2. Press [  ] to start recording.
3. Speak your memo into the microphone.
4. When you are finished speaking, press [  ].

### Play a voice memo

1. From the voice recorder screen, press < **Options** > → **My voice clips**.
2. Select a file.

- Control the playback using the following keys:

Key	Function
/▶	Pause or resume playback
▲/▼	Adjust the volume up or down
◀◀	Scan backward in a file
▶▶	Scan forward in a file
■	Stop playback

## Edit images

Learn to edit images and apply fun effects.

### Apply effects to images

- In Idle mode, press <Menu> → **Entertainment** → **Image editor**.
- Press <Options> → **New image** → **Open** or **Take photo**.

- Select an image or take a new photo.
- Press <Options> → **Effects** → an effect option.
- Select a variation of the effect to apply and press <Done>.
- When you are finished with applying effects, press <Options> → **Save as**.
- Enter a new file name for the image and press <Save>.

### Apply a blur effect to a specific area of an image

- In Idle mode, press <Menu> → **Entertainment** → **Image editor**.
- Press <Options> → **New image** → **Open** or **Take photo**.
- Select an image or take a new photo.
- Press <Options> → **Partial effects** → **Partial blur**.

5. Move the rectangle over the area you want to apply the blur effect and press **<Options>** → **Blur**.  
To resize or reshape the rectangle, press **<Options>** → **Size** or **Shape**.
6. When you are finished with applying the effect, press **<Done>**.
7. When you are finished with applying effects, press **<Options>** → **Save as**.
8. Enter a new file name for the image and press **<Save>**.

## Adjust an image

1. In Idle mode, press **<Menu>** → **Entertainment** → **Image editor**.
2. Press **<Options>** → **New image** → **Open** or **Take photo**.
3. Select an image or take a new photo.

4. Press **<Options>** → **Adjust** → an adjustment option (brightness, contrast, or colour).
5. Adjust the image as desired and press **<Done>**.
6. When you are finished with applying effects, press **<Options>** → **Save as**.
7. Enter a new file name for the image and press **<Save>**.

## Transform an image

1. In Idle mode, press **<Menu>** → **Entertainment** → **Image editor**.
2. Press **<Options>** → **New image** → **Open** or **Take photo**.
3. Select an image or take a new photo.
4. Press **<Options>** → **Transform** → **Resize**, **Rotate**, or **Flip**.
5. Resize, rotate or flip the image as desired and press **<Done>**.

- When you are finished with applying effects, press **<Options>** → **Save as**.
- Enter a new file name for the image and press **<Save>**.

## Crop an image

- In Idle mode, press **<Menu>** → **Entertainment** → **Image editor**.
- Press **<Options>** → **New image** → **Open** or **Take photo**.
- Select an image or take a new photo.
- Press **<Options>** → **Crop**.
- Move the rectangle over the area you want to crop and press **<Options>** → **Done**.  
To resize or reshape the rectangle, press **<Options>** → **Resize** or **Shape**.
- When you are finished with cropping, press **<Done>**.

- Press **<Options>** → **Save as**.
- Enter a new file name for the image and press **<Save>**.

## Insert a visual feature

- In Idle mode, press **<Menu>** → **Entertainment** → **Image editor**.
- Press **<Options>** → **New image** → **Open** or **Take photo**.
- Select an image or take a new photo.
- Press **<Options>** → **Insert** → a visual feature (frame, clip art, emoticon, or text).
- Select a visual feature or enter text.
- Move the added image (if necessary).  
To resize or rotate the added image, press **<Options>** → **Resize** or **Rotate**.
- Press **<Done>**, or press **<Options>** → **Done**.

8. When you are finished with adding visual features, press **<Options>** → **Save as**.
9. Enter a new file name for the image and press **<Save>**.

## Print images

---

Learn to print your image with an optional PC data cable or the Bluetooth wireless feature.

To use an optional PC data cable,

1. Connect the multifunction jack on your phone to a compatible printer.
2. Open an image. ► p. 27
3. Press **<Options>** → **Print via** → **USB**.
4. Set print options and print the image.

To use the Bluetooth wireless feature,

1. Open an image.

2. Press **<Options>** → **Print via** → **Bluetooth**.
3. Select a Bluetooth-enabled printer and pair with the printer. ► p. 39
4. Set print options and print the image.

## Edit videos

---

Learn to edit video files and apply visual effects.

### Make a new video with captured images and videos

1. In Idle mode, press **<Menu>** → **Entertainment** → **Video editor**.
2. Press **<Options>** → **Import** → **Image** or **Video** → an image or video category → an image or video.
3. If you choose to add an image, select the duration for which the image will appear.

- To add a new audio track, scroll down to **Additional audio track** and press <Options> → **Import sound** → a sound category → a sound.
- Repeat steps 2-4 above to add more images, videos, or audio files.
- When you are finished, press <Options> → **Export**.  
To save the project for future use, select **Save**. The project will be saved in **Other files**.
- Enter a new file name for the video and press <Export>.
- To check the file, press <Yes> (if necessary).

### Trim any segment of videos

- In Idle mode, press <Menu> → **Entertainment** → **Video editor**.

- Press <Options> → **Import** → **Image** or **Video** → an image or video category → an image or video.
- Press <Options> → **Trim**.
- Scroll right and press <Start mark> at the point where you want the new video to begin.
- Scroll right and press <End mark> at the point where you want the new video to end.
- Press <Trim> to select the segment you want.
- When you are finished, press <Options> → **Export**.  
To save the project for future use, select **Save**. The project will be saved in **Other files**.
- Enter a new file name for the video and press <Export>.
- To check the file, press <Yes> (if necessary).

## Split videos

1. In Idle mode, press <Menu> → **Entertainment** → **Video editor**.
2. Press <Options> → **Import** → **Image** or **Video** → an image or video category → an image or video.
3. If you choose to add an image, select the duration for which the image will appear.
4. Press <Options> → **Split**.
5. Scroll left or right and press <Split> to divide the file into two clips.
6. Insert an image or video as desired between the clips.
7. When you are finished, press <Options> → **Export**.  
To save the project for future use, select **Save**.  
The project will be saved in **Other files**.

8. Enter a new file name for the video and press <Export>.
9. To check the file, press <Yes> (if necessary).

## Apply effects

1. In Idle mode, press <Menu> → **Entertainment** → **Video editor**.
2. Press <Options> → **Import** → **Image** or **Video** → an image or video category → an image or video.
3. If you choose to add an image, select the duration for which the image will appear.
4. Scroll left or right to the video component you want to apply an effect.
5. Press <Options> → **Effects** → an effect.
6. When you are finished, press <Options> → **Export**.  
To save the project for future use, select **Save**.  
The project will be saved in **Other files**.

7. Enter a new file name for the video and press **<Export>**.
8. To check the file, press **<Yes>** (if necessary).

## Insert texts

1. In Idle mode, press **<Menu>** → **Entertainment** → **Video editor**.
2. Press **<Options>** → **Import** → **Image** or **Video** → an image or video category → an image or video.
3. If you choose to add an image, select the duration for which the image will appear.
4. Press **<Options>** → **Inset text**.
5. Scroll right and press **<Start mark>** at the point where you want the text to be displayed.
6. Scroll right and press **<End mark>** at the point where you want the text to be disappeared.
7. Press **<Select>** to select the segment where the text displays.
8. Enter a text to insert and press **<OK>**.
9. Using the touch panel, relocate the text (if necessary).  
To resize the text or change the font colour for the text, press **<Options>** → an option.
10. Press **<Options>** → **Done**.
11. When you are finished, press **<Options>** → **Export**.  
To save the project for future use, select **Save**. The project will be saved in **Other files**.
12. Enter a new file name for the video and press **<Export>**.
13. To check the file, press **<Yes>** (if necessary).

## Move or copy components in a video

1. In Idle mode, press <Menu> → **Entertainment** → **Video editor**.
2. Press <Options> → **Import** → **Image** or **Video** → an image or video category → an image or video.
3. To add a new audio track, scroll down to **Additional audio track** and press <Options> → **Import sound** → a sound category → a sound.
4. Scroll to the video or audio component you want to move or copy.



For audio, you can copy or move only imported audio components.

5. Press <Options> → **Cut** or **Copy**.
6. Scroll to the point where you want to insert the component.

7. Press <Options> → **Paste**.
8. When you are finished, press <Options> → **Export**.  
To save the project for future use, select **Save**. The project will be saved in **Other files**.
9. Enter a new file name for the video and press <Export>.
10. To check the file, press <Yes> (if necessary).

## Use Java-powered games and applications

---

Learn to use games and applications powered by award-winning Java technology.

### Play games

1. In Idle mode, press <Menu> → **My files** or **Entertainment** → **Games and more**.

2. Select a game from the list and follow the on-screen instructions.



Available games may vary, depending on your service provider or region. Game controls and options may vary.

## Launch applications

1. In Idle mode, press **<Menu>** → **My files** or **Entertainment** → **Games and more** → an application.
2. Press **<Options>** to access a list of various options and settings for your application.

## Use the RSS reader

---

Learn to use the RSS reader to get the latest news and information from your favourite websites.

## Create feeds

1. In Idle mode, press **<Menu>** → **Applications** → **RSS reader**.
2. Press **<Options>** → **Add new**.
3. Enter the address of an RSS feed and press **<OK>**.
4. To add more feeds, repeat steps 2-3 above.

## Read RSS feeds

1. In Idle mode, press **<Menu>** → **Applications** → **RSS reader**.
2. Press **<Options>** → **Update** → **All** to get the latest contents.
3. Select a feed → an updated post.

## Download multimedia

1. In Idle mode, press **<Menu>** → **Applications** → **RSS reader**.
2. Scroll a feed and press **<Options>** → **Open**.
3. Scroll a post containing multimedia.
4. Press **<Options>** → **Media** → **Download**.



To download the multimedia later, press **Put into Wishlist**.

## Customise RSS reader settings

1. In Idle mode, press **<Menu>** → **Applications** → **RSS reader**.
2. Press **<Options>** → **Settings**.
3. Customise the settings as desired.

## Upload photos and videos to the web

---

Learn to post your photos and videos to photo sharing websites and blogs.

## Activate the ShoZu account

1. In Idle mode, press **<Menu>** → **Settings** → **Application settings** → **MobileBlog settings** → **ShoZu activation**.
2. Select **On**.
3. Press **<Yes>** to confirm.
4. Follow the on-screen instructions to activate the account.

## Create a new destination

1. In Idle mode, press **<Menu>** → **Settings** → **Application settings** → **MobileBlog settings** → **Destinations**.
2. Press **<Options>** → **Create new**.
3. Follow the on-screen instructions to add a new destination site.
4. Repeat steps 2 and 3 above to add more destinations.

## Upload a file

1. From an application, such as **My files** or **Camera**, select or capture a photo or video.
2. Press **<Options>** → **Upload to web**.
3. Select a destination you want to post to.
4. Enter a new file name and information and press **<Upload>**.

## Create and view world clocks

---

Learn to view the time in another city and set world clocks to appear on your display.

### Create a world clock

1. In Idle mode, press **<Menu>** → **Applications** → **World clock**.
2. Press **<Options>** → **Add**.
3. Scroll left or right to a time zone.
4. To set daylight saving time, scroll down and press [✓].
5. Press **<Save>** to save your world clock.
6. To add more world clocks, repeat steps 2-5 above.

## Add a world clock to your display

In Dual Clock Display mode, you can view clocks with two different time zones on your display.

After you have created world clocks,

1. In Idle mode, press <Menu> → **Applications** → **World clock**.
2. Scroll to the world clock you want to add and press <Options> → **Set as second clock**.
3. Press <Options> → **Display settings**.
4. Scroll left or right to **Dual**.
5. Scroll down, and then scroll left or right to a dual clock style.
6. Press .

## Set and use alarms

---

Learn to set and control alarms for important events.

### Set a new alarm

1. In Idle mode, press <Menu> → **Alarms**.
2. Scroll to an empty alarm location and press [OK].
3. Set alarm details.
4. Press <Options> → **Save**.



The auto power-up feature sets the phone to automatically turn on and sound the alarm at the designated time if the phone is turned off.

## Stop an alarm

When the alarm sounds,

- Press <OK> to stop an alarm without snooze.
- Press <OK> to stop an alarm with snooze or press <Snooze> or any key to silence the alarm for the snooze period.

## Deactivate an alarm

1. In Idle mode, press <Menu> → **Alarms**.
2. Scroll to the alarm you want to deactivate and press [OK].
3. Scroll down (if necessary).
4. Scroll left or right to **Off**.
5. Press .

## Use the calculator

---

1. In Idle mode, press <Menu> → **Applications** → **Calculator**.
2. Use the touch panel that corresponds to the calculator display to perform basic mathematical operations.

## Convert currencies or measurements

---

1. In Idle mode, press <Menu> → **Applications** → **Converter** → a conversion type.
2. Enter the currencies or measurements and units in the appropriate fields.

## Set a countdown timer

---

1. In Idle mode, press <Menu> → **Applications** → **Timer**.
2. Press <Set>.
3. Enter hours or minutes to count down and press [OK].
4. Press [▶] or [||] to begin or pause the countdown.
5. When the timer expires, press <OK> to stop the alert.

## Use the stopwatch

---

1. In Idle mode, press <Menu> → **Applications** → **Stopwatch**.
2. Press [▶] or [■] to begin and record lap times.

3. When you are finished, press <Stop>.
4. Press <Reset> to clear recorded times.

## Create a new task

---

1. In Idle mode, press <Menu> → **Applications** → **Task**.
2. Press <Options> → **Create**.
3. Enter the details of the task.
4. Press <Options> → **Save**.

## Create a text memo

---

1. In Idle mode, press <Menu> → **Applications** → **Memo**.
2. Press <Options> → **Create**.
3. Enter your memo text and press [m].

## Manage your calendar

---

Learn to change the calendar view and create events.

### Change the calendar view

1. In Idle mode, press **<Menu>** → **Calendar**.
2. Press **<Options>** → **View by** → **Day** or **Week**.

### Create an event

1. In Idle mode, press **<Menu>** → **Calendar**.
2. Press **<Options>** → **Create** → an event type.
3. Enter the details of the event as required.
4. Press **<Options>** → **Save**.



# troubleshooting

If you are having trouble with your mobile phone, try these troubleshooting procedures before contacting a service professional.

**While using your phone, the following messages may appear:**

Message	Try this to solve the problem:
Insert SIM card	Ensure that the SIM or USIM card is installed correctly.
Phone lock	When the phone lock feature is enabled, you must enter the password you set for the phone.

Message	Try this to solve the problem:
PIN lock	When using the phone for the first time or when the PIN requirement is enabled, you must enter the PIN supplied with the SIM or USIM card. You can disable this feature by using the <b>PIN lock</b> menu.
PUK lock	Your SIM or USIM card is blocked, usually as a result of entering your PIN incorrectly several times. You must enter the PUK supplied by your service provider.

### Your phone displays “Service unavailable” or “Network error.”

- When you are in areas with weak signal or poor reception, you may lose reception. Move to another area and try again.
- You cannot access some options without a subscription. Contact your service provider for more details.

### You enter a number, but the call is not dialed.

- Ensure that you have pressed the Dial key: [📞].
- Ensure that you have accessed the right cellular network.
- Ensure that you have not set call barring for the phone number.

### Another caller cannot reach you.

- Ensure that your phone is turned on.
- Ensure that you have accessed the right cellular network.
- Ensure that you have not set call barring for the phone number.

### Another caller cannot hear you speaking.

- Ensure that you are not covering the built-in microphone.
- Ensure that the microphone is close to your mouth.
- If using a headset, ensure that it is properly connected.

### **The phone beeps and the battery icon flashes.**

Your battery is low. Recharge or replace the battery to continue using the phone.

### **The audio quality of the call is poor.**

- Ensure that you are not blocking the phone's internal antenna.
- When you are in areas with weak signal or poor reception, you may lose reception. Move to another area and try again.

### **You select a contact to call, but the call is not dialed.**

- Ensure that the correct number is stored in the contact list.
- Re-enter and save the number, if necessary.

### **The battery does not charge properly or sometimes the phone turns itself off.**

- The battery terminals may be dirty. Wipe both gold-coloured contacts with a clean, soft cloth and try charging the battery again.
- If the battery is no longer charging completely, dispose of the old battery properly and replace it with a new battery.

### **Your phone is hot to the touch.**

When you use several applications at once, your phone requires more power and may heat up.

This is normal and should not affect your phone's lifespan or performance.